# TECHVISION USA



# **MOBILE APPS**

FREE MOBILE APPS
FOR ANDRIOD AND IOS



# **FREE TECH SUPPORT**

**FAST SERVICE SUPPORT** 

# **Z-PE2EMNSWN-T**

2MP 4/3.5mm Hybrid Thermal PTZ



# **Cybersecurity Recommendations**

#### Mandatory actions to be taken towards cybersecurity

#### 1. Change Passwords and Use Strong Passwords:

The number one reason systems get "hacked" is due to having weak or default passwords. It is recommended to change default passwords immediately and choose a strong password whenever possible. A strong password should be made up of at least 8 characters and a combination of special characters, numbers, and upper and lower case letters.

#### 2. Update Firmware

As is standard procedure in the tech-industry, we recommend keeping NVR, DVR, and thermal imaging camera firmware up-to-date to ensure the system is current with the latest security patches and fixes.

## "Nice to have" recommendations to improve your network security

#### 1. Change Passwords Regularly

Regularly change the credentials to your devices to help ensure that only authorized users are able to access the system.

### 2. Change Default HTTP and TCP Ports:

- Change default HTTP and TCP ports for systems. These are the two ports used to communicate and to view video feeds remotely.
- These ports can be changed to any set of numbers between 1025-65535. Avoiding the default ports reduces the risk of outsiders being able to guess which ports you are using.

#### 3. Enable HTTPS/SSL:

Set up an SSL Certificate to enable HTTPS. This will encrypt all communication between your devices and recorder.

#### 4. Enable IP Filter:

Enabling your IP filter will prevent everyone, except those with specified IP addresses, from accessing the system.

## 5. Change ONVIF Password:

On older IP Camera firmware, the ONVIF password does not change when you change the system's credentials. You will need to either update the camera's firmware to the latest revision or manually change the ONVIF password.

## 6. Forward Only Ports You Need:

- Only forward the HTTP and TCP ports that you need to use. Do not forward a huge range of numbers to the device. Do not DMZ the device's IP address.
- You do not need to forward any ports for individual cameras if they are all connected to a recorder on site; just the NVR is needed.

#### 7. Disable Auto-Login on SmartPSS:

Those using SmartPSS to view their system and on a computer that is used by multiple people should disable auto-login. This adds a layer of security to prevent users without the appropriate credentials from accessing the system.

#### 8. Use a Different Username and Password for SmartPSS:

In the event that your social media, bank, email, etc. account is compromised, you would not want someone collecting those passwords and trying them out on your video surveillance system. Using a different username and password for your security system will make it more difficult for someone to guess their way into your system.

#### 9. Limit Features of Guest Accounts:

If your system is set up for multiple users, ensure that each user only has rights to features and functions they need to use to perform their job.

#### 10. UPnP:

- UPnP will automatically try to forward ports in your router or modem. Normally this would be a good thing. However, if your system automatically forwards the ports and you leave the credentials defaulted, you may end up with unwanted visitors.
- If you manually forwarded the HTTP and TCP ports in your router/modem, this feature should be turned off regardless. Disabling UPnP is recommended when the function is not used in real applications.

#### 11. SNMP:

Disable SNMP if you are not using it. If you are using SNMP, you should do so only temporarily, for tracing and testing purposes only.

#### 12. Multicast:

Multicast is used to share video streams between two recorders. Currently there are no known issues involving Multicast, but if you are not using this feature, deactivation can enhance your network security.

#### 13. Check the Log:

If you suspect that someone has gained unauthorized access to your system, you can check the system log. The system log will show you which IP addresses were used to login to your system and what was accessed.

#### 14. Physically Lock Down the Device:

Ideally, you want to prevent any unauthorized physical access to your system. The best way to achieve this is to install the recorder in a lockbox, locking server rack, or in a room that is behind a lock and key.

#### 15. Connect IP Cameras to the PoE Ports on the Back of an NVR:

Cameras connected to the PoE ports on the back of an NVR are isolated from the outside world and cannot be accessed directly. And the condition above is only for cameras with PoE ports.

#### 16. Isolate NVR and IP Camera Network

The network your NVR and IP camera resides on should not be the same network as your public computer network. This will prevent any visitors or unwanted guests from getting access to the same network the security system needs in order to function properly.

# **Regulatory Information**

## **FCC** Information



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **FCC** conditions:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

#### **FCC** compliance:

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the guide, may cause harmful interference to radio communication.

- For class A device, these limits are designed to provide reasonable protection against harmful interference in a commercial environment. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
- For class B device, these limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

# General

This user's manual (hereinafter referred to as "the Manual") introduces the characteristics, basic configurations, daily operation and maintenance of the thermal camera (hereinafter referred to be "the Device").

Thermal hybrid camera contains all the binocular and trinocular cameras.

# Models

**TPC5** series

# Safety Instructions

The following categorized signal words with defined meaning might appear in the Manual:

Signal Words	Meaning
$\wedge$	Indicates a high potential hazard which, if not avoided, will result in
<b>DANGER</b>	death or serious injury.
$\wedge$	Indicates a medium or low potential hazard which, if not avoided,
<b>WARNING</b>	could result in slight or moderate injury.
^	Indicates a potential risk which, if not avoided, could result in
<b>!</b> \ CAUTION	property damage, data loss, lower performance, or unpredictable
Z-1 CAUTION	result.
TIPS	Provides methods to help you solve a problem or save you time.
NOTE	Provides additional information as the emphasis and supplement to
NUIE	the text.

# **Revision History**

No.	Version	Revision Content	Release Time
1	V1.0.0	First release.	January 13, 2017
2	V1.0.1	"Cybersecurity Recommendations" added.	October 18, 2017
3	V1.0.2	<ul> <li>Content about device initialization added.</li> <li>Interface screenshots updated.</li> <li>Description of reserved spots' input and output added.</li> <li>Content about safety management added.</li> </ul>	February 1, 2017

No.	Version	Revision Content	Release Time
		Function of safety management	
		modified.	
4	V1.0.3	Parameters of camera modified.	July 15, 2018
		Screenshots of interfaces updated.	
		GDPR requirements added.	

# **Privacy Protection Notice**

As the device user or data controller, you might collect personal data of others such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures include but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

### About the Manual

- The Manual is for reference only. If there is inconsistency between the Manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the Manual.
- The Manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the Manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the Manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the Manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

# **Table of Contents**

Cybersecurity Recommendations	I
Regulatory Information	III
Foreword	IV
1 Product Introduction	1
1.1 Overview	1
1.2 Features	1
1.3 Functions	2
2 Basic Settings	7
2.1 Device Initialization	7
2.2 Modifying IP Address	
2.2.1 Modifying One IP Address	8
2.2.2 Modifying Several IP Addresses	9
2.3 Logging in Web Interface	10
2.4 Resetting Password	11
3 Daily Operation	13
3.1 Live	13
3.1.1 Introduction to Live Interface	13
3.1.2 Function Bar	14
3.1.3 Window Adjustment	15
3.1.4 More Functions	18
3.2 PTZ	19
3.2.1 Bullet Camera	19
3.2.2 Dome Camera	23
3.3 Playback	36
3.3.1 Video Playback	36
3.3.2 Picture Playback	41
3.4 Reports	43
3.5 Alarm	44
3.5.1 Introduction to Alarm Types	44
3.5.2 Subscribing Alarm Information	45
4 Setting	47
4.1 Configuring Camera	47
4.1.1 Configuring Lens	47
4.1.2 Configuring Video Parameters	59
4.1.3 Configuring Audio Parameters	68
4.2 Configuring Network	70
4.2.1 Configuring TCP/IP	70
4.2.2 Configuring Port	72
4.2.3 Configuring PPPoE	75
4.2.4 Configuring DDNS	75
4.2.5 Configuring SMTP	76

	4.2.6 Configuring UPnP	78
	4.2.7 Configuring SNMP	78
	4.2.8 Configuring Bonjour	81
	4.2.9 Configuring Multicast	81
	4.2.10 Configuring Auto Registration	82
	4.2.11 Configuring 802.1X	82
	4.2.12 Configuring QoS	
	4.3 Peripheral	84
	4.3.1 Configuring IR Light	84
	4.3.2 Configuring Wiper	84
	4.3.3 Configuring Fan	85
	4.3.4 Configuring Heater	85
	4.4 Smart Thermal	86
	4.4.1 Configuring Smart Plan	86
	4.4.2 Configuring IVS	86
	4.4.3 Configuring Fire Warning	99
	4.4.4 Configuring Hot Trace	101
	4.4.5 Configuring Pic in Pic	104
	4.4.6 Configuring Link Schedule	104
	4.5 Event	105
	4.5.1 Configuring Video Detection	105
	4.5.2 Configuring Audio Detection	110
	4.5.3 Configuring Temperature Alarm	113
	4.5.4 Configuring Alarm	115
	4.5.5 Configuring Abnormality	116
	4.6 Temperature Measuring Settings	120
	4.6.1 Configuring Rules	120
	4.6.2 Configuring Global Setup	124
	4.6.3 Exporting Heat Map	127
	4.7 Storage Management	
	4.7.1 Configuring Schedule	127
	4.7.2 Device Storage	130
	4.7.3 Configuring Record Control Parameters	133
	4.8 System Management	134
	4.8.1 General Settings	
	4.8.2 User Management	136
	4.8.3 Adding ONVIF User	140
	4.8.4 Safety Management	141
5 S	System Maintenance	
	5.1 Maintenance Requirements	
	5.2 Auto Maintenance	
	5.2.1 Rebooting Device	
	5.2.2 Deleting Old Files	
	5.3 Backing Up and Restoring	
	5.3.1 Importing and Exporting	
	5.3.2 Default Settings	
	5.4 Upgrading Firmware	155

5.5 Version Information	155
5.6 System Log	156
5.6.1 Searching System Logs	
5.6.2 Remote View	
5.7 Online User	158
6 Additional Accessing Methods	
6.1 Accessing through NVR	
6.2 Accessing through SmartPSS	

Product Introduction

# 1.1 Overview


Thermal Hybrid Camera is based on requirements such as temperature measurement, fire prevention, safety protection and night vision. This product can help you view videos, videotape an object, test temperature, warn the potential fire, track a cold/hot spot and analyze a special behavior. This product can be used in energy industry, transportation, building, power system, public security, government, enterprises, and other fields (such as science, education, culture and health). You can use the product alone or combine the product with other storage devices to provide solutions for safety/intelligence city, production safety, safety protection of residential buildings and public area safety.

# 1.2 Features

- Safe and stable.
   With a full embedded system, this Device can implement all-day monitoring in a stable
- A long detection distance.
   Wide monitoring range and long detection distance. Used for surveillance of wide range and long distance.
- Strong detection ability.
   With night vision ability, this Device can clearly distinguish different objects in the dark and can tell camouflage and hidden objects.
- Strong anti-interference ability.
   This Device can get rid of interference of light intensity under backlight or strong light environment.
- Adaptive capacity to complex environment.
   Applicable to such environment as smoke, smog, rain, snow, and dust which will block your eyes and is very confusing in colors.

This product can be used in various scenarios and the "small application scenarios" is taken as an example here for detailed description. See Figure 1-1.

Figure 1-1 Application scenarios

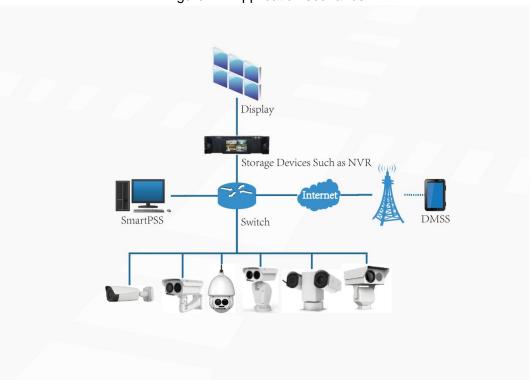

# 1.3 Functions

Live

Table 1-1 Function description

Function	Description
Real-time	You can view both the visible images and thermal images.
preview	You can use thermal images to identify an object, and then use visible
preview	images to view more details of the object.
	For those cameras with PTZ, you can use the PTZ to operate the
	cameras to enlarge the surveillance range and identify details of an
	object.
PTZ operation	You can set a bullet camera's PTZ functions such as preset, tour,
F12 Operation	pattern, assistant and wiper.
	You can set a speed dome's PTZ functions such as preset, tour,
	pattern, horizontal rotation, PTZ speed, free action, boot action
	and timing task.
Voice intercom	For cameras with voice intercom function, you can talk indoors with a
voice intercom	person near the outdoor monitor to facilitate problem solution.
Snapshot	When previewing, you can snapshot an abnormal image for further
Shapshot	check and handling.
Local recording	When previewing, you can record abnormal images for further check
Local recording	and handling.
Real-time	For cameras with temperature measuring, you can check the real-time
reports	temperature data of your monitoring area.

Function	Description
Real-time spot temperature measurement	For cameras with temperature measuring, you can check the real-time temperature data of any spot in your monitoring area.
Laser ranging	For cameras with laser ranging, you can measure the distance between the camera and the object in the middle of the image.
Additional functions	<ul> <li>Switch video bit stream or streaming protocol.</li> <li>The visible image will be adjusted to the relevant location when you zoom in or out the thermal image.</li> <li>Mark information you need in the surveillance image.</li> <li>Check whether there is any alarm output.</li> <li>Magnify part of the surveillance image. Or, scroll the mouse to zoom the whole surveillance image.</li> <li>You can help the camera focus manually on the web interface.</li> <li>Set a smart rule. When the rule is broken and an alarm is triggered, you can track the target manually.</li> <li>Adjust display effect of the surveillance images.</li> <li>Boot up or shut down the intelligent rule display.</li> </ul>

# Playback

Table 1-2 Description of playback function

Function	Description
Videotaping	When playing back a video, you can record the key information of the
manually	previous video for further check and handling.
Planned	After you set a recording plan, the system will record automatically.
recording	After you set a recording plan, the system will record automatically.
Video playbook	Play back a previous video to find some valuable video
Video playback and download	fragments.
and download	Download the valuable video fragments for further judgment.
Picture playback	Play back pictures you have snapshot to find something valuable.
Relay activation	When there is an alarm, the system will videotape automatically.

# Report

You need to follow certain rules such as time sequence to check history data of temperature saved in the device Micro SD card.

# Alarm

- Set prompting mode (sound, for example) based on the alarm type.
- View alarm information.

# **Account Management**

Table 1-3 Function description

-		<u> </u>
	Function	Description
- 1		

Management of	Add, modify or delete an account group.
user group	Manage user permissions based on user groups.
User	Add, modify or delete a user account.
Management	Set the user permissions.
Change	Change was a design account
password	Change users' admin password.

# **External Device Management**

You can manage your camera's external devices such as heater, fill light and wiper.

# Intelligent Thermal Imaging

Table 1-4 Function description

Function Description		
runction		
Intelligent Behavior Analysis	<ul> <li>Both visible channel and thermal channel have intelligent behavior analysis, including tripwire, area intrusion, abandoned object and missing object.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> <li>Supports addition of detection area and exclusion area. You can also filter disturbances and shadows, save the target objects you need, and lower false alarms caused by ripple on the water</li> </ul>	
Fire warning	<ul> <li>surface.</li> <li>For thermal channel, you can set the parameter of misinformation caused by waving water to reduce the misinformation.</li> <li>You can set the tracking mode in the linked tracking function.</li> <li>Both visible channel and thermal channel have fire warning.</li> <li>When there is an alarm, you can implement following operations</li> </ul>	
Tire waiting	at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.	
Cold/hot spot tracking	<ul> <li>Only thermal channel can implement the cold/hot spot tracking operation.</li> <li>Supports real-time display of surveillance scenario's cold spots and hot spots according to different colors.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> </ul>	
Picture in picture	<ul> <li>Only visible channel can implement the picture in picture operation.</li> <li>You can put the thermal image into the visible image.</li> </ul>	

# **Event**

Table 1-5 Function description

Function Description	Function	Description
----------------------	----------	-------------

Function	Description		
	You can implement operation of motion detection and video masking detection.		
Video detection	When there is an alarm, you can implement following operations at		
	the same time such as linkage video recording, alarm output, email		
	delivery, PTZ operation and screenshots.		
	Supports detection of input exception and mutation of acoustic		
	intensity.		
Audio detection	When there is an alarm, you can implement following operations at		
	the same time such as linkage video recording, alarm output, email		
	delivery, PTZ operation and screenshots.		
	When temperature satisfies the alarm conditions of temperature		
Temperature	testing rules, an alarm is triggered.		
alarm	When there is an alarm, you can implement following operations at		
alaitti	the same time such as linkage video recording, alarm output, email		
	delivery, PTZ operation and screenshots.		
	The alarm is triggered when there is an alarm from external device.		
Alarm settings	When there is an alarm, you can implement following operations at		
Alaim settings	the same time such as linkage video recording, alarm output, email		
	delivery, PTZ operation and screenshots.		
	Supports detection of SD card or network abnormality and illegal		
	access.		
	When there is SD card abnormality or illegal access, you can		
Abnormality	implement following operations at the same time such as linkage		
Abhormality	video alarm output, and email delivery.		
	When there is an alarm of network abnormality, you can implement		
	following operations at the same time such as linkage video		
	recording, and alarm output.		

# Temperature Measuring Settings

This function is available on select model.

Table 1-6 Function description

Function	Description	
	Supports measuring spot, line, polygon and ellipse's average	
Tomporatura	temperature, maximum temperature and minimum temperature.	
Temperature	Supports outputting alarm based on different conditions.	
measuring rules	Supports setting different alarm output conditions to different objects	
	that need to be measured.	
	Supports temperature contrast of different objects that needs to be	
Tomporatura	measured.	
Temperature contrast	Supports outputting alarm based on different conditions.	
Contrast	Supports setting different alarm output conditions to different	
	temperature contrast rules.	
Hoot man	Supports outputting real-time heat map information. Then, you can do the	
Heat map	further analysis through the heat map tools.	

Function	Description	
Additional	Supports enabling or closing temperature testing rules.	
functions	Supports enabling or closing isotherm.	
TUTICUOTIS	Supports enabling or closing color code articles.	

# 2.1 Device Initialization

When using the Device for the first time or after the Device is restored to factory settings, you need to initialize the Device. To initialize the Device, you can log in the web client or use the ConfigTool. Web client is taken as an example for detailed description.



- The Device cannot be used if not initialized.
- To secure your admin account, please keep the password properly and change it regularly.
- Device initialization can be implemented only when the device IP address (192.168.1.108 by default) and the PC IP address are in the same network segment.

Step 1 Open browser, enter camera default IP address in the address bar, and then press Enter.



The default IP is 192.168.1.108.

After logging in the device, the Device Initialization interface is displayed. See Figure 2-1.

**Device Initialization** Username admin Password The minimum pass phrase length is 8 characters Confirm Password Use a password that has 8 to 32 characters, it can be a combination of letter(s). number(s) and symbol(s) with at least two kinds of them.(please do not use special symbols like '";: &) ▼ Email Address To reset password, please input properly or update in time. Save

Figure 2-1 Device initialization

Step 1 Set the login password of admin user and reserve your phone number.



- The phone number you have reserved is used for password reset. And this function is set by default. When you forget the password, you need to scan the QR code to reset the password. And the phone number you have reserved will be used to receive the safety code. Then, by the safety code, you can reset the password of admin user.
- If you do not set a number for reservation or you need to change the reserved number, you can follow the path **Setting > System Management > User**

Management > User Management > User to implement the settings. See "2.4" Resetting Password" for more details.

Step 2 Click Save to complete initialization.

After you have initialized the Device, if the **Online Upgrading** is displayed, please operate according to the interface prompts.

# 2.2 Modifying IP Address

Default IP address of all devices is 192.168.1.108. When you use the Device for the first time or there is change of the network, modify IP address of your device according to network planning.

You can modify one or several IP addresses through ConfigTool. You can also log in the web client to modify IP addresses.

# 2.2.1 Modifying One IP Address

When there are only a few devices or the login passwords of devices are different, you can modify only one IP address at one time. Logging in WEB client to modify IP addresses is taken as an example for detailed description.

Step 1 Log in web interface from the IE browser.




- The default IP is 192.168.1.108.
- The default user is admin. The password is the one that was configured during initial settings.

#### Step 2 Select Setting > Network > TCP/IP.

The TCP/IP interface is displayed. See Figure 2-2.

Figure 2-2 TCP/IP interface

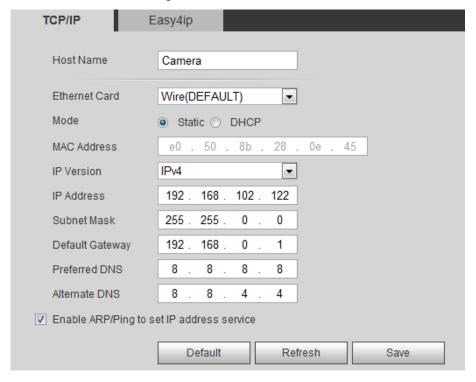

Step 3 Configure relevant information of IP address and then click Save.

# 2.2.2 Modifying Several IP Addresses

When there are several devices or the login passwords of devices are the same, you can modify several IP address at the same time through the ConfigTool.

# Preparation

- You have obtained the installation package of ConfigTool. To obtain the installation package, you can consult technical support staffs.
- You have achieved network communication between PC (which is with ConfigTool) and the Device.

#### Procedure



The Modify IP interface is displayed.

Step 2 Click Search Settings.

The dialog box named by "settings" is displayed.

Step 3 Set the network segment of the Device, admin and password. Then click **OK**. After the search, the system displays devices that have been searched.

Default user name and password are both admin.

<u>Step 4</u> Select devices whose IP address needs to be modified and click the icon indicating that you can modify several IP addresses at one time.

The dialog box of **Modify IP Address** is displayed. See Figure 2-3.

Figure 2-3 Modifying IP address



- Step 5 Select the mode of IP address based on the actuality.
  - DHCP mode: When there is a DHCP server in the network, set the Mode as DHCP and the Device obtains IP addresses from the DHCP server automatically.
  - Manual mode: Set Mode as Static and enter Starting IP, Subnet Mask and Gateway. Then, IP addresses of devices are incrementally modified from the start IP address.



Select the check box of **The Same IP** and set the IP addresses of the Devices you have picked up as the same one.

Step 6 Click **OK** to finish configuration.

# 2.3 Logging in Web Interface

After you have modified the IP addresses, you can log in the WEB interface of the Device through a browser to operate, configure and maintain the Device.

# **Background Information**


To log in the Device in a smooth way, you need to make sure that the PC connected to the Device satisfies the following requirements. See Table 2-1.


PC items **Recommended configuration** Operation system ≥ Windows 7 CPU ≥ Intel core i3 ≥ Intel HD Graphics Graphics card Storage ≥ 2GB ≥ 1024×768 Resolution Display Internet Explorer 9/10/11 Browser

Table 2-1 Recommended PC configuration

# **Procedure**

Step 1 Open browser, enter IP address in the address bar, and then press Enter. The **login** interface is displayed. See Figure 2-4.

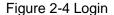

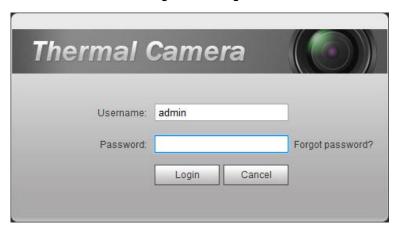

Step 2 Enter username and password, and click Login.

After the successful login, the Live interface is displayed. See Figure 2-5.



- The default user is admin. The password is the one that was configured during initial settings.
- It will prompt you to install plug-in for the first system login. Please download and install plug-in according to the prompt.

Functions of different devices might vary, and the actual product shall prevail. Figure 2-5 Live Interface





Click Log out on the upper right corner to exit the interface.


# 2.4 Resetting Password

If you forget the password, you can use the reserved E-mail address to achieve password resetting.

Step 1 Open IE browser and type the camera's IP address. Then press Enter.

The Thermal Camera interface is displayed. See Figure 2-6.


Figure 2-6 Logging in the Device

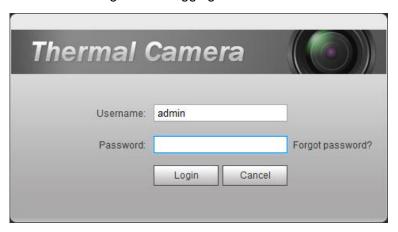

Step 2 Click Forgot Password?

The Reset the password (1/2) interface is displayed. See Figure 2-7.

Figure 2-7 Reset the password(1/2)

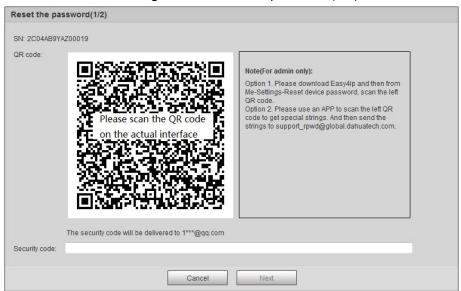

## Step 3 Reset the password.

Scan the QR code, and the security code will be sent to the email address you have already fulfilled. Type the security code then.




- Reset the password in time when you receive the security code, because the security code will be invalid within 24 hours.
- If you get security codes twice but do not use them, when you get the security code for the third time, the system will prompt failure. To solve this problem, you need to restore your device to default settings or wait 24 hours to get a new one.

#### Step 4 Click Next.

The Reset the password (2/2) interface is displayed. See Figure 2-8.

Figure 2-8 Resetting the password(2/2)

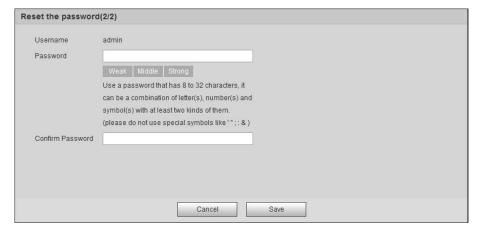

#### Step 5 Fill in a new password and confirm it.

The password is made up of characters for 8–32 digits and the password must contain two of the three forms (number, letter, and the common characters. "", "", ";", ":", "&"are not included.) You should obey the prompt of the password's security level and set a password with high security level.

Step 6 Click **Save** to finish password resetting.

The login interface is displayed.

# **3.1 Live**

On the Live interface, you can do operations to the real-time surveillance images such as viewing, taking snapshots and recording videos.

- Functions of different devices might vary, and the actual product shall prevail.
- Image channel with a box around it is the one that has been chosen. All your operation is valid only to this channel.
- Double-click an image channel and the image channel is displayed in a full video display area. Double-click the image channel again and the channel will be displayed in a full screen. Then, right-click the full-screen image and the image returns to its previous state.

# 3.1.1 Introduction to Live Interface

Click the **Live** tab, and the **Live** interface is displayed. See Figure 3-1. In the live interface, there are five function bars. See Table 3-1.

Thermal Camera

Live Playbook Report Setting Alarm Logged

2019-01-07 10:52:26 Mon

2019-01-07 10:52:26 Mon

FET Vision

Visual

Thermal

Setting Alarm Logged

Alarm Logg

Figure 3-1 The live interface

Table 3-1 Description of function bar

	No.	Name	Description
1 System menu	System menu	Click each function tab in the system menu to go to the	
	System menu	corresponding interface.	

No.	Name	Description	
2	Encode bar	<ul> <li>Select bit stream type and streaming protocol when previewing a video.</li> <li>Main Stream: It has large bit stream value and image with high resolution, but also requires large bandwidth. This option is normally used for storage and surveillance.</li> <li>Sub Stream: It has small bit stream value and smooth image, and requires little bandwidth. This option is normally used to replace main stream when bandwidth is not enough.</li> <li>Streaming protocol: A network transmission protocol, supports TCP, UDP and Multicast.</li> </ul>	
3	Live view	For functions and operations of live view bar, see "3.1.2 Function	
0	function bar	Bar."	
4	PTZ control	For details of PTZ control, see "3.2 PTZ."	
	Adjustment	Supports adjusting clarity of video images, displaying intelligent rules,	
5	bar of video	zooming with focusing at the same time, checking real-time reports.	
	window	See "3.1.3 Window Adjustment" for details.	

# 3.1.2 Function Bar

See Figure 3-2 and Table 3-2 for more details.



Functions of different devices might vary, and the actual product shall prevail.

Figure 3-2 Live view function



Table 3-2 Live view function description

No.	Name	Description	
1	Regional	Click this icon, and click or draw a box on the video image. Then the	
ı	focus	camera will implement auto focus.	
2	Mark pen	Click to mark a target on the video image and the default pen color is red.  Click to switch the pen color from red, green and blue.  Marks are not carried in video recordings.	
3	Relay-out	Shows alarm output state. Click the icon to force enable or force disable alarm output.	
4	Fixed	Click this icon. Then the visible image adjusts its values of zoom and	
4	Focus	focus in accordance with values of the thermal image.	

No.	Name	Description		
5	Zoom in	<ul> <li>You can zoom in video image with two operations:</li> <li>Click the icon to enlarge part of visible light or thermal images. Right-click to resume.</li> <li>Click the icon to zoom a video image by scrolling the mouse.</li> </ul>		
6	Snapshot	Click the icon to capture a live image and save it under the path you have set.  To check or modify the storage path, see "4.7.2.1 Configuring Storage Path."		
7	Single-lens video recording	Select visible image or thermal image. Then click this icon to start video recording.  To check or modify the storage path, see "4.7.2.1 Configuring Storage Path."		
8	Double-lens video recording	If you want to record both visible image and thermal image at the same time, click this icon. And, when you play the videos, videos of both visible image and thermal image will be played.		
9	Only thermal image supports easy focus.  Click this icon. Then you can see the two parameters of AF AF Max.  • AF Peak: The live image clarity value.  • AF Max: The best image clarity value.  The closer AF Peak is to AF Max, the better the focusing eff focus will be disabled after five minutes.			
9	Audio  Click the icon to enable or disable audio output.  Audio  This function is available on select model.			
Click this icon to enable or disable the interce				
11 Help Click to open help document.		Click to open help document.		

# 3.1.3 Window Adjustment



Functions of different devices might vary, and the actual product shall prevail.

Figure 3-3 Window adjustment (dome camera and PTZ camera)

🍊 🕂。 PTZ 🖽 dir

Figure 3-4 Window adjustment (bullet camera)



# 3.1.3.1 Image Adjustment

Adjust brightness, contrast, hue and saturation of video images on your web.

For detailed operations, see "4.1.1 Configuring Lens."

Click and the **Image Adjustment** interface is displayed at the right side of live interface. See Figure 3-5.

Figure 3-5 Image adjustment interface

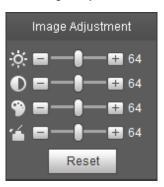


Table 3-3 Image adjustment configuration

Icon	Function	Description
	Brightness	Adjusts the overall image brightness, change the value
,o.		when the image is too bright or too dark. The bright and
		dark areas will have equal changes.
	Contrast	Change the value when the image brightness is proper
0		but contrast is not enough.
9	Hue	Makes the color deeper or lighter. The default value is
		made by the light sensor and is recommended.
<b>4</b>	Saturation	Adjusts color depth. This value doesn't change the
		overall image brightness.
Reset	Reset	Click the icon to reset brightness, contrast, hue and
Reset		saturation to their default values.

# 3.1.3.2 Display of Smart Rules

You can control whether rules information is displayed on surveillance images. It is set by default that this function is in opening state.

Click to select **Enable**, and then select **Enable** to display smart rules and detection box; select **Disable** to stop.

# 3.1.3.3 Zoom and Focus



Zooming and focusing functions are only available on motorized vari-focal devices.

Adjust focal length of your lens to zoom in or out surveillance images; adjust optical afterfocus of your lens to improve clarity level of video images.

Click , and the zooming and focusing interface is displayed at the right side of live interface.

- Select the visible channel and you can zoom, focus and change the aperture.
- Select the thermal channel and you can zoom and focus.

Table 3-4 Zoom and focus description

Parameters	Description	
Variable focal length	Click or end, and adjust the optical back focal length of thermal tunnel to make images more clear.	
Auto focus	Auto focus.	

# 3.1.3.4 Optical Axis Calibration

Used only for calibrating the device lens when the Device is being debugged in the factory. You do not need to operate this function.

# 3.1.3.5 Real-time Reports

Within the set time, record the average temperature of the presets, lines and area that you have selected.



Only Devices with temperature-measuring function support this function, and the actual product shall prevail.

# Preparation

You have set the temperature measuring rules. For detailed operation, see "4.6.1.1 Configuring Temperature Measuring Rules."

## **Procedure**

Click and the real-time reports interface is displayed. Select the temperature-measuring program and set the time circle. Then the real-time temperature change is displayed. See Figure 3-6.

Figure 3-6 Temperature recording area



# 3.1.4 More Functions

# 3.1.4.1 Real-time Spot Temperature Measuring



Only devices with temperature-measuring function support this function, and the actual product shall prevail.

Move the pointer to any position of the video image and click. Then the real-time temperature of this spot is displayed. See Figure 3-7.

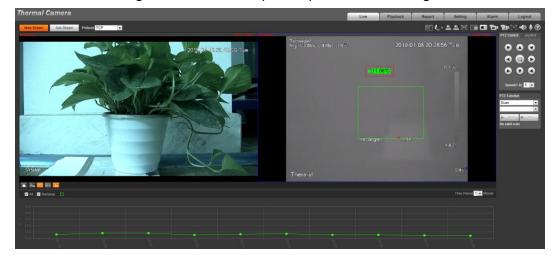


Figure 3-7 Real-time spot temperature measuring

# 3.1.4.2 Laser Ranging



- Only device with laser ranging can implement this operation and the actual interface shall prevail
- Laser ranging does not perform well to those objects (such as glass and marble) with strong reflection ability. During laser ranging, select those objects with rough surface as your target.



Mind the distance during laser ranging. Less than 50 m will result in a damaged laser.

Click Start Ranging, and the camera starts to measure the distance from itself to the object in the middle of the image (as indicated with the red cross sign).

# **3.2 PTZ**

## 3.2.1 Bullet Camera



PTZ setting of bullet camera is used for controlling external PTZ device. Connect the Device to external PTZ through RS-485 port before using this function.

# 3.2.1.1 Configuring Protocol

If you want to control the external PTZ by your bullet camera, you need to set the PTZ protocol first and then connect PTZ to your camera.

Step 1 Select Setting > System Management > PTZ Setting.

The PTZ Settings interface is displayed. See Figure 3-8.

**PTZ Settings** Protocol **PELCOD** • Address Baud Rate 9600 • Data Bit • Stop Bit • Parity None • Default Refresh Save

Figure 3-8 PTZ settings

Step 2 Configure PTZ parameters. For detailed description, see Table 3-5.

Table 3-5 Parameter description

Parameter	Description	
Protocol	Matches with the PTZ protocol.	
Address	Enter the corresponding device address.	
Address	The entered address must be the same with the address configured on the	
	PTZ; otherwise the PTZ cannot be controlled from the bullet camera.	
Baud rate	Configure device baud rate.	
Data bit	The default is "8".	
Stop bit	op bit The default is "1".	
Parity The default is "none".		

# 3.2.1.2 Configuring PTZ Functions

- The protocol setting has been completed. For detailed operations about protocol setting, see "3.2.1.1 Configuring Protocol".
- For images representing the effect of external PTZ, you need to preview on the preview images of the external PTZ, not on the preview image of the bullet camera.
- The following functions are available only when your bullet camera is connected to the external PTZ.

### 3.2.1.2.1 Configuring Scan

The camera scans on the horizontal direction between the left and right borders.

Step 1 Click the PTZ tab and select Scan in the PTZ function setting list.

Figure 3-9 Linear sweep



<u>Step 2</u> Type the scan number and set the left and right border.

- Through the direction button, move the camera to the left border that you want and click Set Left.
- 2) Through the direction button, move the camera to the right border that you want and click **Set Right**.

Step 3 Click Start to start scan; click Stop to end it.

#### 3.2.1.2.2 Configuring Presets

By configuring presets, the camera can store parameters such as PTZ's horizontal angle, inclination angle, and the lens focal length under the current situation to the Device. If you need those parameters later, you can quickly adopt them and adjust the PTZ and camera to those locations.

Step 1 Click the PTZ tab and select Preset in the PTZ Function setting list.

Figure 3-10 Preset



- <u>Step 2</u> Through the direction button, move the camera to the surveillance direction that you need.
- Step 3 In the preset box, type the preset number.

Range of the preset number is limited by the PTZ protocol.

- Step 4 Click **Add** to add a preset.
- <u>Step 5</u> Enter a preset number and click **Go to**. The camera turns to the corresponding position.

#### 3.2.1.2.3 Configuring Tour

By configuring tour, you can put the presets to the auto tour to make the camera move back and forward quickly and automatically according to the presets.

# Preparation

You have set several presets.

#### Procedure

- Step 1 Click the PTZ tab and select Tour in the PTZ Function setting list.
- Step 2 In the tour typing box, type the tour number.

Range of the preset number is limited by the PTZ protocol.

- Step 3 In the preset typing box, type the preset number.
- Step 4 Click Add Preset to add a preset in the tour.

Repeat step 3 to step 4 to add several presets in the tour.

Type a preset number and click **Delete Preset** to delete preset it in the tour group.

Step 5 Type a tour number. Click **Start** to start touring; click **Stop** to end it.

#### 3.2.1.2.4 Configuring Pattern

By configuring pattern, you can record continuously your operation to the PTZ and record the moving pattern of the camera's lens. The Device will make the location where the recording begins as the beginning point, and move back and forward automatically following the preset movement pattern.

Step 1 Click the PTZ tab and select Pattern in the PTZ Function setting list.

In the pattern typing box, type a pattern number.




Range of the pattern number is limited by the PTZ protocol.

- Step 2 Click Start Rec.
- <u>Step 3</u> By operating the PTZ control panel, you can control the camera's surveillance direction, zoom images or change the focal length.
- Step 4 Click **Stop Rec** to complete setting of the pattern.
- Step 5 Select a pattern number. Click **Start** to start pattern; click **Stop** to end it.

#### 3.2.1.2.5 Turing on Wiper

 $\underline{\text{Step 1}}$  Click the **PTZ** tab and select **Wiper** in the **PTZ Function** setting list. See Figure 3-11.

Figure 3-11 Wiper

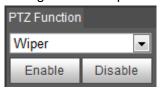

Step 2 Click **Enable** to enable the wiper; click **Disable** to disable it.

# 3.2.1.3 Operating PTZ



- The corresponding protocol setting and function setting have been completed. See "3.2.1.1 Configuring Protocol" and "3.2.1.2 Configuring PTZ Functions" for more details.
- For images representing the effect of external PTZ, you need to preview on the preview images of the external PTZ, not on the preview image of the bullet camera.

Click the **PTZ** tab and the PTZ control panel is displayed on the right side of the PTZ interface. See Figure 3-12.

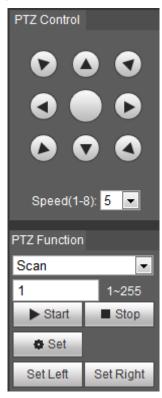


Figure 3-12 PTZ control panel

Table 3-6 Parameter description

No.	Function	Description
1	Direction button	Eight directions are contained: up, down, left, right, upper left,
1		upper right, lower left, and lower right.

2	Speed	Controls the movement speed. The bigger the value is, the faster the movement will be.  With this function, you can also change the speed of adjusting the PTZ direction, zooming, changing the focal length and adjusting the aperture.
3	Zoom, focus and iris	Click and the zoom, focus and iris' value becomes bigger; click and the zoom, focus and iris' value becomes smaller.
4	PTZ function	For detailed operations of PTZ, see "3.2.1.2 Configuring PTZ Functions."

# 3.2.1.4 Configuring Preset Backup

You can export presets you have set to back them up. When you need those presets, you can import them to your device and restore them.




If you want to export or import presets, you have to obey the following steps.

Step 1 Select Setting > PTZ > Preset Backup.

The **Preset Backup** interface is displayed.

Figure 3-13 Preset backup

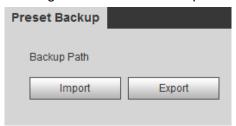

Step 2 Export or import presets.

- Click Export to export presets for backup.
- Click Import to import presets you have already backed up

# 3.2.2 Dome Camera


# 3.2.2.1 Configuring Protocol

For external devices (such as network keyboard, NVR), if you want to use them to control the dome camera or its PTZ, you need to set the protocol to connect the external devices to the dome camera or its PTZ first.

Step 1 Select **Setting > PTZ > Protocol**.

The **Network PTZ** interface is displayed. See Figure 3-14.

Figure 3-14 Network PTZ setting

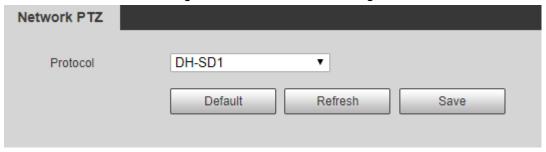

Step 2 Select the protocol that is matched with the camera.

Step 3 Click Save to finish configuration.

# 3.2.2.2 Configuring PTZ Functions

Select **Setting > PTZ > Function** and the **Function** interface is displayed.

It's set by default that the thermal image is displayed. In the thermal image, you can click



to switch the image to visible image. And, in the visible image, you can click La to switch the image to thermal image.

#### 3.2.2.2.1 Configuring Preset

By configuring presets, the camera can store parameters such as PTZ's horizontal angle, inclination angle, and the lens focal length under the current situation to the Device. If you need those parameters later, you can quickly adopt them and adjust the PTZ and camera to those locations.

#### Step 1 Select **Setting > PTZ > Function**.

The **Preset** interface is displayed. See Figure 3-15.

Figure 3-15 The preset interface



#### Step 2 Configure preset.


1) Click Add to add a new preset.

- 2) Operate the PTZ control panel to move the camera lens to a specific direction you need.
- 3) Double-click the preset's Number to modify it. Some presets are already endowed with fixed and special functions by this camera producer. See Table 3-7. If you want to use those functions, you can set these presets' No. to be the Number.

Table 3-7 Function description of the very presets

Preset No.	Description
0.4	Enable this preset. Then the camera will automatically turn off the fill
21	light under color image and turn it on under black/white image.
67	Enable this preset and the laser current will be increased.
68	Enable this preset and the laser current will be decreased.
69	Enable this preset and the camera will automatically switch the image
บฮ	from color mode to black/white mode under low lighting condition.

4) Double-click the preset's **Preset Title** to modify it. Then click to finish configuration.

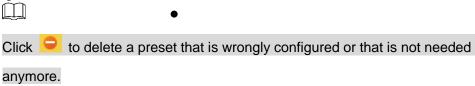

• Click **Delete** to delete all the presets you have added.

#### 3.2.2.2.2 Configuring Tour

By configuring tour, you can put the presets to the auto tour group to make the camera move back and forward quickly and automatically according to the presets.

# Preparation

You have set several presets.

#### Procedure

<u>Step 1</u> Select **Setting > PTZ > Function > Tour**.


The **Tour** interface is displayed. See Figure 3-16.

Figure 3-16 The tour interface



#### Step 2 Configure tour.

- 1) Click Add to add a tour.
- Click Add to add a preset.
   Click repeatedly to add several presets.
- 3) Double-click to select a preset. And double-click to configure the lasting time.
- 4) Double-click the touring name that you have added to modify it. Click **Save** to finish configuration.

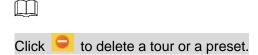

Step 3 Select a tour and click **Start** to start camera tour.Click **Stop** to stop the tour.


#### 3.2.2.2.3 Configuring Scan

You can configure an arc and horizontal area for your camera PTZ's rotation. Then by giving your PTZ a fixed rotation speed, you can get your camera scan from left to right (and from right to left) at a fixed speed.

Step 1 Select **Setting > PTZ > Function > Scan**.

The **Scan** interface is displayed. See Figure 3-17.

Figure 3-17 The scan interface

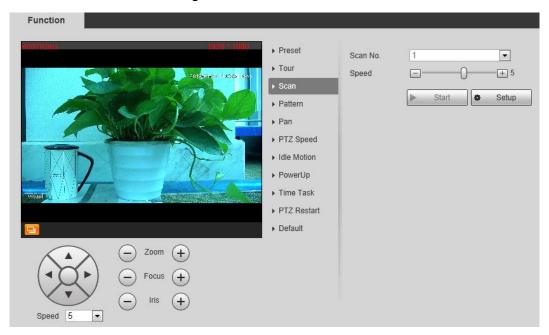

#### Step 2 Configure scan.

- 1) Select a **Scan No.** and set its **Speed**.
- Click Setup.
   Buttons of Set Left Limit and Set Right Limit are displayed.
- Operate the PTZ control panel and move the camera to a left border you want and click Set Left Limit; move the camera to a right border you want and click Set Right Limit.

Step 3 Select a **Scan No.** and click **Start** to start scan. Click **Stop** to stop the scan.


## 3.2.2.2.4 Configuring Pattern

The function of "pattern" can record continuously the user's manual operation to the PTZ and record the moving tracking of the camera's lens. The camera will make the location where the recording begins as the beginning point, and move back and forward automatically following the preset movement pattern.

Step 1 Select **Setting > PTZ > Function > Pattern**.

The **Pattern** interface is displayed. See Figure 3-18.

Figure 3-18 The pattern interface

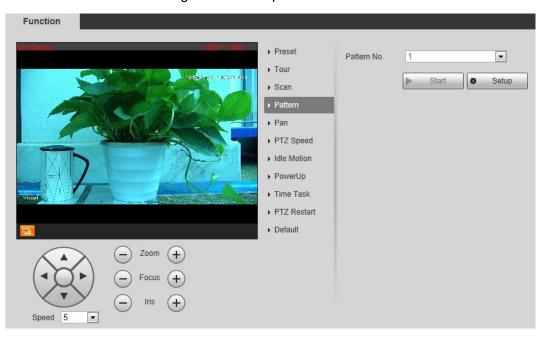

### Step 2 Configure pattern.

- 1) Select a Pattern No.
- Click Setup.
   Buttons of Start Rec and Stop Rec are displayed.
- 3) Click Start Rec.
- 4) Operate the PTZ control panel and adjust you camera's direction, zoom and focus.
- 5) Click **Stop Rec** to finish configuration.

Step 3 Select a Pattern No. and click Start to start pattern.Click Stop to stop the pattern.

## 3.2.2.2.5 Configuring Pan

You can enable this function and get your camera PTZ rotate horizontally for 360° at a fixed speed all the time.

### Step 1 Select **Setting > PTZ > Function > Pan**.

The Pan interface is displayed. See Figure 3-19.

Figure 3-19 The pan interface



Step 2 Set a Pan Speed. Click Start to start pan.

Click **Stop** to stop the pan.


#### 3.2.2.2.6 Configuring PTZ Speed

PTZ speed is determined by two factors—firstly and basically, the speed level (low, middle and high, marked by ① in Figure 3-20); secondly, the control panel's speed value (1, 2, 3...8 marked by ② in Figure 3-20). If you select **Low** as the **PTZ Speed** ①, then according to the maximum **Low** value, the **Speed**② will be divided into 8 parts, and it's the same for you to select **Middle** or **High** as the **PTZ Speed** ①.

Step 1 Select Setting > PTZ > Function > PTZ Speed.

The PTZ Speed interface is displayed. See Figure 3-20.



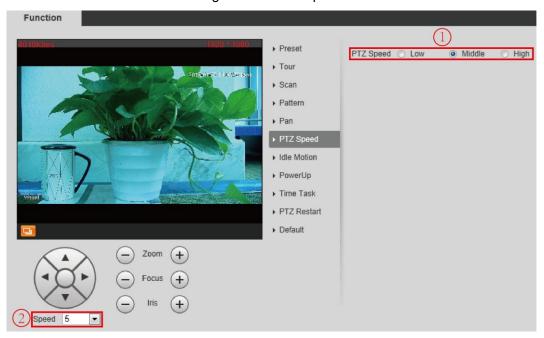

Step 2 Select from Low, Middle and High. The configuration takes effect immediately.

### 3.2.2.2.7 Configuring Idle Motion

Enable this function. And when there is a time period when PTZ does not receive any instructions, motions you have already set will be implemented.

# Preparation

You have configured preset, tour, scan and pattern before configuring idle motion.

## **Procedure**

Step 1 Select **Setting > PTZ > Function > Idle Motion**.

The Idle Motion interface is displayed. See Figure 3-21.

Figure 3-21 The idle motion interface



### Step 2 Configure idle motion.

- 1) Select the **Enable** check box to enable this function.
- 2) Select an idle motion and set idle time.



After you have set a value of idle time, when the time when you do not operate the PTZ is longer than that value, the idle motion will be implemented immediately.

3) Click **Save** to finish configuration.

### 3.2.2.2.8 Configuring Power Up

If you want the PTZ to implement certain actions after the camera is powered, configure this function.

Step 1 Select **Setting > PTZ > Function > Power Up**.

The **Power Up** interface is displayed. See Figure 3-22.

Figure 3-22 Power up



- Step 2 Select the **Enable** check box.
- Step 3 Select the Power Up actions.



Select **Auto** and the PTZ will continue to implement the action before the power is off.

Step 4 Click **Save** to finish configuration.

## 3.2.2.2.9 Configuring Time Task

You can configure a time task and let camera implement certain actions within the period you have set.

# Preparation


You have configured preset, tour, scan and pattern before configuring time task.

## Procedure

Step 1 Select Setting > PTZ > Function > Time Task.

The Time Task interface is displayed. See Figure 3-23.

Figure 3-23 The time task interface

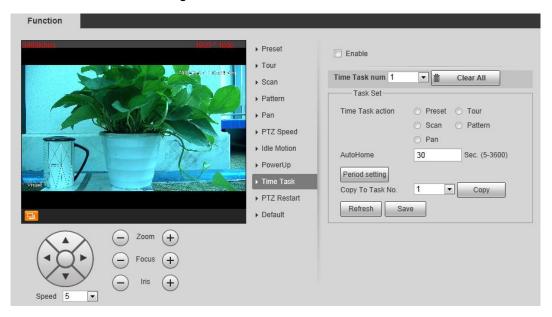

### Step 2 Configure time task.

- 1) Select the **Enable** check box to enable this function.
- 2) Select a Time Task Num.
- 3) Select a Time Task Action from Preset, Tour, Scan and Pattern.



When you set **Preset** as **Time Task Action**, the **Action Number** selection box is displayed. You can select the action number based on your needs.

4) In the **Auto Home** selection box, set the time for the camera to return to its previous condition.



Auto home time: Time for your camera to return to its previous condition and continue the time task when the time task is interrupted by human operation.

- 5) Click **Period Setting** to set the detailed period for a time task.
- 6) Click Save to finish configuration.

## Step 3 (Optional) Copy a time task.

Copy task information you have configured to other tasks.

- 1) Select a **Time Task Num** you have already configured.
- 2) In Copy To Task No., select a task number to be configured.
- 3) Click Copy.
- Click Save to finish task copy.

#### 3.2.2.2.10 Restarting PTZ Manually

#### Step 1 Select Setting > PTZ > Function > PTZ Restart.

The PTZ Restart interface is displayed. See Figure 3-24.

Figure 3-24 The PTZ restart interface



Step 2 Click PTZ Restart. PTZ restarts.

# 3.2.2.2.11 Restoring PTZ to the Default Settings



The operations below will delete all the PTZ settings you have configured. Please be cautious. Step 1 Select Setting > PTZ > Function > Default.

The **Default** interface is displayed. See Figure 3-25.

Function

Preset

Tour

Scan

Pattern

Pan

PTZ Speed

Idle Motion

PowerUp

Time Task

PTZ Restart

Default

Figure 3-25 The default interface

Step 2 Click Default.

Speed 5

All your PTZ settings are restored to the default ones.

Focus

# 3.2.2.3 Operating PTZ



The corresponding protocol settings and function settings have been completed.

Figure 3-26 PTZ control panel



Table 3-8 Parameter description

No.	Function	Description
1	Direction button	Eight directions are contained: up, down, left, right, upper left,
'	Direction button	upper right, lower left, and lower right.
		Controls the movement speed. The bigger the value is, the faster
		the movement will be.
2	Speed	With this function, you can also change the speed of adjusting
		the PTZ direction, zooming, changing the focal length and
		adjusting the aperture.
	Zoom, focus and iris	Click and the zoom, focus and iris' value becomes
3		bigger; click and the zoom, focus and iris' value becomes
		smaller.
4	PTZ function	For detailed operations of PTZ, see "3.2.1.2 Configuring PTZ
4		Functions."

# 3.2.2.4 Configuring Preset Backup

You can export presets you have set to back them up. When you need those presets, you can import them to your device and restore them.




If you want to export or import presets, you have to obey the following steps.

### Step 1 Select Setting > PTZ > Preset Backup.

The Preset Backup interface is displayed.

Figure 3-27 Preset backup

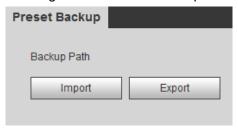

Step 2 Export or import presets.

- Click **Export** to export presets for backup.
- Click Import to import presets you have already backed up

# 3.3 Playback


Playback of both videos and pictures is supported.



Functions of different devices might vary, and the actual product shall prevail.

Click the **Playback** tab, and the **Playback** interface is displayed. See Figure 3-28.

Figure 3-28 Playback

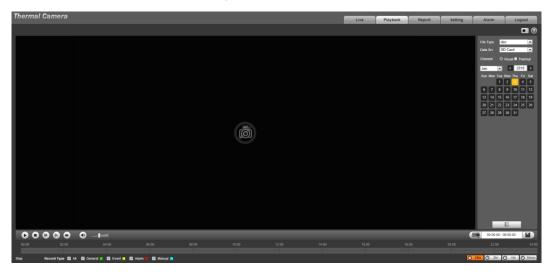

# 3.3.1 Video Playback

# 3.3.1.1 Interface Layout

Select **dav** in the **File Type** list, and the video playback interface is displayed. See Figure 3-29. On the **Playback** interface, there are seven function bars. See Table 3-9.

Figure 3-29 Video playback

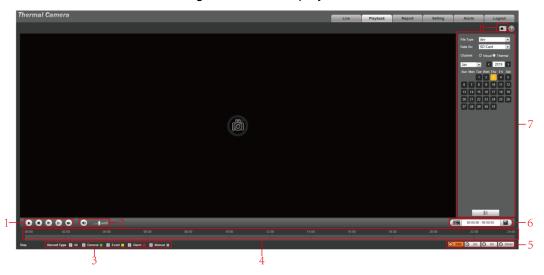


Table 3-9 Function bar description

No.	Functions	Description
1	Playback	For detailed information about control buttons, see "3.3.1.2
!	control bar	Operate Control Bar."
2	Volume adjustment	<ul> <li>Controls playback volume.</li> <li>muted.</li> <li>muted, and the volume can be adjusted.</li> </ul>
3	Record type	Record type includes <b>All</b> , <b>General</b> , <b>Event</b> , <b>Alarm</b> , and <b>Manual</b> . You can select according to your actual needs.
4	Time bar	<ul> <li>Displays the record type and the time period.</li> <li>Click any point in the colored area, and the playback starts from this moment.</li> <li>Each color represents a certain video type, and the corresponding relationship is indicated in the record type selection area.</li> </ul>
5	Time bar unit	There are four formats: O24hr, O2hr O1hr, and O30min. Take O24hr for an example, the whole time bar has 24 hours.
6	Video clip	Clip and save certain video section. For detailed operations, see "3.3.1.4 Clipping Recorded Video."
7	Playback file list	You can select file type, data source and record date.
8	Snapshot	Click the icon to capture a live image and save it under the path you have set.

# 3.3.1.2 Operate Control Bar

See Table 3-10 for details.

Table 3-10 Playback control bar

Icons	Functions	Description
0	Play	Click this icon to play video.
0	Stop	Click this icon to stop playback.
0	Play by Frame	Click this icon to play the next frame.
		You need to pause the playback before using play by frame.
	Slow playback	Click this icon to slow down the playback.
•	Fast playback	Click this icon to speed up the playback.

# 3.3.1.3 Playing Back Videos

There are differences in operation of video playback according to the differences of data sources. Data come from SD card or your local storage.

## 3.3.1.3.1 Playing Back Videos in SD Card

 $\underline{\text{Step 1}} \ \ \text{Select record type in the Data Src bar. See Figure 3-30}.$ 


Figure 3-30 Selecting record type



Step 2 In the **File Type** box, select .dav, and in the **Data Src** box, select **SD Card**. See Figure 3-31.

File type contains dav and jpg. "Dav" represents video playback and "jpg" represents picture playback.

Figure 3-31 Setting files playback

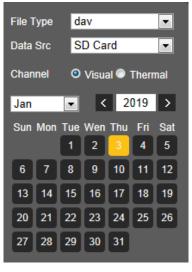

<u>Step 3</u> Those dates with blue color indicate there are recorded videos in those days. Select a date with recorded video inside and its time bar is displayed.

Each color on the time bar represents a certain record type. See the matching relationship in Figure 3-30.

### Step 4 Play video.

- Click in the playback control bar.
   The system plays the recorded video of the selected date (in time order).
- Click any point in the colored area of the time bar. See Figure 3-32.
   The playback starts from that point.

Figure 3-32 Time bar



Click , and the video files of the selected date will be listed. Double-click a
file in the list. See Figure 3-33. The system plays the video and displays file size,
start time and end time.

For detailed operations, see Table 3-11.

Figure 3-33 List of playback files



Table 3-11 Picture Playback file more operations

Operation	Description
Search	Enter start time and end time, and then click q to find out all the video files

Operation	Description	
	between the entered start time and end time.	
Download	Select dav or mp4 in the Download Format. Then click .  The file will be downloaded to the set storage path. For detailed operations of setting the storage path, see "4.1.2.5 Configuring Storage Path."	
	Downloading and playing video at the same time is not supported.	
Back	Click to go back to the calendar interface.	

### 3.3.1.3.2 Playing Back Local Videos

Step 1 In the **Data Src** box, select video type. See Figure 3-30.

Step 2 Select dav in File Type, and Local in Data Src.

List of playback files is displayed. See Figure 3-34.

Figure 3-34 List of playback files (2)



Step 3 Double-click a file and the file is displayed.

# 3.3.1.4 Clipping Recorded Videos

You can clip a part of recorded video and save it under the path you have set. See Figure 3-35. Figure 3-35 Video clipping



- Step 1 In Video Format, select dav or mp4.
- Step 2 Click on the time bar to select the start time, and then click to start.
- Step 3 Click again on the time bar to select the end time, and then click to finish.
- Step 4 Click

The system prompts that you cannot play back and download a recorded video at the same time.

Step 5 Click Save.

The system stops playback and save the edited file under the storage path you have set. For detailed operations of setting the storage path, see "4.1.2.5 Configuring Storage Path".

# 3.3.2 Picture Playback

The following content is about the introduction of the interface function bar and how to play back pictures.

# 3.3.2.1 Interface Layout

Select "jpg" in "file type" list, and the **Picture Playback** interface is displayed. See Figure 3-36. Figure 3-36 Image playback

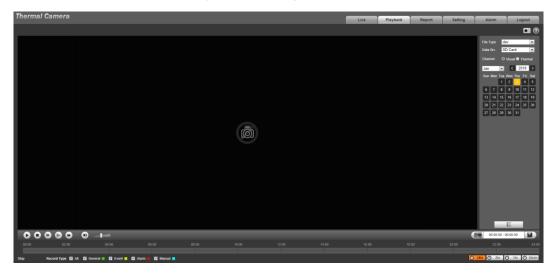


Table 3-12 Image playback

No.	Function	Description	
	Control button for playing pictures	Includes the following two types:	
		When this icon displays, the picture playback is paused	
1		or not started. Click this icon to start picture playback.	
'		When this icon displays, the picture playback is	
		ongoing. Click this icon to stop picture playback.	
		The two states above can be switched.	

No.	Function	Description
2	Snapshot type selection	There are three types including <b>General</b> , <b>Event</b> and <b>Alarm</b> , and you can select one of them according to actual needs.
3	Playback file list	You can select file type and snapshot data.

# 3.3.2.2 Picture Playback

You can check and play a snapshot image based on your own needs.

Step 1 Select a snapshot type in the selection bar of snapshot type. See Figure 3-37.


Figure 3-37 Snapshot type selection



Step 2 Select jpg in File Type. See Figure 3-38.

File type contains dav and jpg. "Dav" represents video playback and "jpg" represents image playback.

Figure 3-38 Configuring playback files

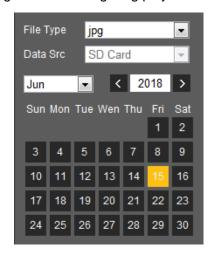

<u>Step 3</u> Those dates with blue color indicate there are snapshot images in those days. Select a date with snapshot images inside.

Step 4 Play images.

- Click in the play control bar and the system plays the snapshots you have selected (in time order).
- Click which represents the file list, pictures which you have selected would be displayed. Double-click a file in the list. See Figure 3-39. The file is displayed.

For detailed operations, see Table 3-13.

Figure 3-39 List of playback files



Table 3-13 Picture Playback file more operations

Operation	Description	
Search	Enter starting time and ending time, and click .  Finds out all the picture files between the entered starting time and ending time.	
Download	Click , and the file is downloaded to local host.  The download operation might vary with different browsers, and the actual	
	interface shall prevail.	
Back	Click to go back to the calendar interface.	

# 3.4 Reports

You can follow certain rules such as time sequence, and check history data of temperature saved in the device Micro SD card.

# Preparation

- You have set the temperature measuring rules (spots, lines and area included). For detailed operations, see "4.6.1.1 Configuring Temperature Measuring Rules".
- You have inserted a SD card to the Device.




Some devices do not support this function. The actual product shall prevail.

# **Procedure**

#### Step 1 Click the Report tab.

The **Report** interface is displayed. See Figure 3-40.

Figure 3-40 Report

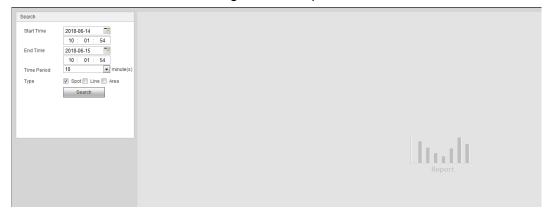

Step 2 Set the conditions for searching and click Search.

Temperature data you have searched is displayed. See Figure 3-41.

Figure 3-41 Result of report searching

# 3.5 Alarm

You can select alarm type as needed, when the selected alarms are triggered, the system would record detailed alarm information at the right side of the interface.



Function of different devices might vary, and the actual product shall prevail.

# 3.5.1 Introduction to Alarm Types

For alarm types and conditions that trigger an alarm, see Table 3-14.

**Alarm Type** Condition **Description** The alarm is triggered You have enabled motion detection. For Motion detailed operations, see "4.5.1 Configuring when moving objects detection are detected. Video Detection." The alarm is triggered You have enabled detection to lack of SD card when the free space in storage space. For detailed operations, see Disk full the SD card is lower "4.5.5.1 Configuring SD Card Abnormality than the set percentage. Parameters."

Table 3-14 Alarm type description

Alarm Type	Description	Condition
	The alarm is triggered	You have enabled detection to SD card storage
Disk error	when there is SD card	space. For detailed operations, see "4.5.5.1
	error or abnormality.	Configuring SD Card Abnormality Parameters."
External	The alarm is triggered	There is an alarm input port and the external
alarm	when there is alarm	alarm is enabled. For detailed operations, see
alaitii	from external device.	"4.5.4 Configuring Alarm."
	The alarm is triggered	
Illegal	when the login	You have enabled detection to illegal access.
access	password has been	For detailed operations, see "4.5.5.3
access	wrongly entered for	Configuring Illegal Access."
	more than the set times.	
Audio	Alarm is triggered when	You have enabled detection to audio errors. For
detection	there are audio input	detailed operations, see "4.5.2 Configuring
detection	errors.	Audio Detection."
	Alarm is triggered when	You have enabled detection to general
IVS	the set smart plans are	behaviors. For detailed operations, see "4.4.2
	triggered.	Configuring ."
	Alarm is triggered when fire is detected.	You have enabled fire alarm. For detailed
Fire warning		operation, see "4.4.3 Configuring Fire
	ille is detected.	Warning."
	When temperature	
Temperature	satisfies alarm	You have enabled temperature alarm. For
alarm	conditions stipulated by	detailed operations, see "4.5.3 Configuring
alaiiii	temperature testing	Temperature Alarm."
	rules, alarm is triggered.	
	When temperature	
Temperature	difference satisfies	You have enabled temperature comparison
difference	alarm condition you	alarm. For detailed operations, see "4.5.3
alarm	have set, alarm is	Configuring Temperature Alarm."
	triggered.	
	When temperature of a	
Hot spot	hot spot satisfies alarm	
alarm	condition you have set,	Vou hove enabled bet/orld and tracing For
	alarm is triggered.	You have enabled hot/cold spot tracing. For
	When temperature of a	detailed operations, see "4.4.4 Configuring Hot
Cold spot	cold spot satisfies alarm	Trace."
alarm	condition you have set,	
	alarm is triggered.	

# 3.5.2 Subscribing Alarm Information

You can enable alarm prompts and define alarm sound according to your preference. Step 1 Click the **Alarm** tab.

The **Alarm** interface is displayed. See Figure 3-42.

Figure 3-42 Alarm



- Step 2 Select an alarm type.
- Step 3 Select **Prompt**, and the system prompts and records alarm information as needed.
  - If you are not in the **Alarm** interface when alarm events you have subscribed are triggered, there will be a displayed on the **Alarm** tab and the alarm information will be recorded. Click the **Alarm** tab, and the sign disappears.
  - If you are at the "Alarm" interface when the selected alarm is triggered, there will be detailed alarm information displayed at the right side of the interface.
- Step 4 Select the check box of **Play Alarm Tone**, and select audio file.System would play the audio file you have selected, when alarm events you have subscribed are triggered.



Click **Remove all** to remove all the alarm information.

- Click **Default**, and the Device is restored to default configuration.
- Click **Refresh** to view the latest configuration.

# 4.1 Configuring Camera

Configure camera's components such as lens, video and audio to ensure proper surveillance.



Functions of different devices might vary, and the actual product shall prevail.

# 4.1.1 Configuring Lens

# 4.1.1.1 Configuring Visible Image

## 4.1.1.1.1 Configuring Picture Parameters

You can configure the picture parameters including brightness, contrast, saturation, Chroma CNT, sharpness CNT and gamma.

Step 1 Click the **Picture** tab.

The **Picture** interface is displayed. See Figure 4-1.

Figure 4-1 The picture interface Conditions Profile Management Channel 1 Profile Normal



Step 2 Configure picture parameters. See Table 4-1 for details.

Table 4-1 Description of picture parameters


Parameter	Description	
Style	Select display style of the video image, including <b>Soft</b> , <b>Standard</b> and <b>Vivid</b> .	
Prightness	Changes the value to adjust the picture brightness. The bigger the value is,	
Brightness	the brighter the picture will be.	
Contrast	Changes the contrast of the picture. The bigger the value is, the more the	
Contrast	contrast will be between bright and dark areas.	
Saturation	Makes the color deeper or lighter. The bigger the value is, the deeper the	
Saturation	color will be. Saturation value doesn't change image brightness.	
Chroma CNT	Reduces the image color and prevents it from being too strong. The bigger	
Cilionia Civi	the value, the better the effect.	
	Changes the sharpness of picture edges. The bigger the value is, the	
Sharpness	clearer the picture edges will be, and if the value is set too big, picture	
	noises are more likely to appear.	
Sharpness	The bigger the value, the stronger the sharpness CNT.	
CNT	The bigger the value, the stronger the sharphess ervi.	
Gamma	Changes the picture brightness and improves the picture dynamic range in	
Garrina	a non-linear way. The bigger the value is, the brighter the picture will be.	
Flip	In the <b>Flip</b> list, select <b>180°</b> and the video image will be turned upside down.	
ТПР	Select <b>0</b> ° and the video image returns to its primary condition.	
	Select the <b>On</b> check box to enable this function.	
EIS	Corrects the device shaking with difference comparison algorithm and	
	improves the image clarity, effectively solves the picture shaking problem.	

## 4.1.1.1.2 Configuring Exposure

Step 1 Click the **Exposure** tab.

The **Exposure** interface is displayed. See Figure 4-2.

Figure 4-2 The exposure interface

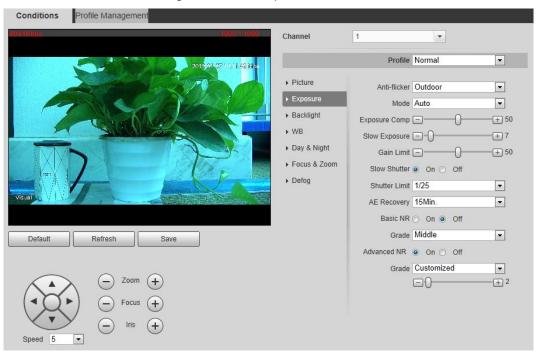

Step 2 Configure exposure parameters. See Table 4-2 for details.



Parameters and its description in Table 4-2 are based on the condition that you have selected **Standard** as **Profile**.

Table 4-2 Description of exposure parameters

Parameter	Description Description		
Mode	<ul> <li>Auto: Adjusts the image brightness according to the actual condition automatically.</li> <li>Shutter priority: When the exposure range is normal, the system prefers the configured shutter range when auto adjusting according to the ambient lighting condition. If the image brightness is not enough and the shutter value has reached upper or lower limit, the system adjusts gain value automatically to ensure the image at ideal brightness.</li> <li>Iris priority: The iris value is set to a fixed value, and the device adjusts shutter value then. If the image brightness is not enough and the shutter value has reached upper or lower limit, the system adjusts gain value automatically to ensure the image at ideal brightness.</li> <li>Manual: Configure gain and shutter value manually to adjust image brightness.</li> </ul>		
Anti-flicker	<ul> <li>50Hz: When the current is 50Hz, the system adjusts the exposure according to ambient light automatically to ensure there is no stripe appears.</li> <li>60Hz: When the current is 60Hz, the system adjusts the exposure according to ambient light automatically to ensure there is no stripe appears.</li> <li>Outdoor: You can select any exposure mode as needed.</li> </ul>		
Iris	Select <b>Manual</b> or <b>Aperture Priority</b> as the <b>Mode</b> . Then you can configure the iris parameter.		
Exposure	Select Manual, Aperture Priority or Shutter Priority as the Mode. Then		
Comp	you can configure the exposure compensation parameter.		
AE (Auto Exposure) Recovery	Set a recovery time. After you adjust the shutter manually, the exposure mode will be restored to the default one after the time you have set.  In the selection box of <b>AE Recovery</b> , you can select <b>Off</b> to turn off AE recovery.		
	Set <b>Manual</b> or <b>Shutter Priority</b> as the <b>Mode</b> . Then you can configure the		
Shutter	parameter.  Adjust the camera's shutter value.		
2D NR	Select the <b>On</b> check box to enable this function. Aiming at single-frame image, 2D NR averages the pixel points (points that are with image noise) with other common pixel points to decrease the image noise and achieve an acceptable and good image display effect. The higher the grade, the better the noise suppression effect.		
3D NR	Select the <b>On</b> check box to enable this function. Aiming at multiple-frame image, 3D NR handles information between two frames to reduce the image noise. The higher the grade, the better the noise suppression effect.		

### 4.1.1.1.3 Configuring Backlight


Backlight mode is divided into **BLC**, **HLC** and **WDR**. You can select one from the three options above at one time.

- When in BLC mode, the camera gets clearer image of the dark areas on the target when shooting against light.
- When in WDR mode, the camera constrains over bright areas and compensates dark areas to improve the image clarity.
- When in HLS mode, the camera dims strong light, and it is applicable to the exit of toll station or parking lot. This mode works well for taking pictures of human face or car plate detail under extreme low ambient light.

# Step 1 Click the Backlight tab.

The **Backlight** interface is displayed. See Figure 4-3.

Figure 4-3 The backlight interface

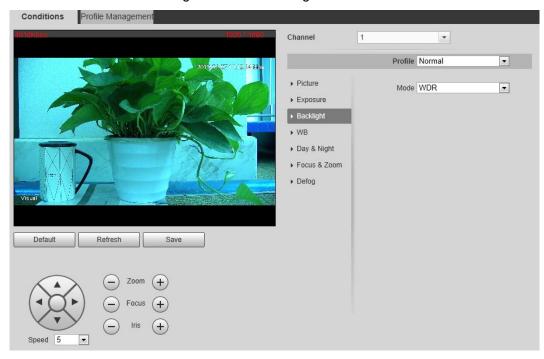

 $\underline{\text{Step 2}}\ \ \text{Configure backlight parameters}.$  See Table 4-3 for details.



There might be a few seconds of video loss when the device is switching to WDR mode from other modes.

Table 4-3 Backlight mode description

Backlight	Description
Mode	Description
BLC	The system adjusts exposure according to ambient lighting condition
BLC	automatically to ensure the clarity of the darkest area.
WDR	The system dims bright areas and compensates dark areas to ensure the
WDK	clarity of all the area.
HLS	The system constrains bright areas and reduces halo size to dim the overall
ПСЭ	brightness.


## 4.1.1.1.4 Configuring White Balance

With the white balance technology, you can make a white object displaying itself clearly on the video image under all kinds of environment.

Step 1 Click the WB tab.

The **WB** interface is displayed. See Figure 4-4.

Figure 4-4 The WB interface

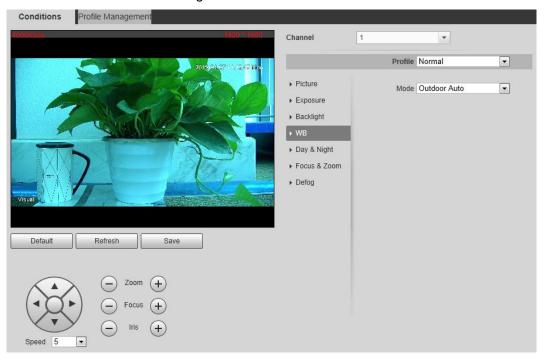

Step 2 Configure white balance parameters. See Table 4-4.

Table 4-4 WB mode description

WB Mode	Description	
Auto	The system compensates WB according to light condition to ensure color	
	precision.	
Outdoor	The system auto compensates WB to most outdoor environments with	
Outdoor	natural or artificial light to ensure color precision.	
Manual	Configure red and blue gain manually; the system auto compensates WB	
Iviariuai	according to color temperature.	
Natural	The system auto compensates WB to environments without artificial light to	
Naturai	ensure color precision.	
Stroot Lown	The camera will implement white balance to ensure precision and clarity of	
Street Lamp	the video image.	


## 4.1.1.1.5 Configuring Day & Night

You can configure this function to accomplish the switch of image display between color mode and black/white mode.

Step 1 Click the Day & Night tab.

The Day & Night interface is displayed. See Figure 4-5.

Figure 4-5 The day & night interface

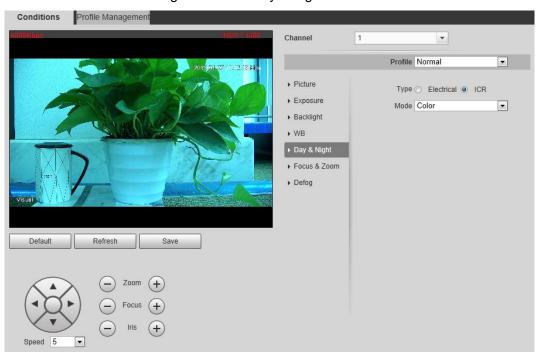

Step 2 Configure day & night parameters. See Table 4-5.

Table 4-5 Day & night mode description

Parameter	Description	
Туре	Select Type from Electrical and ICR.	
	You can select device display mode from <b>Color</b> , <b>Auto</b> and <b>B/W</b> .	
	Day & night configuration is independent from profile management	
Mode	configuration.	
	Color: The system displays color image.	
	Auto: The system switches between color and black-and-white display	
	according to the actual condition.	
	B/W: The system displays black-and-white image.	
	Select <b>Auto</b> as the <b>Mode</b> . Then You can configure this parameter.	
Sensitivity	You can configure camera sensitivity in switching between color and	
	black-and-white mode.	

# 4.1.1.1.6 Configuring Focus & Zoom

Step 1 Click the Focus & Zoom tab.

The Focus & Zoom interface is displayed. See Figure 4-6.

Conditions Profile Management Channel 1 Profile Normal • ▶ Picture Digital Zoom On On Off ▶ Exposure ①<u>+</u> 100 Zoom Speed -▶ Backlight Mode Semi Auto • Focus Limit 10cm • ▶ Day & Night Sensitivity Default -▶ Focus & Zooi PFA On On Off ▶ Defog Refresh

Figure 4-6 The focus & zoom interface

<u>Step 2</u> Configure the focus & zoom parameters. See Table 4-6 for details.

Table 4-6 Description of focus & zoom parameters

	Table 4-0 Description of locus & Zoom parameters		
Parameter	Description		
Digital Zoom	Select the <b>On</b> check box to enable it.		
	You can use the digital zoom to continue the zooming operation even if the		
	optical zoom is at the maximum value.		
Zoom Speed	The larger the value, the faster the zooming operation.		
Mode	<ul> <li>The camera's focusing mode.</li> <li>Auto: Once there is any movement or change of an object on the video image and the image turns blurry, the camera will focus again automatically.</li> <li>Semi Auto: A user needs to prepare some conditions for the camera to focus automatically. This is called "Semi Auto." Pressing the focusing button, implementing the zooming operation, enabling preset or three-dimensional positioning, and PTZ's rotation will all make the camera focus again automatically.</li> </ul>		
	Manual: You need to click or  on the camera's web to achieve the focusing operation.		
Focus Limit	The camera's minimum focusing distance. If the focusing distance is too small, it might get the camera focus on its dome.		
Sensitivity	Select from <b>High</b> , <b>Default</b> and <b>Low</b> . When you select <b>High</b> , it will be easier for the camera to focus.		
PFA	Select the check box of <b>On</b> to enable the infrared correction.  Then when you implement the zooming or focusing operation under low lighting condition, the camera will turn on the infrared light to aid you.		
Lens Init	Click <b>Lens Init</b> to initialize the lens. The system will clear the zooming and focusing data you have set.		


## 4.1.1.1.7 Configuring Defog

The image quality will be compromised in foggy or hazy environment, and defog can be used then to improve image clarity.

# Step 1 Click the **Defog** tab.

The **Defog** interface is displayed. See Figure 4-7.

Figure 4-7 The defog interface

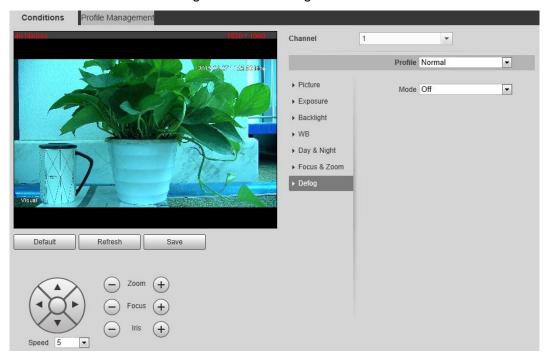

Step 2 Configure the defogging settings. See Table 4-7.

Table 4-7 Defogging settings description

Defogging Settings	Description
Auto	The system adjusts image clarity according to the actual condition.
Manual	Adjust image clarity manually.
Off	Defogging function disabled.

### 4.1.1.1.8 Restoring Lens to the Default Settings

After you have modified lens parameters as mentioned above in 4.1.1.1, if you find situations such as unclear images and abnormal colors, you can restore those parameters to the default settings—you just need to click the **Default** button and click **Save** to finish configuration. See Figure 4-8.

Conditions Profile Management Channel Profile Normal • Brightness -+ 50 ▶ Exposure Saturation \_\_\_\_ + 50 ▶ Backlight Chroma CNT \_\_\_\_\_\_ + 13 ▶ WB Sharpness --Day & Night Sharpness CNT -+ 15 Gamma + 0 ▶ Defoq Mirror 
On 
Off Flip 180° • Picture Freeze O On Off Refresh

Figure 4-8 Restoring lens to the default settings

# 4.1.1.2 Configuring Thermal Image



To find and configure thermal image, you need to select **Setting> Camera > Conditions > Conditions** first, and in the **Channel** box, select **2**. See the following steps for details.

Configure a specific scenario where you use the camera, including indoor scenario, outdoor scenario, and adaptive scenario. You can choose a scenario you need, and configure and check the scenario.

Step 1 Select Setting> Camera > Conditions > Conditions.

The **Conditions** interface is displayed.

Step 2 In the Channel box, select 2.

The thermal image interface is displayed. See Figure 4-9.



The thermal image interface might vary with different cameras, and the actual product shall prevail.

Conditions Profile Management 2 Rectangle1 Avg:21.3 Min:13.0 Max:49.5 10 2019-01-09 15:40:09 Wed Profile Normal • 67.5 T Colorization -Advanced -Basic Settings Brightness Contrast Detail Enhancement = Histogram Equalizat... =0- $\cdot (1)$ Low Dynamic High Dynamic Full Screen ROI Type On Off Mirror Save 0° Flip Picture Freeze On On Off Image Enhancement Basic NR(Noise Re... - + 50 Advanced NR(Front... - + 50 Advanced NR (Rear... Agc Settings Gain Mode = 0 Agc Plateau = 0 + 0 Low Temperature High Temperature FFC Settings FFC Mode FFC Period - + 600 Sec. Do FFC

Figure 4-9 The thermal image interface

Step 3 Configure lens parameters. For detailed description, see Table 4-8.

Table 4-8 Parameter description of lens

Classification	Parameter	Description
		Common model, day and night can be selected.
	Profile	You can set the relevant parameter of thermal image
		after you configure files.
		Select the duplicate frame and set the frequently used
		video parameter as the user-defined scene. Or, you can
		select the default scene and set the display of the thermal
Profile		image.
	Scene (marked by	Low Dynamic: Thermal images will be displayed
	① in Figure 4-9)	based on the configuration of low dynamic scene.
		High Dynamic: Thermal images will be displayed
		based on the configuration of high dynamic scene.
		Auto: Thermal images will be displayed based on
		the configuration of auto scene.

Classification	Parameter	Description
Basic Settings	Colorization	<ul> <li>Description</li> <li>Add color to the thermal imagery image and use color to indicate the temperature. "White glow" is the default color.</li> <li>White glow: Lighter when the temperature is higher in gray image.</li> <li>Black glow: Lighter when the temperature is lower in gray image.</li> <li>Fusion: Color is concentrated on the range of purple-red-yellow. More purple when the temperature is lower and more yellow when the temperature is higher.</li> <li>Rainbow: Color is concentrated on the range of blue-green-red-yellow. Bluer when the temperature is lower and more yellow when the temperature is lower and more yellow when the temperature is lower and more yellow. Redder when the temperature is lower and more yellow. Redder when the temperature is lower and more yellow. Bluer when the temperature is lower and more yellow when the temperature is lower and more yellow when the temperature is lower and more yellow when the temperature is higher.</li> <li>Iron oxide red: Its color range is similar to that of Midday, but its brightness is lower than Midday.</li> <li>Amber: It's mainly represented as brown. Brighter when the temperature is higher.</li> <li>Boulder: Color is concentrated on the range of purple - red- yellow-green- blue. More purple when the temperature is lower and bluer when the temperature is lower and bluer when the temperature is higher.</li> <li>The setting sun: Color is concentrated on the range of blue- red- yellow. Bluer when the temperature is lower and redder when the temperature is higher.</li> <li>Pomegranate: It's mainly represented as aquamarine. Brighter when the temperature is higher.</li> </ul>

Classification	Parameter	Description
	Brightness	Change the overall image brightness through linear mode. The bigger the value is, the brighter the image will be, and the smaller the darker.
	Sharpness	Change the sharpness of image edges. The larger the value, the more obvious the image edge.  Do not make the value too large to prevent image noise.
	EZoom	Enlarge the thermal image according to the zoom time you have set.
	ROI Type	Select the district of strengthening video quality. The brightness and clarity of the chosen district will be higher. District consists of 25% central point, 50% central point, 75% central point, full screen, bottom part, middle part, above part and user-defined part.  When you set <b>ROI Type</b> to <b>Custom</b> , you need to press and drag the left mouse button. Then, add the "ROI Type" box.
	Mirror	Open the mirror image and the monitor image will reverse from left to right.
	Picture Freeze	When you are using the preset, the preset image that has been used will be directly represented. The image during the movement of PTZ will not be displayed.
	Basic NR (Noise Reduction)	Average the pixel of single frame image with other pixels to reduce the image noise.  Select the copy frame, open the basic noise reduction and configure the class of basic noise reduction. The higher the class, the better the noise reduction, but the image will be less clear.
	Auto Gain	The larger the gain value, the more unstable the image.
Gain settings	Balanced Gain Gain Model	The larger the district, the bigger the contrast.  Low-temperature mode and high-temperature mode are contained.
FFC Settings	FFC Mode	<ul> <li>Method of correcting the shutter.</li> <li>Auto: According to the switch period that you have configured, the shutter will be corrected regularly.</li> <li>Manual: Correct the shutter by yourself.</li> </ul>
	FFC Period	You can configure this parameter only when <b>FFC Mode</b> is set to be <b>Auto</b> .  Adjust time gap of correcting the shutter automatically.
	Do FFC	Click <b>Do FFC</b> to trigger the shutter correcting for this time.

Step 4 Click **Save** to finish configuration.

Click **Reset** and the lens properties are restored to the primary state.

# 4.1.1.3 Configuring Profile Management


When configuring the profile management, you can select from **Normal**, **Full Time** and **Schedule** based on your own needs.

<u>Step 1</u> Select **Setting > Camera > Conditions > Conditions > Profile Management**. The Profile Management interface is displayed.

<u>Step 2</u> Profile management configuration:


 When Profile Management is set as Normal, the surveillance system works under normal configuration.

Figure 4-10 Common setting

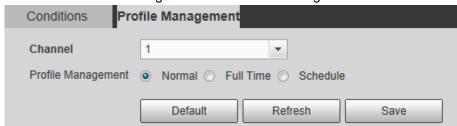


 When Profile Management is set as Full Time, you can select Day or Night as Always Enable, and the surveillance system works under Always Enable.

Figure 4-11 Full time setting

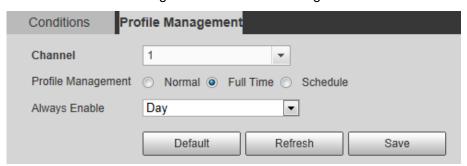

 When Profile Management is set as Schedule, you can drag the slide block to set certain time as Day or Night. For example, set 8:00–5:00 PM as day, and 0:00– 8:00 and 18:00–24:00 as night. System works under corresponding configuration in different time.

Figure 4-12 Switching based on time

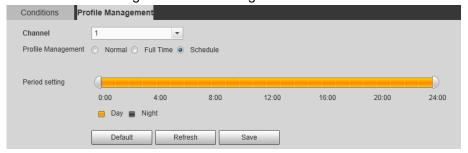

Step 3 Click **Save** to finish configuration.

# 4.1.2 Configuring Video Parameters

# 4.1.2.1 Configuring Video Streaming

Configure video stream parameters, including stream type, encode mode, resolution, frame rate, bit stream control, bit stream, I frame interval, SVC, and watermark.


## Step 1 Select Setting > Camera > Video > Video.

The **Video** interface is displayed. See Figure 4-13.



The default bit stream value of different devices might vary, and the actual product shall prevail.

Figure 4-13 Video

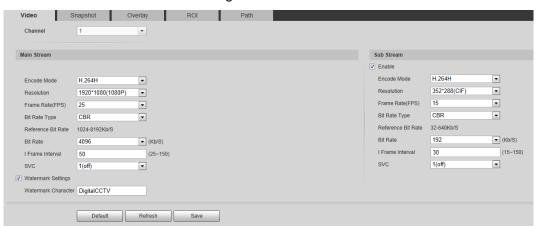

Step 2 Configure video streaming. For detailed description, see Table 4-9.

Table 4-9 Parameter description

Parameter	Description	
Enable	Select the option box to enable sub stream (enabled by default).	
LIMBUIE	Enabling sub stream 1 and sub stream 2 at the same time are supported.	
	Encode mode of video.	
	H.264: Main profile encode mode.	
Encode	H.264H: High profile encode mode.	
Mode	H.264B: Baseline profile encode mode.	
Mode	MJPEG: Under this mode, the higher streaming value is required to	
	ensure the clarity of images. And, we suggest that you should use the	
	maximum streaming value we have offered.	
Resolution	The resolution of the video The max resolution of different devices might	
1\C30Iuli0II	vary, and the actual product shall prevail.	
Frame	The number of frame in one second of video The higher the FPS is, the	
Rate (FPS)	clearer and smoother the video will be.	
	You can select bit rate type:	
	Fixed: the bit rate changes little and keeps close to the set bit rate	
	value.	
Bit rate	Changeable: the bit rate changes as monitoring scene changes.	
	Bit rate type can only be set as Fixed when Encode Mode is set as	
	MJPEG.	
	This parameter can be configured only when the bit rate type is set as	
Image	"Changeable."	
quality	Image quality can be classified as the six levels of "the best", "the better",	
	"good", "bad", "the worse", "the worst."	

Parameter	Description		
Reference bit rate value	According to resolution and frame rate you have set, we have offered you a reference bit rate value, which is also the best value you can adopt.		
Bit rate	This parameter can be configured only when the bit rate type is set as <b>Fixed</b> .  If you select the bit rate value according to "reference bit rate value", the streaming changes little and keeps close to the bit rate value you have selected.  Select <b>Customized</b> and you can configure bit rate value manually.		
Maximum bit rate	This parameter can be configured only when bit rate type is set as  Changeable.  You can select the max value of the bit rate according to the reference bit rate value, and the bit rate changes with monitoring scenes, but the max bit rate keeps close to the value you set.		
I Frame Interval	The number of P frame between two I frames, and the I Frame Interval range changes as FPS.  It is recommended to set I Frame Interval twice as big as FPS.		
SVC	Scaled video coding, able to encode a high quality video bit stream that contains one or more subset bit streams. The default value is 1, which means no layered coding.		
Watermark Settings	Select the check box to enable watermark.  Then you can check if the video has been tampered by verifying the watermark.		
Watermark character	The default character is Digital CCTV.  You can configure at most 128 watermark characters which are composed of number, letter, underline and dash.		

Step 3 Click **Save** to finish configuration.

# 4.1.2.2 Configuring Image Streaming

Configure parameters of image streaming which cover snapshot type/interval, image size/quality.

Step 1 Select Setting > Camera > Video > Snapshot.

The **Snapshot** interface is displayed. See Figure 4-14.

Figure 4-14 Snapshot

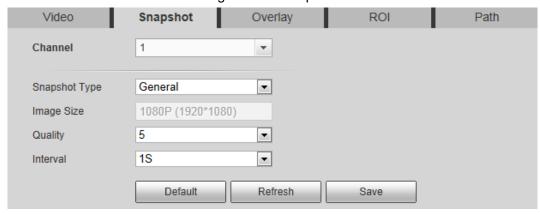


Table 4-10 Parameter description

Parameter	Description	
	You can select <b>General</b> or <b>Event</b> .	
Snapshot type	General means the system takes snapshot as scheduled	
Shapshot type	• Event means snapshot functions when video\audio detection,	
	event or alarm is triggered.	
Image Size	The same resolution with main stream.	
Quality	Snapshot quality. The bigger the value, the better the snapshot	
Quality	quality.	
Spanshot interval	Snapshot frequency.	
Snapshot interval	Select <b>Customized</b> to manually configure snapshot frequency.	
Heat map in jpeg	Select the check box and snapshots of thermal images will carry the	
Treat map in jpeg	temperature-measuring information.	

Step 3 Click **Save** to finish configuration.

# 4.1.2.3 Configuring Video Overlay

Configure Overlay which covers Privacy Masking, Channel Title, Time Title, Geography location, Font, and Picture Overlay.

## 4.1.2.3.1 Configuring Privacy Masking

You can enable this function if you need to cover certain area in the video image.

This function is available only for bullet cameras.


Step 1 Select **Setting > Camera > Video > Overlay**.

The Overlay interface is displayed.

Step 2 Click Privacy Masking.

The **Privacy Masking** interface is displayed. See Figure 4-15.

Figure 4-15 Privacy masking interface

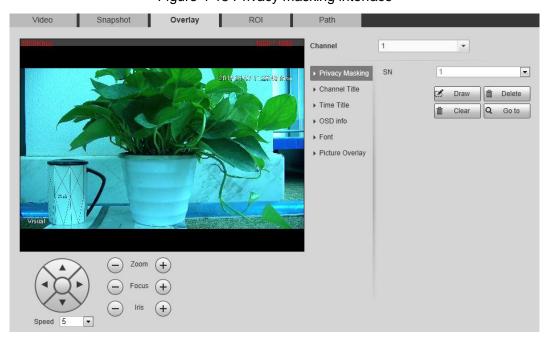

Step 3 Select **Enable**, and then drag the block to the area that you need to cover.

 $\Box$ 

- You can draw four area boxes at most.
- Click Remove All to delete all the area boxes; you can also just select one box, and click Delete or right-click to delete it.

Step 4 Click Save to finish configuration.

### 4.1.2.3.2 Configuring Channel Title

You can enable this function if you need to display Channel title in the video image.

Step 1 Select **Setting > Camera > video > Overlay**.

The Overlay interface is displayed.

Step 2 Click Channel Title.

The **Channel Title** interface is displayed. See Figure 4-16.

Figure 4-16 Channel title



Step 3 Select **Enable** and enter channel title, and then the title displays in the video image.



You can drag the "Channel Title" box in the video image with your mouse to adjust the box's location.

Step 4 Click **Save** to finish configuration.

### 4.1.2.3.3 Configuring Time Title

You can enable this function if you need to display time on the video image.

Step 1 Select Setting > Camera > Video > Overlay.

The **Overlay** interface is displayed.

Step 2 Click Time Title.

The **Time Title** interface is displayed. See Figure 4-17.

Figure 4-17 Time title



- Step 3 Select the **Enable** check box, and the time displays in the video image.
- Step 4 Click Week Display, and then the week information displays in the video image.



You can drag the "Time Title" box in the video image with your mouse to adjust the box's location.

Step 5 Click **Save** to finish configuration.

### 4.1.2.3.4 Configuring OSD Info

Enable this function if you want to display words on the video image.

- Text Overlay and Picture Overlay can't work at the same time.
- This function is available on select models and the actual interface shall prevail.

Step 1 Select **Setting > Camera > Video > Overlay**.

The **Overlay** interface is displayed.

Step 2 Click OSD Info.

The **OSD Info** interface is displayed. See Figure 4-18.



Step 3 Select the Enable check box of Text Overlay, and enter text based on your own needs.
Then, select the text align method, and the OSD Info box is displayed on the video image.

You can drag the **OSD Info** box on the video image with your mouse to adjust the box's location.

Step 4 Click Save to finish configuration.

### 4.1.2.3.5 Configuring Font

You can adjust size and color of the font in the video images based on your own needs.

Step 1 Select Setting > Camera > video > Overlay.

The Overlay interface is displayed.

Step 2 Click the **Font** tab.

The **Font** interface is displayed. See Figure 4-19.

Figure 4-19 Font setting



Step 3 Select color and size of the font based on your own needs.

### 4.1.2.3.6 Configuring Picture Overlay

You can enable this function if you need to display picture information in the video image.

Geography location and Picture overlay can't work at the same time.


Step 1 Select Setting > Camera > video > Overlay.

The Overlay interface is displayed.

Step 2 Click the Picture Overlay tab.

The **Picture Overlay** interface is displayed. See Figure 4-20.

Figure 4-20 Picture overlay interface

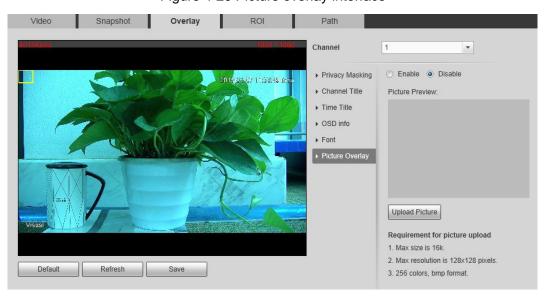

Step 3 Select the Enable check box.

You will be informed that OSD information is to be closed. Click Save.

 $\underline{\text{Step 4}} \hspace{0.1in} \textbf{Click } \textbf{Upload Picture}, \text{ and select a picture}. \hspace{0.1in} \textbf{The picture is displayed in video images}.$ 

You can drag the "Picture Overlay" box in the video image with your mouse to adjust the box's location.

Step 5 Click **Save** to finish configuration.

# 4.1.2.4 Configuring ROI

Select ROI in the image, and then the selected image would display with configured quality.

Step 1 Select Setting > Camera > Video > ROI.

The ROI interface is displayed. See Figure 4-21.

Figure 4-21 ROI interface



- Step 2 Select the **Enable** check box.
- Step 3 Hold the left mouse button to draw a ROI area on video images. You can also configure the ROI's display quality.

- You can draw at most four ROI areas.
- Click **Remove All** to delete all the area boxes; you can also just select one box, and click **Delete** or right-click to delete it.

Step 4 Click Save to finish configuration.


## 4.1.2.5 Configuring Storage Path

Configure storage paths covering Live Snapshot, Live Record, Playback Snapshot, Playback Download, Video Clips, and Heat Map.

Step 1 Select Setting > Camera > Video > Path.

The **Path** interface is displayed. See Figure 4-22.

Figure 4-22 Storage path interface

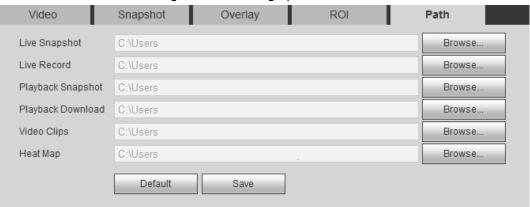

Step 2 Click Browse, and configure storage paths of live snapshot, live record, playback snapshot, playback download, video clips, and heat map. See Table 4-11 for detailed description.

Table 4-11 Storage path description

Path	Description
Live Snapshot	Live snapshot refers to the snapshot of live interface.
	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Live Record	Live record refers to the recorded video of live interface.
Live Record	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Playback	Playback snapshot refers to the snapshot of playback interface.
Snapshot	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Dlavback	Playback download refers to the downloaded video of playback
Playback	interface.
Download	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Video Clips	Video clips refer to the clipped video of playback interface.
	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Heat Man	Heat map comes from the location <b>Setting &gt; Temperature</b> .
Heat Map	C:\Users\admin\WebDownload\LiveSnapshot is the default path.



Administrator in the default path is the user account.

Step 3 Click Save to finish configuration.

# **4.1.3 Configuring Audio Parameters**

Configure audio parameters covering **Encode Mode**, **Sampling Frequency**, **Audio in Type**, and **Noise Filter**.




Functions of different devices might vary and the actual product shall prevail.

Step 1 Select **Setting > Camera > Audio**.

The Audio interface is displayed. See Figure 4-23.

Figure 4-23 Audio

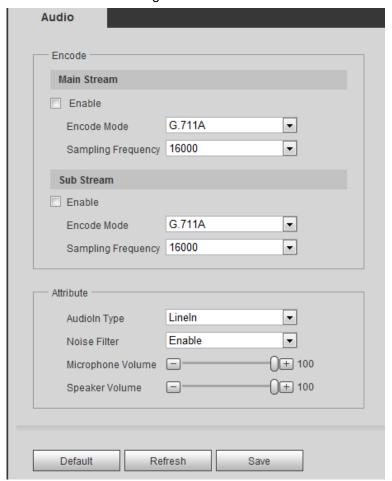

Step 2 Configure Audio parameters. For detailed description, see Table 4-12.

Table 4-12 Parameters

Parameters	Description	
	Audio can be enabled only when video is enabled.	
	Enable Main Stream or Sub Stream, and the network stream is	
Enable	composed of both audio and video streams. If you do not select	
	Main Stream or Sub Stream, then only video images are	
	transmitted.	
	You can select audio encode mode. G.711A, G.711Mu, and AAC are	
Encode Mode	included.	
	The configured audio encode mode applies to audio and intercom.	
Sampling	Audio's sampling frequency. 8K and 16K are included.	
Frequency	Addio's sampling frequency, or and for are included.	
	Two audio types are selectable.	
Audio in Type	Linein: External audio input source is required.	
	Mic: External audio input source is not required.	
Noise Filter	Enable this function, and the system auto filters ambient Noise.	
NAC	Adjusts microphone volume.	
Microphone		
Volume	This function is not available for all devices.	

Parameters	Description
Speaker Volume	Adjusts speaker volume.
	This function is not available for all devices.

Step 3 Click Save to finish configuration.

# **4.2 Configuring Network**

# 4.2.1 Configuring TCP/IP

You need to configure the camera's IP address and DNS server to connect the camera with other devices in the network.

## Preparation


You have connected the camera to network.

## **Procedure**

## Step 1 Select Setting > Network > TCP/IP.

The **TCP/IP** interface is displayed. See Figure 4-24.

Figure 4-24 TCP/IP interface

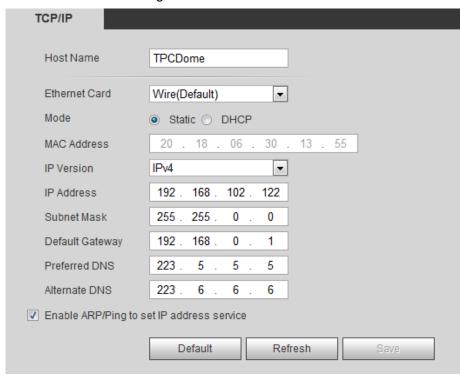

Step 2 Configure TCP/IP parameters. See Table 4-13 for details.

Table 4-13 TCP/IP parameters

Parameter	Description
Host Name	Enter host name, 15 characters at most.
Ethernet Card	Wire (Default) is set by default.

Parameter	Description	
	Static: You need to manually configure IP	Address, Subnet
	Mask and Default Gateway.	
Mode	DHCP: Obtains IP address automatically. With DHCP enabled, IP	
Mode	Address, Subnet Mask and Default Gateway cannot be	
	configured. You can check the current IP address whether the	
	DHCP takes effect or not.	
MAC Address	Host's MAC address, cannot be modified.	
IP Version	Select IPv4 or IPv6.	
	You can type IP address and subnet mask ac	cording to your own
IP Address	needs.	
/		
	All the IPv6 addresses will be validated, so er	sure IP address and
	subnet mask are in the same network segmen	nt, which means the
Subnet Mask	front parts of the IP address and the default gateway are the same	
	one.	
Default Gateway	Configure as needed, the default gateway	
	must be in the same network segment with	There is no default
	the IP address.	gateway for IPv6.
Preferred DNS	IP address of the preferred DNS.	Enter 128 digits in
		preferred DNS and
Alternate DNS	IP address of the alternate DNS.	alternate DNS.

Parameter	Description	
	Select the check box, get the device MAC address, and then you can modify and configure the device IP address with ARP/ping command. This is enabled by default. During reboot, you will have no more than two minutes to configure the device IP address with a ping packet which has certain length. The server will be turned off in 2 minutes, or it will be turned off immediately after IP address configuration. If this is not enabled, the IP address cannot be configured with ping packet.  A demonstration of configuring IP address with ARP/Ping.  1. To obtain a free IP address, you need to ensure that the Device and your PC are in the same LAN.  2. Get MAC address from the device label.  3. Open command editor on your PC and enter the following command.	
	Windows syntax↔	
Enable ARP/Ping to set IP address	arp −s <ip address=""> <mac> ↔ ping −l 480 −t <ip address=""> ↔</ip></mac></ip>	
service.	Windows example-	
	arp -s 192.168.0.125 11-40-8c-18-10-11↔ ping -l 480 -t 192.168.0.125↔	
	UNIX/Linux/Mac syntax-	
	arp −s <ip address=""> <mac> ← ping −s 480 <ip address=""> ← P</ip></mac></ip>	
	UNIX/Linux/Mac example+3	
	arp -s 192.168.0.125 11-40-8c-18-10-11+/ ping -s 480 192.168.0.125+/	
	4. Reboot through power or network.	
	5. Check your PC command line. If there is information such as	
	"Reply from 192.168.0.125", you have done configuration	
	successfully. Turn it off then.  6. Enter http://(IP address) in the browser address bar to log in.	
	o. Enter http://(ii address) in the browser address bar to log in.	

Step 3 Click **Save** to finish configuration.

# **4.2.2 Configuring Port**


# **4.2.2.1 Configuring Port Parameters**

You can configure the maximum port number and each port value.

Step 1 Select Setting > Network > Port > Port.

The **Port** interface is displayed. See Figure 4-25.

Figure 4-25 Port

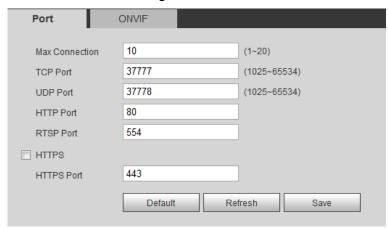

Step 2 Configure parameters. See Table 4-14 for details.



- Configuration of Max Connection takes effect immediately and others after reboot.
- 0–1024, 37780, 37880, 1900, 3800, 5000, 5050, 9999, 37776, 39999 and 42323 are occupied for specific uses.
- It is not recommended to use the default value of other port during port configuration.

Table 4-14 Port parameter description

Parameters	Description
Max Connection	The maximum number of users (web client, platform client or mobile
	phone client) that can connect to the device simultaneously, the value is
	10 by default.
TCP Port	Port of transmission control protocol. The value is 37777 by default.
UDP Port	User datagram protocol port, the value is 37778 by default.
HTTP Port	HTTP communication port. The default value is 80. If you have modified
	the default value, when logging in through a browser, you need to add the
	latest port number to the end of IP address.

Parameters	Description	
RTSP Port	<ul> <li>554 is the default port number. If you play live view through Apple's QuickTime or VLC, the following format is available. This function is also available for Blackberry.</li> <li>When the URL format requiring RTSP, you need to specify channel number and bit stream type in the URL, and also user name and password if needed.</li> <li>When playing live view with Blackberry smart phone, you need to turn off the audio, and then set the code mode to H.264B and resolution to CIF.</li> <li>URL format example: rtsp://username:password@ip:port/cam/realmonitor?channel=1&amp;subtype=0</li> <li>Username: admin, for example.</li> <li>password</li> <li>IP: your device IP.</li> <li>Port: leave it if the value is 554 by default.</li> <li>Channel 1: Channel number, starts from 1. For example, if you are using channel 2, then the channel=2.</li> <li>Subtype refers to Bit stream type; 0 means main stream (Subtype=0) and 1 means sub stream (Subtype=1).</li> <li>So, if you require the sub stream of channel 2 from a certain device, then the URL should be: rtsp://admin:admin@10.12.4.84:554/cam/realmonitor?channel=2&amp;subtype=1</li> <li>If user name and password are not needed, then the URL can be: rtsp://ip:port/cam/realmonitor?channel=1&amp;subtype=0</li> </ul>	
Enable HTTPS	HTTPS: Control of communication service. After selecting the check box, you can log in the Device through https://ip:port. When there is a default port, you can log in through https://ip.	
HTTPS Port	HTTPS communication port whose value can be selected from 1025–65534 and 443 is the default value.	

Step 3 Click **Save** to finish configuration.

# 4.2.2.2 Configuring ONVIF Verification When Logging


With ONVIF port standard, network video products (video recording device and other recording devices included) of different manufacturers can be connected to each other.

- ONVIF is enabled by default.
- When logging in through ONVIF, the default names of both "username" and "password" are admin and the default port value is 80.

Step 1 Select Setting > Network > Port > ONVIF.

The **ONVIF** interface is displayed. See Figure 4-26.

Figure 4-26 ONVIF

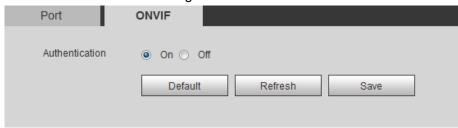

Step 2 Select the On check box in Authentication bar

Step 3 Click Save to finish configuration.

## 4.2.3 Configuring PPPoE

Point-to-Point Protocol over Ethernet, it is one of the protocols that device uses to connect to the internet. Get the PPPoE user name and password from the Internet Service Provider, and then, set up network connection through PPPoE, the device will acquire a WAN dynamic IP address.

- Disable UPnP while using PPPoE to avoid possible influence.
- After making PPPoE connection, the device IP address can not be modified through web interface.

Step 1 Select **Setting > Network > PPPoE**.

The **PPPoE** interface is displayed. See Figure 4-27.

Figure 4-27 PPPoE



Step 2 Select the **Enable** check box, and type user name and password.

Step 3 Click Save to finish configuration.

The successful prompt displays, and then the real-time WAN IP address is displayed. You can visit device through this IP address.

## 4.2.4 Configuring DDNS

When device's IP address is frequently changed, you can enable DDNS to dynamically update the relation between domain name and IP address (both of which are in the DNS server). By this, you can log in the device through a domain name.

## Preparation

Before making any changes, check if your device supports the DNS server.

• If Quick DDNS is the DDNS' type, you do not need to register a new domain name.

• If Quick DDNS is not the DDNS' type, you need to log in the domain name of website registration provided by DDNS service provider.



Register and log in the DDNS website, and then you can view the information of all the connected devices in your account.

## **Procedure**

#### Step 1 Select Setting > Network > DDNS.

The **DDNS** interface is displayed. See Figure 4-28.

Figure 4-28 DDNS setting interface



Step 2 Select **Type** and configure as needed.

Table 4-15 DDNS parameters

Parameter	Description	
Turo	See the name and web site of DDNS service provides below:	
Туре	"members.dyndns.org" is the IP address of Dyndns DDNS.	
Address	"dynupdate.no-ip.com" is the IP address of NO-IP DDNS.	
Address	"members.3322.org" is the IP address of CN99 DDNS.	
Domain name	The domain name you registered on the DDNS website.	
User name	Enter the user name and password you got from DDNS service provide.	
Password	You need to register an account (with user name and password) on the	
	DDNS service provides' website.	
Update period	The update cycle of the connection between your device and the server. 10	
	minutes are set by default.	

Step 3 Click Save to finish configuration.

Open your browser, and type the domain name into address bar. Press **Enter**. If a web interface is displayed, the configuration is finished successfully.


# 4.2.5 Configuring SMTP

Configure **SMTP** (Email). When alarm, video detection, abnormal event and intelligent are triggered, SMTP alarms will be transmitted to the specific Emails you have configured.

Step 1 Select Setting > Network > SMTP (Email).

The **SMTP** (Email) interface is displayed. See Figure 4-29.

Figure 4-29 SMTP (Email)

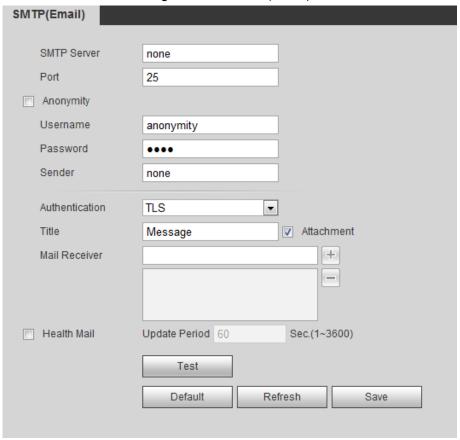

Step 2 Configure your SMTP server.

Step 3 For SMTP (Email)'s other parameters to be configured, see Table 4-16.

Table 4-16 SMTP (Email) parameter description

Parameters	Description	
Anonymity	Enable <b>Anonymity</b> , and senders' identities will not be displayed in Emails	
	transmitted to others.	
Sender	Sender's email address	
Encryption type	Select Authentication type from None, SSL and TLS. TLS is set by default.	
Attachment	Select the check box to support attachment in the email.	
Title	You can enter no more than 63 characters in Chinese, English, and Arabic	
Title	numerals.	
Receiver	Receiver's mail address. Supports 3 addresses at most.	
	Time intervals of sending alarm Emails. "0" means there is no interval. Set a	
	time interval (normally >0s) as you want and when alarm, video detection,	
Interval	or event is triggered, Emails will not be transmitted all the time but be	
interval	transmitted in the time interval you have set. This function is aimed at	
	easing the pressure that is put on the Email server when there are quite a	
	lot of abnormal events.	
	The system sends test mail to check if the connection is successfully set up.	
Health Mail	Select Health Mail to configure Update Period. E-mail testing results will	
	be transmitted in time intervals you have set.	
Toot	Test the email sending and receiving function. If the configuration is correct,	
Test	you would receive test email. Save email configuration before running rest.	

Step 4 Click **Save** to finish configuration.

## 4.2.6 Configuring UPnP

Configure UPnP protocols to establish the reflection relation between intranet and external network. A user can access IP address of external network to visit devices in the intranet.

## Preparation


- Ensure UPnP network service has been installed to your PC.
- Log in the router, and configure WAN IP address to set up internet connection.
- Enable UPnP in the router.
- Connect your device to the LAN port of the router.
- Set IP address of your router as that of your device, or select DHCP to obtain IP address automatically.

## **Procedure**

### Step 1 Select Setting > Network > UPnP.

The **UPnP** interface is displayed. See Figure 4-30.

Figure 4-30 UPnP

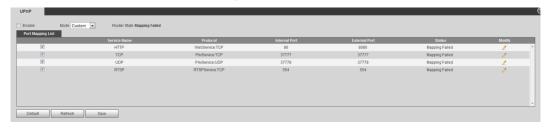

#### Step 2 Select the Enable check box.

Step 3 Select mode, and service name in the port mapping list.

UPnP can be classified as custom mode and default mode.

- Under custom mode, you can change external ports.
- Under default mode, you do not need to change ports and reflection relations.

#### Step 4 Click **Save** to finish configuration.

Type "http:// (external network IP address): (external port number)" to access devices in Intranet whose ports correspond to your router.

## 4.2.7 Configuring SNMP

SNMP (Simple Network Management Protocol) is a basic network management framework. You need to install certain software to the Device to obtain the Device's information.

## Preparation

- Install SNMP monitoring and managing tools such as MIB Builder and MG-SOFT MIB Browser.
- You can contact technical support for the MIB file that matches the current version.

### Procedure

#### Step 1 Select Setting > Network > SNMP.

The **SNMP** interface is displayed. See Figure 4-31 and Figure 4-32.

Figure 4-31 SNMP (1)


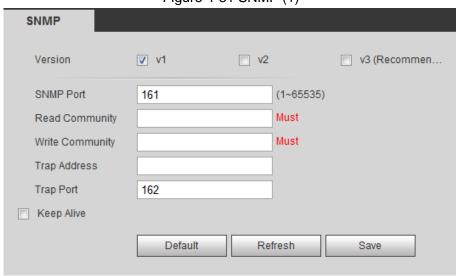


Figure 4-32 SNMP (2)

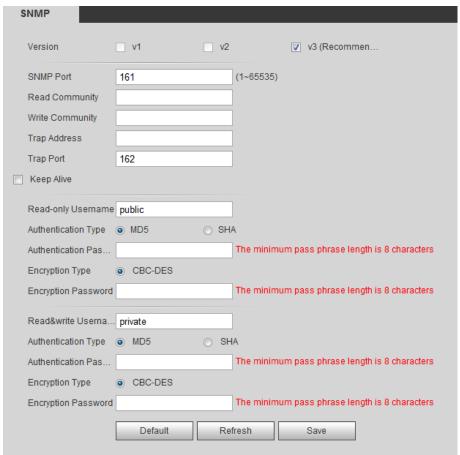

- Step 2 Select the **Version** check box to enable SNMP.
- Step 3 Configure SNMP parameters. See Table 4-17 for details.

In the **Trap Address** bar, enter the IP address of the PC that has MIB Builder and MG-SOFT MIB Browser installed, other parameters leave to the default.

Table 4-17 SNMP parameter description

Parameter	Description
-----------	-------------

Parameter	Description
SNMP Version	<ul> <li>Select a version and its information will be displayed in the SNMP interface.</li> <li>Select v1, and only v1's information is displayed.</li> <li>Select v2, and only v2's information is displayed.</li> <li>Select v3, and you can configure user name, password and authentication type. It requires corresponding user name, password and authentication type from the server to visit your device. V1 and v2 version are now unavailable.</li> </ul>
SNMP Port	Refers to the listening port of the software agent in the device.
Community	A character string, acts as a clear text password which can manage network's process and agent process. It defines the relation concerning certification, access, and escrow between agent and administrator. Device and agent must be consistent.
Read community, write community	Refers to the read and write community string that the software agent supports.  You can enter number, letter, underline and dash to form the name.
Trap	SNMP trap is a SNMP agent which transmits information such as important event or change of state to the administrator.
Trap address	A destination address to which agent program sends trap information.
Trap Port	A destination port to which agent program sends trap information. 162 set by default and range from 1–65535.
Read-only username	The name is "public" by default.  You can enter number, letter, underline to form the name.
Read/Write username	The name is "private" by default.  You can enter number, letter, underline to form the name.
Authentication type	You can select from MD5 and SHA, the default type is MD5.
Authentication password	It should be no less than 8 digits.
Encryption type	The default is CBC-DES.
Encryption Password	It should be no less than 8 digits.

Step 4 Click **Save** to finish configuration.

Step 5 View device information.

- 1) Run MIB Builder and MG-SOFT MIB Browser.
- 2) Compile the two MIB files with MIB Builder.
- 3) Load the generated modules with MG-SOFT MIB Browser.
- 4) Enter the IP address of the device you need to manage in the MG-SOFT MIB Browser, and then select version to search.

5) Unfold all the tree lists displayed in the MG-SOFT MIB Browser, and then you can view the configuration information, video channel amount, audio channel amount and software version.



Use PC with Windows OS and disable SNMP Trap service. The MG-SOFT MIB Browser will display prompt when alarm is triggered.

# 4.2.8 Configuring Bonjour

Bonjour is also called zero-configuration networking. With Bonjour built into devices such as your phone, this thermal camera can be searched and accessed. Bonjour is a protocol of industry standard which allows devices search and find each other. IP address or DNS server is not required during this process.

Enable Bonjour in this thermal camera, and this camera will be automatically detected by your client-side or web with Bonjour function. When this thermal camera is detected by Bonjour, server name you have set will be displayed.




Bonjour is enabled by default.

Step 1 Select **Setting > Network > Bonjour**.

The **Bonjour** interface is displayed. See Figure 4-33.

Figure 4-33 Bonjour

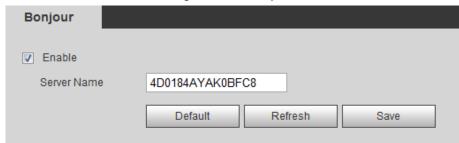

- Step 2 Select the **Enable** check box, and then configure server name.
- Step 3 Click **Save** to finish configuration.

You can use Safari browser, and your client side or web with Bonjour function to access the thermal camera's web.

- Step 1 Click "Show All Bookmarks" in Safari.
- <u>Step 2</u> Enable Bonjour, and then, in your LAN, all the network cameras in which the "Bonjour" is enabled are displayed.
- Step 3 Click to visit the corresponding Web interface.

# 4.2.9 Configuring Multicast

The Device has limit towards web visitors. If several people access this Device's web in the meantime, video images may not be represented. To solve the problem, you can set up the Device's multicast IP and adopt multicast protocol.

Step 1 Select Setting > Network > Multicast.

The **Multicast** interface is displayed. See Figure 4-34.

Figure 4-34 Multicast



<u>Step 2</u> Select **Enable** and then enter IP address and port number. For detailed description, see Table 4-18.

Table 4-18 Multicast

Parameter	Meaning
Description	The Multicast IP address of Main Stream/Sub Stream is 224.1.2.4 by
	default, and the range is 224.0.0.0–239.255.255.255.
Port	See the multicast port of corresponding stream: Main Stream: 40000;
	Sub Stream1: 40016; Sub Stream2: 40032, all the range is 1025–65500.

Step 3 Click Save, and the login interface is displayed. The configuration finishes.
In the Live interface, set Protocol to Multicast, and then you can view the video image with Multicast protocol.


# 4.2.10 Configuring Auto Registration

In the **Auto Register** interface, you can set up an IP address to which the camera will report its location.

Step 1 Select Setting > Network > Auto Register.

The **Auto Register** interface is displayed. See Figure 4-35.

Figure 4-35 Auto registration

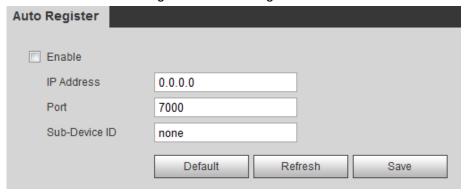

Step 2 Select the Enable check box.

Step 3 Set up auto registration parameters. See Table 4-19.

Table 4-19 Auto registration parameter description

Parameter	Description
IP Address	IP address or domain name to which the camera transmits its location.
Port	The port for auto registration.
Sub-device ID	Your device ID given by the server.

Step 4 Click Save to finish configuration.

# **4.2.11 Configuring 802.1X**

802.1X can control the Device's access to LAN.

Step 1 Select Setting > Network > 802.1x.

The **802.1x** interface is displayed. See Figure 4-36.

Figure 4-36 802.1x



Step 2 Select the Enable check box.

Step 3 Set up 802.1x parameters. See Table 4-20.

Table 4-20 Parameters of 802.1x

Parameter	Description
Authentication	PEAP (protected EAP protocol).
Username	The user name that was authenticated on the server.
Password	Password of your username.

Step 4 Click **Save** to finish configuration.

# 4.2.12 Configuring QoS


QoS can solve problems including network delay and congestion. It helps to assure bandwidth, reduce transmission delay, packet loss rate and delay jitter to improve service quality.

For DSCP (Differentiated Services Code Point), there are 64 priority degrees (0-63) of data packets. 0 represents the lowest and 63 the highest. Based on those differences, the 64 priority degrees will be classified as different groups. Each group occupies different bandwidth and will be abandoned accordingly. The entire configuration is to improve video quality.

### Step 1 Select Setting > Network > QoS.

The **QoS** interface is displayed. See Figure 4-37.

Figure 4-37 QoS

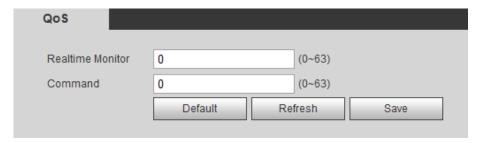

Step 2 Set up QoS parameters. See Table 4-21 for details.

Table 4-21 QoS parameter description

Parameters	Description
Real-time Monitor	Priority of the data packets that are used for network surveillance.
Command	Priority degree used for the Device's configuration and check which
Command	do not concern those surveillance data bags.

Step 3 Click **Save** to finish configuration.

# 4.3 Peripheral

Manage the Camera's components.

# 4.3.1 Configuring IR Light

## <u>Step 1</u> Select **Setting > Peripheral > IR Light**.

The IR Light interface is displayed. See Figure 4-38.

Figure 4-38 IR light



Step 2 Configure IR light's running mode.

- **Zoom Prio**: When the camera zooms in or out the visible surveillance image, the IR light's brightness will be adjusted automatically.
- **Manual**: Adjust the IR light's brightness manually to realize the best image display effect under night vision condition.


Step 3 Click Save to finish configuration.

# 4.3.2 Configuring Wiper

#### Step 1 Select Setting > Peripheral > Wiper.

The Wiper interface is displayed. See Figure 4-39.

Figure 4-39 Wiper

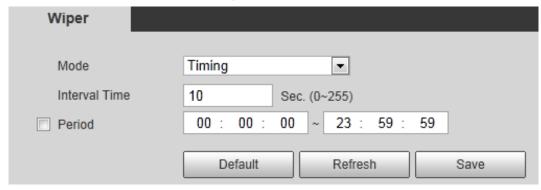

Step 2 Configure IR light's running mode.


- Timing: You can configure the Interval Time and Period.
  - 1. **Interval Time**: Interval from the point when the wiper starts to the point when the wiper stops.
  - 2. **Period**: Time when the wiper works.
  - 3. Click **Save** to finish configuration.
- Manual: Turn on and off the wiper manually.
  - 1. **Interval Time**: Interval from the point when the wiper starts to the point when the wiper stops.
  - Click Start to get the wiper work in the interval time you have just set, and if
    you think the wiper has done enough work, click Stop to end it; Click Once to
    get the wiper work for one round.

# 4.3.3 Configuring Fan

#### Step 1 Select Setting > Peripheral > Fan.

The **Fan** interface is displayed. See Figure 4-40.

Figure 4-40 Fan

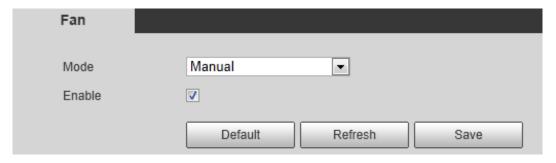

#### Step 2 Configure fan's running mode:


- Auto: Fan works automatically. Click Save to finish configuration.
- Manual: Start your fan manually. Select the Enable check box and click Save to finish configuration.

# 4.3.4 Configuring Heater

### Step 1 Select **Setting > Peripheral > Heater**.

The Heater interface is displayed. See Figure 4-41.

Figure 4-41 Heater

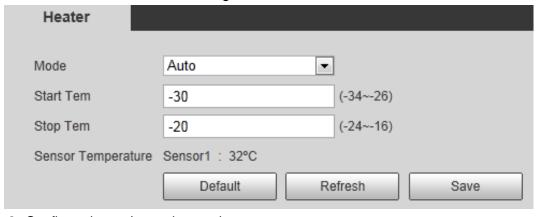

Step 2 Configure heater's running mode:

- Auto: Select Start Tem and Stop Tem as the temperature range for heater to start, and click Save. When the sensor temperature is in the range, heater works automatically.
- Manual: When you think it's cold enough and you want to let the camera work in a
  warm condition, you can select Manual as the Mode. Select the On check box,
  and click Save to finish configuration.

## 4.4 Smart Thermal

Configure the Device's common behavior analysis, fire alarm and hot trace.

 $\square$ 

- Functions of different devices might vary, and the final interface shall prevail.
- You cannot enable common behavior analysis and fire alarm in the meanwhile.


# 4.4.1 Configuring Smart Plan

You need to enable smart plan before intelligent rules function.

Step 1 Select **Setting > Event > Smart Plan**.

The **Smart Plan** interface is displayed. See Figure 4-42.

Figure 4-42 Smart Plan

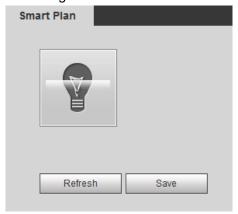

Step 2 Select a preset in Add Plan.

A solution corresponding to presets is displayed.

You need this step only when presets are supported in your Device.

Step 3 Click the icon in the **Smart Plan** interface.

- The icon you have selected will be lighted.
- Click the icon again to cancel the smart plan.

Step 4 Click **Save** to finish configuration.

## 4.4.2 Configuring IVS

# 4.4.2.1 Basic Scene-Selecting Requirements

The target should occupy no more than 10% of the whole image.

- The pixel of the target should be no less than 10×10; the pixel of abandoned object should be no less than 15×15(CIF image); the width and height of the target should be no more than 1/3 that of the image; it is recommended that the height of the target should be set to 10% of the image height.
- The brightness difference of the target and the background should be no less than 10 gray levels.
- The target should be continuously present in the image for no less than 2 seconds, and the
  moving distance should be larger its width and no less than 15 pixels (CIF image) at the
  same time.
- Try to reduce the scene complexity as much as condition allowed; it is not recommended
  to use Intelligence Behavior Analysis in scenes with intensive targets, changing lighting
  conditions or small difference between target temperature and scene temperature.
- Try to avoid the following scenes: scenes with reflective surfaces such as glass, bright ground or water; scenes that disturbed by tree branches, shadows or winged insects; scenes that against light or under direct light exposure. Control image proportion of objects that are with high relative ambient temperature.

## 4.4.2.2 Configuring Intelligent Rules

After enabling smart plan, you can set IVS (intelligent rules) covering tripwire, intrusion, abandoned object and missing object.

Preset spots that have been endowed with smart plan represent green.

### 4.4.2.2.1 Configuring Tripwire

When the target crosses the warning line toward the direction, an alarm is triggered.

## Preparation

You have set smart plan of presets or channels. See "4.4.1 Configuring Smart Plan" for detailed operations.

## Procedure

Step 1 Select Setting > Smart Thermal > IVS > IVS.

The IVS interface is displayed.

Step 2 Select a preset spot.

The camera turns to the spot.

This step is required only when preset spot function is carried on this interface.

Step 3 Set up tripwire rules.

1) Click  $\blacksquare$  and then double-click the rule you have just added to set up its name. Select **Tripwire** as the type. See Figure 4-43.

IVS Global Setup Channel 1 v Preset Preset1 • ✓ 1 Rule1 Tripwire . Parameter Setup Period Setting A<->B -Direction Draw Rule Clear Record 1 2 Sec. (10~300) Record Delay Target Filter 8191 \* 8191 Draw Target 1 2 Relay-out Min Size Alarm Delay 10 Sec. (10~300) Send Email ☐ PTZ ▼ Snapshot 1 2

Figure 4-43 Tripwire

2) Click **Draw Rule** to draw a rule on surveillance image. Right-click to end drawing.

Default

Refresh

Save

Click Clear to delete all the tripwires.

- 3) Select **Maximum Size** or **Minimum Size** and click **Draw Target**. Then you can drag the filter box's corner to make the box larger or smaller.
  - •An alarm is triggered only when size of the target that is crossing tripwire lies between the two filter boxes.
  - When drawing a rule, you can select Maximum Size or Minimum Size and click
     Clear to delete a relevant filter box.
- 4) Set up tripwire parameters. See Table 4-22 for details.

Table 4-22 Tripwire parameter description

Parameters	Description
	Define a period during which the alarm settings are active.
	Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	Method 1: Hold down and drag the left mouse button to select a
	period you need.
Working	<ul> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click</li> </ul>
Period	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven Settings altogether each of
	which corresponds to a day in a week. Select a Setting you
	want and there are six periods (period1-period6) below for you
	to pick up.
	Click <b>Save</b> to finish configuration of period.

Parameters	Description
Direction	Configure the target moving direction for tripwire alarm, you can select A->B, B->A and A<->B.
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To check and reset recorded videos' storage path, see "4.1.2.5 Configuring Storage Path".</li> <li>Two more conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>
Record Delay	The record keeps running for the set time after alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as flashlights and alarm whistles. When an alarm is triggered, alarm devices connected to the relay-out port will work. Select the check box to enable this function.
Alarm Delay	The Alarm linkage keeps running for the set time after alarm is ended.
Send email	Enable this function. An e-mail will be delivered to the device user once the alarm is triggered.  Set your e-mail first before enabling this function. See "4.2.5 Configuring SMTP" for detailed operations.
PTZ	Select the check box of PTZ and select an item from None, Preset, Tour, and Pattern in the Activation bar. Once an alarm is triggered, your PTZ will execute the item you have selected in the Activation bar.  Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed operations.
Snapshot	<ul> <li>Enable this function and Snapshot will be triggered once there is an alarm.</li> <li>To check and set snapshots' storage path, see "4.1.2.5 Configuring Storage Path".</li> <li>Enable motion-detecting snapshots first before enabling this function. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> </ul>

<u>Step 4</u> Click **OK** to finish configuration.

## 4.4.2.2.2 Configuring Intrusion

When a target is crossing or appears in the area you have set up, an alarm is triggered.

# Preparation

You have set up preset spots or tunnels' smart plan. See "4.4.1 Configuring Smart Plan" for detailed operations.

### **Procedure**

Step 1 Select Setting > Smart Thermal > IVS > IVS.

The **IVS** interface is displayed.

Step 2 Select a preset in Preset bar.


The camera turns to the position.

This step is required only when preset dot function is carried on this interface.

Step 3 Set up area invasion rules.

1) Click  $\blacksquare$  and then double-click the rule you have just added to set up its name. Select **Area Invasion** as the type. See Figure 4-44.

Figure 4-44 Intrusion

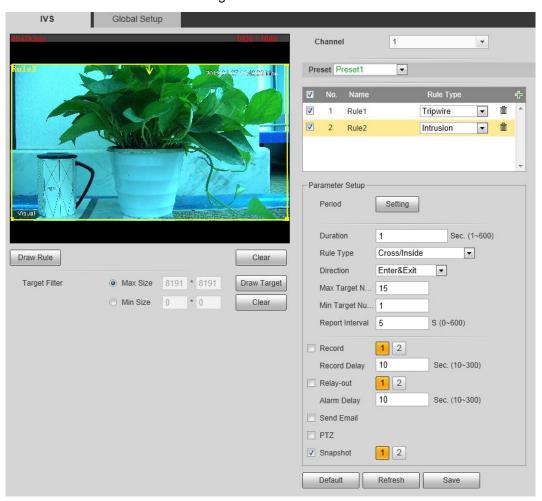

2) Click **Draw Rule** to draw a monitoring area on surveillance image. Right-click to end drawing.

 $\square$ 

- It requires certain residence time and moving space for the target to be confirmed, so leave some space around warning area during configuration and do not set it near obstacles.
- In Rule Type bar, when you select Cross/Inside, you need to modify your rule box to leave some detecting area around the box.

- Click Clear to delete monitoring area you have set up.
- 3) Select **Maximum Size** or **Minimum Size** and click **Draw Target**. Then you can drag the filter box's corner to make the box larger or smaller.

- An alarm is triggered only when size of target that is crossing your monitoring area lies between the two filter boxes.
- When drawing a rule, you can select Maximum Size or Minimum Size and click Clear to delete a relevant filter box.
- 4) Set up intrusion parameters. See Table 4-23 for details.

Table 4-23 Intrusion parameters

Parameters	Description
Period	<ul> <li>Define a period during which the alarm settings are active.</li> <li>Click Setting, and the period setting interface is displayed.</li> <li>Configure period. <ul> <li>Method 1: Hold down and drag the left mouse button to select a period you need.</li> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick up.</li> </ul> </li> <li>Click Save to finish configuration of period.</li> </ul>
Duration	The shortest time from placing an object in the detection area to an alarm is triggered.
Rule Type	<ul> <li>Set area intrusion rules.</li> <li>Cross: An alarm is triggered when an object is entering or leaving the area.</li> <li>Inside: An alarm is triggered when an object appears in the area.</li> <li>Cross/Inside: An alarm is triggered when an object is entering, leaving or appears in the area.</li> </ul>
Direction	Set this parameter when you select <b>Cross</b> or <b>Cross/Inside</b> as your <b>Rule Type</b> .  You can select from <b>Enters</b> , <b>Exits</b> and <b>Enters &amp; Exits</b> .
Max Target Number	Set this parameter when you select <b>Inside</b> or <b>Cross/Inside</b> as your <b>Rule Type</b> .  Set a maximum target number and when targets' number in your area is larger than the number you have set, an alarm is frozen and does Not function.
Min Target Number	Set this parameter when you select <b>Inside</b> or <b>Cross/Inside</b> as your <b>Rule Type</b> .  Set a minimum target number and when targets' number in your area is smaller than the number you have set, an alarm is frozen and does Not function.

Parameters	Description
Report	Set this parameter when you select Inside or Cross/Inside as your Rule
•	Туре.
Interval	Set the shortest time between a target appears and an alarm is triggered.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	• To view and set storage path of recorded videos, see "4.1.2.5"
	Configuring Storage Path".
Record	The following two conditions must be satisfied before alarm
	recording function works:
	♦ You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	♦ You have enabled auto recording. See "4.7.3 Configuring"
	Record Control Parameters" for detailed operations.
Record Delay	Set a length of time for the Device to delay turning off recording after an
Trecord Belay	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	The Alarm linkage keeps running for the set time after alarm is ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5"
	Configuring SMTP" for detailed operations.
	Select the check box of PTZ and select an item from None, Preset,
	<b>Tour</b> , and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your
PTZ	PTZ will execute the item you have selected in the <b>Activation</b> bar.
	Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
Snapshot	Select the <b>Snapshot</b> check box to take a snapshot when there is an
	alarm.
	To view and set storage path of snapshots, see "4.1.2.5 Configuring"
	Storage Path."
	To make the snapshot function take effect, you need to firstly enable
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.

Step 4 Click **OK** to finish configuration.

## 4.4.2.2.3 Configuring Abandoned Object

When the object is placed in the detection area longer than the defined period, the system activates alarms and links the configured actions.

## Preparation

You have enabled detection to general behaviors. For detailed operations, see "4.4.1 Configuring Smart Plan."

## Procedure

Step 1 Select Setting > Smart Thermal > IVS > IVS.

The IVS interface is displayed.

Step 2 Select a preset in **Preset** bar.


The camera turns to the position.

 $\square$ 

This step is required only when preset is supported by the Device.

Step 3 Configure rules.

1) Click and then double-click the rule you have just added to set up its name. In the Rule Type list, select Abandoned Object. See Figure 4-45.

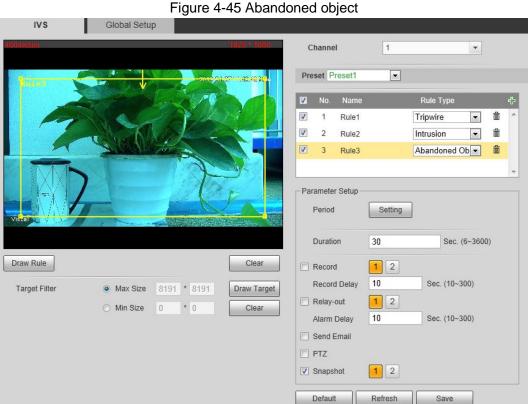

Click Draw Rule to draw a monitoring area on surveillance image. Right-click to end drawing.

 $\square$ 

- Pedestrians or cars might stay in your area and trigger an alarm. To filter this kind of alarm, you can set your targets' maximum size and ensure the size is smaller than people and vehicle.
- Click Clear to delete monitoring area you have set.
- Select Max Size or Min Size, then click Draw Target, and then drag the filter box's corner to adjust the box's size to your requirement.



- An alarm is triggered only when size of abandoned objects lies between the two filter boxes.
- When drawing a rule, you can select **Max Size** or **Min Size** and click **Clear** to delete a relevant filter box.
- 4) Configure abandoned object parameters. See Table 4-24 for details.

Table 4-24 Abandoned object parameters

Table 4-24 Abandoned object parameters		
Parameter	Description	
Period	<ol> <li>Define a period during which the alarm settings are active.</li> <li>Click Setting, and the period setting interface is displayed.</li> <li>Configure period.         <ul> <li>Method 1: Hold down and drag the left mouse button to select working period you need.</li> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick up.</li> </ul> </li> <li>Click Save to finish configuration of working period.</li> </ol>	
Duration	The shortest time from placing an object in the detection area to an alarm is triggered.	
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>	
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.	
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.	
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.	
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the device user once an alarm is triggered.  Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5 Configuring SMTP" for detailed operations.	

Parameter	Description
	Select the check box of PTZ and select an item from None, Preset,
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your
	PTZ will execute the item you have selected in the <b>Activation</b> bar.
PTZ	
	Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
	Select the <b>Snapshot</b> check box to take a snapshot when there is an
	alarm.
Snapshot	
	<ul> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring</li> </ul>
	Storage Path".
	To make the snapshot function take effect, you need to firstly enable
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.

Step 4 Click **Save** to finish configuration.

## 4.4.2.2.4 Configuring Missing Object

When an object is taken away from the detection area and the absent time of the object is longer than the defined one, an alarm will be triggered and linked activities will be executed.

## Preparation

You have set smart plans of presets or channels. See "4.4.1 Configuring Smart Plan" for detailed operations.

### Procedure

Step 1 Select Setting > Smart Thermal > IVS > IVS.

The IVS interface is displayed.

Step 2 Select a preset in **Preset** bar.

The camera turns to the position.

This step is required only when preset is supported by the Device.

- Step 3 Set up rules about those missing objects
  - 1) Click  $\blacksquare$  and then double-click the rule you have just added to set its name. In the **Rule Type** list, select **Missing Object**. See Figure 4-46.

IVS Channel 1 Preset Preset1 • • Tripwire Rule1 1 Intrusion 1 Abandoned Ob ▼ Missing Object ▼ Rule4 Parameter Setup Period 30 Sec. (6~3600) Duration Draw Rule Clear 1 2 Record Sec. (10~300) 10 Record Delay Target Filter Max Size 8191 \* 8191 Draw Target Relay-out 1 2 \* 0 Min Size Sec. (10~300) Alarm Delay 10 Send Email ☐ PTZ 1 2 ▼ Snapshot Default Refresh

Figure 4-46 Missing object

 Click **Draw Rule** to draw a monitoring area on surveillance image. Right-click to end drawing.

Click Clear to delete monitoring area you have set.

3) Select **Max Size** or **Min Size**, then click **Draw Target**, and then drag the filter box's corner to adjust the box's size to your requirement.

 $\square$ 

- An alarm is triggered only when size of the missing object lies between the two filter boxes.
- When drawing a rule, you can select Max Size or Min Size and click Clear to delete a relevant filter box.
- 4) Configure missing object parameters. See Table 4-25 for details.

Table 4-25 Missing object parameters

Parameter	Description
Parameter	<ul> <li>Description</li> <li>Define a period during which the alarm settings are active.</li> <li>1. Click Setting, and the period setting interface is displayed.</li> <li>2. Configure period.</li> <li>Method 1: Hold down and drag the left mouse button to select working period you need.</li> </ul>
Period	<ul> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick.</li> <li>Click Save to finish configuration of working period.</li> </ul>

Parameter	Description
Duration	The shortest time from placing an object in the detection area to an alarm
	is triggered.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	To view and set storage path of recorded videos, see "4.1.2.5"  Out in the set of t
Record	Configuring Storage Path".
Record	<ul> <li>The following two conditions must be satisfied before alarm recording function works:</li> </ul>
	<ul> <li>You have enabled motion detection recording. See "4.7.1.1</li> </ul>
	Configuring Video Recording" for detailed operations.
	<ul> <li>You have enabled auto recording. See "4.7.3 Configuring</li> </ul>
	Record Control Parameters" for detailed operations.
	Set a length of time for the Device to delay turning off recording after an
Record Delay	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
Alailli Delay	event is actually ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5"
	Configuring SMTP" for detailed operations.
	Select the check box of PTZ and select an item from None, Preset,
	<b>Tour</b> , and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your
PTZ	PTZ will execute the item you have selected in the <b>Activation</b> bar.
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
Snapshot	Select the <b>Snapshot</b> check box to take a snapshot when there is an
	alarm.
	<ul> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path".</li> </ul>
	<ul> <li>To make the snapshot function take effect, you need to firstly enable</li> </ul>
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.

Step 4 Click **OK** to finish configuration.

# 4.4.2.3 Configuring Global Setup

Preparation


You have set smart plans of presets or channels. See "4.4.1 Configuring Smart Plan" for detailed operations.

### **Procedure**

### Step 1 Select Setting > Smart Thermal > IVS > Global Setup.

The **Global Setup** interface is displayed. See Figure 4-47.

Figure 4-47 Global setup

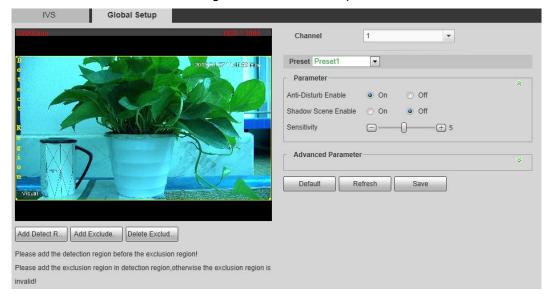

### Step 2 Select a preset in Preset bar.

The camera turns to the position.



You need this step only when presets are supported in this Device.

### Step 3 Add detected area and excluded area.

1) Click **Add Detect Region** to draw a detected area on surveillance image. Right-click to end drawing.



## Click Add Detect again to redraw.

2) Click **Add Excluded Area** to draw an excluded area on surveillance image. Right-click to end drawing.



- Click Delete Excluded Area to delete the excluded area.
- An excluded area takes effect only when it has been drawn in the detected area.
- Multiple excluded areas can be drawn in the detected area.

<u>Step 4</u> Configure global setup parameters. See Table 4-26 for details.

Table 4-26 Global setup parameters

Parameter	Description
Anti-Disturb Enable	Select the <b>On</b> check box to enable this function.
	This function is aimed at eliminating disturbance caused by shaking
	leaves or waving water.

Parameter	Description
Shadow Screen Enable	Select the <b>On</b> check box to enable this function.
	This function is aimed at eliminating an object's shadow and
	representing only the object itself in the object box; several objects
	with their shadows partly overlaid can be told separately. So this
	function can give user a precise clue of where the object really
	locates. However, if an object's part looks like the object's shadow,
	it's likely that this part will be identified as a shadow and eliminated.
Sensitivity	The larger this value is, the easier an alarm will be to be triggered by
	low-contrast or tiny objects.
Isotherm Filter	Select the On check box and set Upper Limit Threshold and
	Lower Limit Threshold on your own needs.
	This function is aimed at diminishing false alarms caused by waving
	water.
Tracking Overlap Rate	When overlap rate of an object at this moment and at earlier time is
	smaller than the rate you have set, this object can be detected and
	an alarm is triggered.
Valid Tracking Distance	Only when an object's moving distance is larger than valid tracking
	distance you have set, this object can be detected and an alarm is
	triggered.
Valid Tracking	Only when an object's moving time is larger than valid tracking time
Time	you have set, this object can be detected and an alarm is triggered.

Step 5 Click **Save** to finish configuration.


# 4.4.3 Configuring Fire Warning

The system will give out an alarm once a fire is detected.

Step 1 Select Setting > Smart Thermal > Fire Warning.

The **Fire Warning** interface is displayed. See Figure 4-48.

Figure 4-48 Fire warning

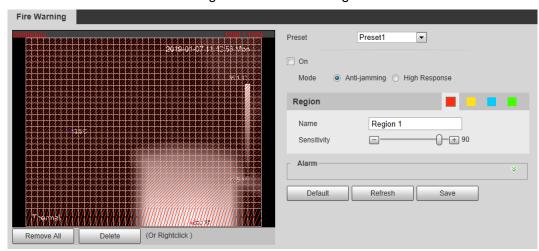

Step 2 Select a preset.

The camera turns to the position.

This step is required only when preset is supported by your Device.

Step 3 Select the **On** check box.

#### Step 4 Set rules of fire warning.

1) Select fire warning mode on your own needs.



High response mode is your only option when you want your camera to detect any a hidden fire danger.

- Anti-jamming: Your camera will only detect those objects that are newly with high temperature and send off alarms. That means under Anti-jamming mode, a constantly high-temperature object (a boiler, for example) is excluded.
- **High Response**: Your camera will detect any a hidden fire danger and send off alarms.
- 2) Select a color in \_\_\_\_\_. Each color represents a certain area which you can draw with your left mouse button. You can also give a name to the area you have drawn and set its sensitivity.

The larger the sensitivity is, the easier a fire will be triggered.

3) Set up fire warning parameters. See Table 4-27 for details.

Table 4-27 Fire warning parameters

Parameter	Description
Period	<ol> <li>Define a period during which the alarm settings are active.</li> <li>Click Setting, and the period setting interface is displayed.</li> <li>Configure period.         <ul> <li>Method 1: Hold down and drag the left mouse button to select working period you need.</li> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick up.</li> </ul> </li> <li>Click Save to finish configuration of working period.</li> </ol>
Duration	The shortest time from placing an object in the detection area to an alarm is triggered.
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>

Parameter	Description
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the device user once an alarm is triggered.
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5 Configuring SMTP" for detailed operations.
PTZ	Select the check box of PTZ and select an item from None, Preset, Tour, and Pattern in the Activation bar. Once an alarm is triggered, your PTZ will execute the item you have selected in the Activation bar.  Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed operations.
Snapshot	<ul> <li>Select the Snapshot check box to take a snapshot when there is an alarm.</li> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path."</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> </ul>

<u>Step 5</u> Click **Save** to finish configuration.


# **4.4.4 Configuring Hot Trace**

You can enable **Hot Trace** to track spot with the highest temperature and spot with the lowest temperature.

Step 1 Select **Setting > Smart Thermal > Hot Trace**.

The **Hot Trace** interface is displayed. See Figure 4-49.

Figure 4-49 Hot trace

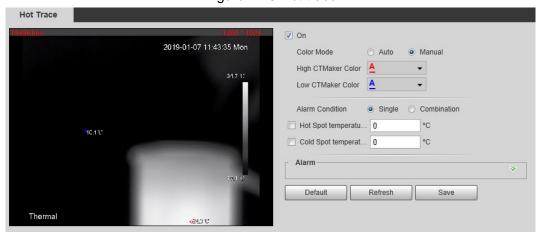

Step 2 Select the On check box.

Step 3 Configure parameters of cold/hot spot tracking. See Table 4-28 for details.

Table 4-28 Parameters of hot trace

Parameters	Description
Color Mode	Select a color for cold and hot spots.
	Auto: Select colors for the highest/lowest temperature automatically
	according to surveillance images.
	Manual: Define colors for the highest/lowest temperature.
	Conditions under which an alarm is triggered.
	Single
	Select the Hot Spot temperature more than check box and
	when the highest temperature is larger than the temperature
	you have set, an alarm is triggered.
	Select the Cold Spot temperature less than check box and
Alarm	when the lowest temperature is smaller than the temperature
Condition	you have set, an alarm is triggered.
	If you select both conditions above at one time, an alarm is
	triggered once any one condition is satisfied.
	Combination
	Only when the highest temperature is larger and the lowest
	temperature is smaller than the temperature you have set, an alarm
	is triggered.
	Define a period during which the alarm settings are active.
	Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	Method 1: Hold down and drag the left mouse button to select
	working period you need.
Period	<ul> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click</li> </ul>
Fellou	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven Settings altogether each of
	which corresponds to a day in a week. Select a Setting you
	want and there are six periods (period1-period6) below for you
	to pick up.
	3. Click <b>Save</b> to finish configuration of working period.

Parameters	Description
Anti-Dither	Only one motion detection event is recorded within the time you have set.
	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> </ul>
Record	<ul> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the device user once an alarm is triggered.  Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5 Configuring SMTP" for detailed operations.
PTZ	Select the check box of PTZ and select an item from None, Preset, Tour, and Pattern in the Activation bar. Once an alarm is triggered, your PTZ will execute the item you have selected in the Activation bar.  Set PTZ first before enabling this function. See "3.2 PTZ" for detailed operations.
Snapshot	<ul> <li>Select the Snapshot check box to take a snapshot when there is an alarm.</li> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path".</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> </ul>

Step 4 Click **Save** to finish configuration.

Effect of hot trace is as shown in Figure 4-50.

The thermal camera can be classified as temperature-measuring model and observation model according to whether it carries temperature-measuring function. Cold/Hot spot's temperature is not displayed on the Device of observing model.

Figure 4-50 Effect of hot trace



## 4.4.5 Configuring Pic in Pic

Put the thermal image that has shrunk on the visible image.

Step 1 Select **Setting > Smart Thermal > Pic in Pic**.

The **Pic in Pic** interface is displayed. See Figure 4-51.






- Step 2 Select the **Enable** check box.
- Step 3 Drag the blue box's angle to enlarge the box. Click in the box and drag your mouse to adjust the box's location.
- Step 4 Click **Save** to finish configuration.

## 4.4.6 Configuring Link Schedule

Step 1 Select **Setting > Smart Thermal > Link Schedule**.

The **Link Schedule** interface is displayed. See Figure 4-52.

Figure 4-52 Link schedule

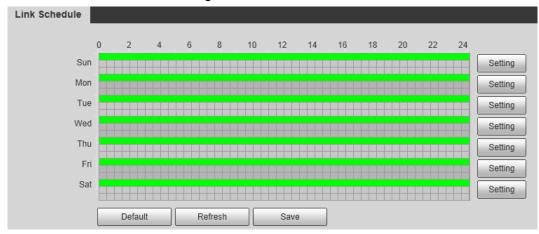


Step 2 Configure periods for each weekday.



In Figure 4-52, you can hold your mouse's left button to directly drag a period bar for each weekday.

1) In Figure 4-52, click **Setting** next to the green bar and the dialogue box of **Setting** is displayed. See Figure 4-53.

Figure 4-53 Setting

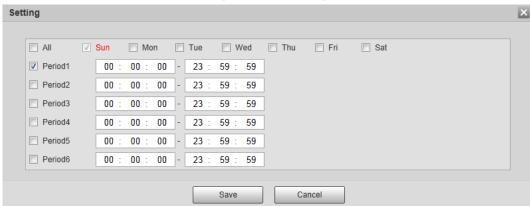

2) Select a weekday and a period. Then you can define the period.



When you select the check box of **All**, you're doing period settings towards all weekdays.

3) Click Save. You return to the Link Schedule interface.

Step 3 Click Save to finish configuration.

### 4.5 Event

# 4.5.1 Configuring Video Detection


## 4.5.1.1 Configuring Motion Detection

When an object appears and moves fast enough to reach the sensitivity value you have set, the object will be detected and an alarm will be triggered.

<u>Step 1</u> Select **Setting > Event > Video Detection > Motion Detection**.

The Motion Detection interface is displayed. See Figure 4-54.


Figure 4-54 Motion detection setting

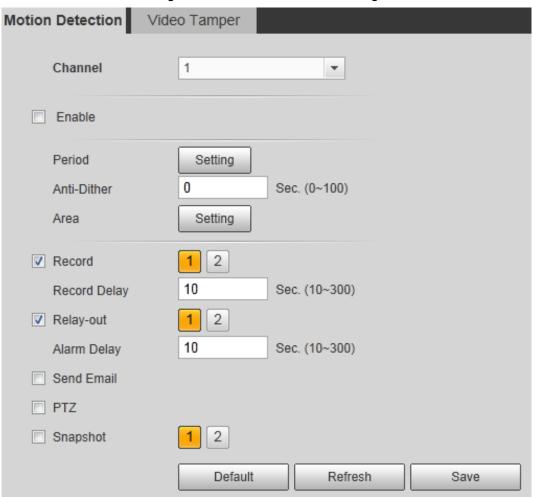

- Step 2 Select the **Enable** check box.
- Step 3 Configure a motion detection area.
  - 1) Next to **Area**, click **Setting**.

The Area interface is displayed. See Figure 4-55.

Figure 4-55 Area configuration

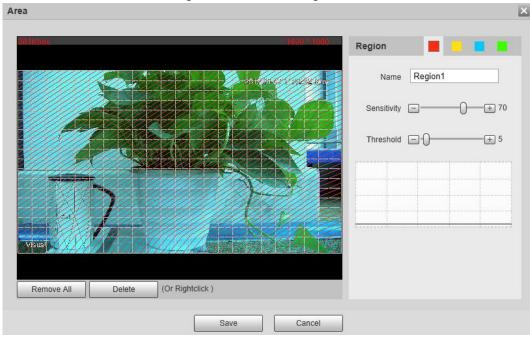

2) Set area name and select motion detection areas as needed. You can configure the sensitivity and mutation threshold. The threshold defines the allowed moving area for certain objects. The motion detection will not be triggered as long as those objects stay within the area.

- The higher the sensitivity value is, the easier the motion detection will be triggered; the lower the mutation threshold is, the smaller the allowed moving area for certain objects is, hence the easier the motion detection will be triggered.
- Different colors represent different area. For each area, you can set different sensitivity and mutation threshold.
- In the wave diagram, red line represents motion detection is triggered, and green line represents not.
- 3) Click **Save** to finish configuration.

Step 4 Configure motion detection parameters. See Table 4-29 for details.

Table 4-29 Motion detection parameters

	l able 4-29 Motion detection parameters
Parameter	Description
Period	<ol> <li>Define a period during which the alarm settings are active.</li> <li>Click Setting, and the period setting interface is displayed.</li> <li>Configure period.         <ul> <li>Method 1: Hold down and drag the left mouse button to select working period you need.</li> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick up.</li> </ul> </li> <li>Click Save to finish configuration of working period.</li> </ol>
Anti-Dither	The system records only one motion detection event within the set time.
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.

Parameter	Description
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
	event is actually ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5"
	Configuring SMTP" for detailed operations.
	Select the check box of PTZ and select an item from None, Preset,
	<b>Tour</b> , and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your
	PTZ will execute the item you have selected in the <b>Activation</b> bar.
PTZ	
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
	Select the <b>Snapshot</b> check box to take a snapshot when there is an
	alarm.
Snapshot	To view and set storage path of snapshots, see "4.1.2.5 Configuring"
Зпарѕпос	Storage Path."
	To make the snapshot function take effect, you need to firstly enable
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.

Step 5 Click **Save** to finish configuration.


# 4.5.1.2 Configuring Video Temper

When your camera lenses are masked, an alarm will be triggered.

Step 1 Select Setting > Event > Video Detection > Video Temper.

The Video Temper interface is displayed. See Figure 4-54.

Figure 4-56 Video temper

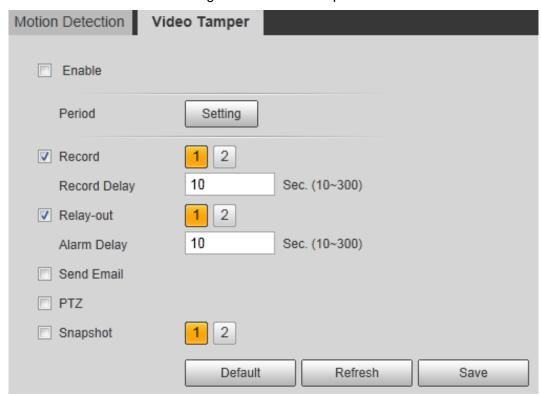

Step 2 Select the **Enable** check box.

Step 3 Configure video temper parameters. See Table 4-29 for details.

Table 4-30 Parameters description

Parameter	Description
	Define a period during which the alarm settings are active.
	Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	Method 1: Hold down and drag the left mouse button to select
	working period you need.
Period	<ul> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click</li> </ul>
renou	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven Settings altogether each of
	which corresponds to a day in a week. Select a Setting you
	want and there are six periods (period1-period6) below for you
	to pick up.
	3. Click <b>Save</b> to finish configuration of working period.

Parameter	Description
	Enable this function and alarm recording will be triggered when there is an alarm.
Record	<ul> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the device user once an alarm is triggered.  Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5"
	Configuring SMTP" for detailed operations.
PTZ	Select the check box of PTZ and select an item from None, Preset, Tour, and Pattern in the Activation bar. Once an alarm is triggered, your PTZ will execute the item you have selected in the Activation bar.  Set PTZ first before enabling this function. See "3.2 PTZ" for detailed operations.
Snapshot	<ul> <li>Select the Snapshot check box to take a snapshot when there is an alarm.</li> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path."</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> </ul>

Step 4 Click **Save** to finish configuration.

# 4.5.2 Configuring Audio Detection

Step 1 Select **Setting > Event > Audio detection**.

The Audio Detection interface is displayed. See Figure 4-57.

**Audio Detection** Input Abnormal Intensity Change Sensitivity □-+ 50 Threshold **=**-+ 50 Setting Period Anti-Dither 5 Sec. (0~100) ▼ Record 1 2 10 Sec. (10~300) Record Delay 1 2 ▼ Relay-out Sec. (10~300) Alarm Delay Send Email PTZ 1 2 Snapshot Default Refresh Save

Figure 4-57 Audio detection settings

Step 2 Configure parameters of audio detection. See Table 4-31 for details.

Table 4-31 Parameters of audio detection

Parameters	Description
Input	Enable this function and an alarm will be triggered when there is
Abnormal	abnormal audio input.
Intensity	Enable this function and an alarm will be triggered when the change of
Change	sound intensity exceeds the threshold you have set.
Sensitivity	Volume change of input audio can be identified as audio abnormality only
	when volume change of input audio is larger than the lasting environment
	volume. You need to set the lasting environment volume on your own
	needs.
Threshold	Set the ambient sound intensity you need to filter. The louder the ambient
	noise is, the bigger this value should be, you can Adjust and test this
	option as needed.

Parameters	Description
	Define a period during which the alarm settings are active.
	Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	Method 1: Hold down and drag the left mouse button to select
	working period you need.
Period	Method 2: Select Setting > Event > Video Detection and click
	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven <b>Setting</b> s altogether each of which
	corresponds to a day in a week. Select a <b>Setting</b> you want and
	there are six periods (period1-period6) below for you to pick up.
	3. Click <b>Save</b> to finish configuration of working period.
Anti-Dither	The system records only one audio detection event within the set time.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	• To view and set storage path of recorded videos, see "4.1.2.5"
	Configuring Storage Path".
Record	The following two conditions must be satisfied before alarm
	recording function works:
	You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	♦ You have enabled auto recording. See "4.7.3 Configuring"
	Record Control Parameters" for detailed operations.
Record Delay	Set a length of time for the Device to delay turning off recording after an
Trocora Bolay	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
	event is actually ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5"
	Configuring SMTP" for detailed operations.
	Select the check box of PTZ and select an item from None, Preset, Tour,
PTZ	and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your PTZ
	will execute the item you have selected in the <b>Activation</b> bar.
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.

Parameters	Description
	Select the <b>Snapshot</b> check box to take a snapshot when there is an alarm.
Snapshot	<ul> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path".</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> </ul>

Step 3 Click **OK** to finish configuration.

### 4.5.3 Configuring Temperature Alarm

You can set an alarm condition. When the temperature meets the defined alarm condition, an alarm is triggered and the linked activity is executed.

This function is available on select models, and the actual interface shall prevail.

### Preparation


You have set the temperature measuring rules. See "4.6.1 Configuring Rules" for detailed operation.

#### **Procedure**

#### Step 1 Select **Setting > Event > Temperature Alarm**.

The Temperature Alarm interface is displayed. See Figure 4-58.

Figure 4-58 Temperature alarm settings

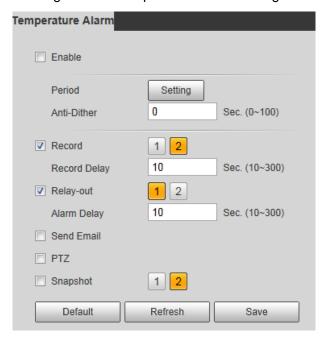

Step 2 Select the Enable check box.

Step 3 Configure parameters of temperature alarm. See Table 4-32 for details.

Table 4-32 Temperature alarm parameters

Parameter	Description
· arameter	Define a period during which the alarm settings are active.
	Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	Method 1: Hold down and drag the left mouse button to select
	working period you need.
	Method 2: Select Setting > Event > Video Detection and click
Period	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven <b>Setting</b> s altogether each of
	which corresponds to a day in a week. Select a <b>Setting</b> you
	want and there are six periods (period1-period6) below for you
	to pick up.
	3. Click <b>Save</b> to finish configuration of working period.
	Only one temperature alarm event is recorded within the time you have
Anti-dither	set.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	<ul> <li>To view and set storage path of recorded videos, see "4.1.2.5"</li> </ul>
	Configuring Storage Path".
Record	The following two conditions must be satisfied before alarm
	recording function works:
	♦ You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	♦ You have enabled auto recording. See "4.7.3 Configuring"
	Record Control Parameters" for detailed operations.
December Delevi	Set a length of time for the Device to delay turning off recording after an
Record Delay	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
, dam Delay	event is actually ended.
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5"
	Configuring SMTP" for detailed operations.
PTZ	Select the check box of PTZ and select an item from None, Preset,
	<b>Tour</b> , and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your
	PTZ will execute the item you have selected in the <b>Activation</b> bar.
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.

Parameter	Description
Snapshot	Select the <b>Snapshot</b> check box to take a snapshot when there is an
	alarm.
	<ul> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring</li> </ul>
	Storage Path".
	To make the snapshot function take effect, you need to firstly enable
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.

Step 4 Click Save to finish configuration.

### 4.5.4 Configuring Alarm

When there is an alarm from external devices, an alarm will be released and linked activities will be executed.

#### Step 1 Select **Setting > Event > Alarm**.

The **Alarm** interface is displayed. See Figure 4-59.

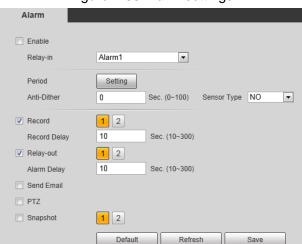


Figure 4-59 Alarm settings

Step 2 Select the Enable check box.

3.

Step 3 Configure Relay activation parameters. For detailed description, see Table 4-33.

**Parameters** Description Relay-in Select an external alarm device. Define a period during which the alarm settings are active. 1. Click **Setting**, and the period setting interface is displayed. 2. Configure period. Method 1: Hold down and drag the left mouse button to select working period you need. Period Method 2: Select Setting > Event > Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick up.

Click Save to finish configuration of working period.

Table 4-33 Alarm parameters

Parameters	Description	
Anti-dither	Only one temperature alarm event is recorded within the time you have set.	
Sensor type	You can select from normally open (NO) and normally closed (NC).	
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path."</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>	
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.	
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.	
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.	
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the device user once an alarm is triggered.  Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5 Configuring SMTP" for detailed operations.	
PTZ	Select the PTZ check box and select an item from None, Preset, Tour, and Pattern in the Activation bar. Once an alarm is triggered, your PTZ will execute the item you have selected in the Activation bar.  Set PTZ first before enabling this function. See "3.2 PTZ" for detailed operations.	
Snapshot	<ul> <li>Select the Snapshot check box to take a snapshot when there is an alarm.</li> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path".</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> </ul>	

Step 4 Click **Save** to finish configuration.

# **4.5.5 Configuring Abnormality**

Abnormality covers events of SD card, network and illegal access and burning warning.



The "No SD Card", "SD Card Error" and "Capacity Warning" events are available only on models that support SD card.


### 4.5.5.1 Configuring SD Card Abnormality Parameters

When any abnormality happens to the SD card, an alarm will be triggered and linked activities will be executed. SD card abnormality includes "No SD card", "SD Card Error" and "Capacity Warning."

#### Step 1 Select Setting > Event > Abnormality > SD Card.

The **SD Card** interface is displayed. See Figure 4-60.

Figure 4-60 SD card

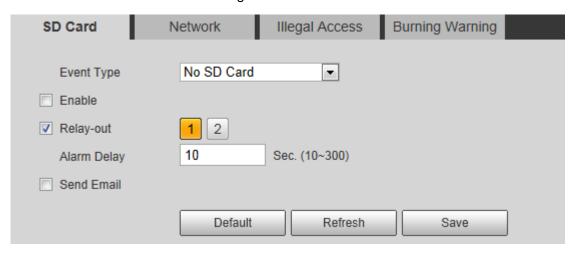

Step 2 Select an event type.

Step 3 Select the Enable check box.

Step 4 Configure SD card abnormality parameters. For detailed description, see Table 4-34.

Table 4-34 SD card parameter description

Parameters	Description
	This parameter can be configured only when the event type is
Minimum storage	"capacity warning."
space in SD card	Configure the free space percentage, and if the free space in the SD
	card is lower than the set percentage, the alarm is triggered.
	You can connect this relay-out port to alarm devices such as light
Relay-out	and siren. When an alarm is triggered, those alarm devices will work.
	Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
	event is actually ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to
Send Email	the device user once an alarm is triggered.
	Set your e-mail first before enabling the <b>Send Email</b> function. See
	"4.2.5 Configuring SMTP" for detailed operations.

Step 5 Click **Save** to finish configuration.


### 4.5.5.2 Configuring Network Abnormality Parameters

When any abnormality happens to network, an alarm will be triggered and linked activities will be executed. Network abnormality includes "Disconnection" and "IP conflict."

#### Step 1 Select Setting > Event > Abnormality > Network.

The **Network** interface is displayed. See Figure 4-61.

Figure 4-61 Network

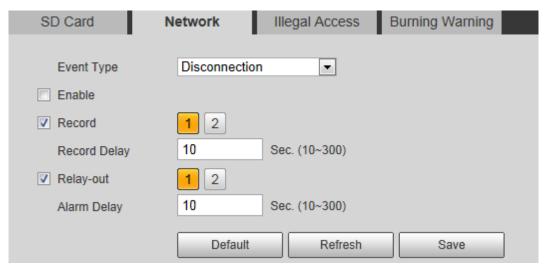

- Step 2 Select an event type.
- Step 3 Select the **Enable** check box.
- Step 4 Configure network abnormality parameters. See Table 4-35 for details.

Table 4-35 Network parameter description

Parameter	Description
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>
Record	Set a length of time for the Device to delay turning off recording after an
Delay	alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and
	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Dalay	Set a length of time for the Device to delay turning off alarm after an event
Alarm Delay	is actually ended.

Step 5 Click **Save** to finish configuration.


#### 4.5.5.3 Configuring Illegal Access Parameters

If the password is continuously wrongly typed and the mistakes have reached the maximum you have set, an alarm will be triggered and linked activities will be executed.

#### Step 1 Select Setting > Event > Abnormality > Illegal Access.

The **Illegal Access** interface is displayed. See Figure 4-62.

Figure 4-62 Illegal access

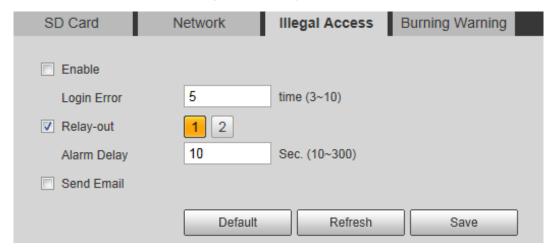

Step 2 Select the **Enable** check box.

Step 3 Configure illegal access parameters. See Table 4-36 for details.

Table 4-36 Illegal access parameter description

Parameters	Description
	The number of times that the login password is allowed to be
	wrongly entered for.
Login error	When the login password has been wrongly entered for more than
	the set times, the account is locked. You need to wait 30 minutes
	before your account is unlocked.
	You can connect this relay-out port to such alarm devices as light
Relay-out	and siren. When an alarm is triggered, those alarm devices will work.
	Select the check box to enable this function.
Alarm Dolay	Set a length of time for the Device to delay turning off alarm after an
Alarm Delay	event is actually ended.
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to
	the device user once an alarm is triggered.
	Set your e-mail first before enabling the <b>Send Email</b> function. See
	"4.2.5 Configuring SMTP" for detailed operations.

Step 4 Click **Save** to finish configuration.

## 4.5.5.4 Configuring Lenses Anti-Burning

Configure the lenses' anti-burning parameters and when the lenses are watching directly towards the sun and face the potential burning, the camera will automatically turn to other positions to avoid.




This function is supported on select models and the actual interface shall prevail.

#### Step 1 Select Setting > Event > Abnormality > Burning Warning.

The **Burning Warning** interface is displayed. See Figure 4-63.

Figure 4-63 Burning warning

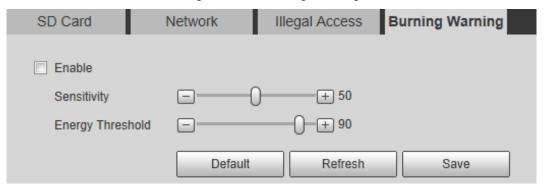

- Step 2 Select the Enable check box.
- Step 3 Configure Sensitivity and Energy Threshold:

**Sensitivity**: Sensitivity for the camera to recognize whether the lenses are watching towards the sun. The larger the value is, the easier the camera will be to recognize the sun.

**Energy Threshold**: The minimum energy value of the object watched by the lenses. Select the energy threshold to filter the low-temperature objects and improve the identification accuracy.

Step 4 Click Save to finish configuration.

# 4.6 Temperature Measuring Settings



Temperature measuring is available on select models and the actual interface shall prevail.

### 4.6.1 Configuring Rules


Configure temperature measuring rules and when alarm conditions are met, an alarm will be triggered.

### 4.6.1.1 Configuring Temperature Measuring Rules

Step 1 Select Setting > Temperature > Rule > Parameter.


The **Parameter** interface is displayed. See Figure 4-64.

Figure 4-64 Parameter

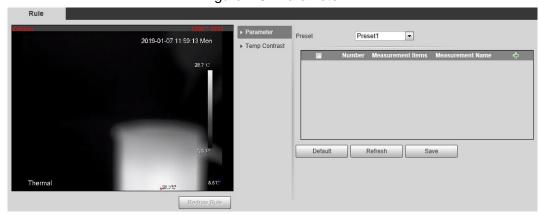

- Step 2 Configure temperature measuring rules and then parameters.
  - Click to add a rule.
     See Figure 4-65.

Figure 4-65 Rule adding

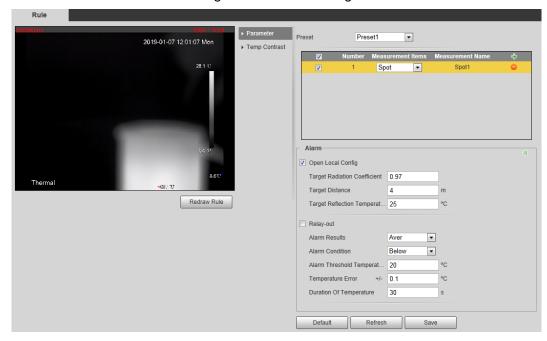

- Double-click the rule you have just added to select measurement items and modify the measurement name.
- 3) Draw your rules.
  - Select Measurement Items as Spot, and you can click a position on the surveillance image and a spot is formed.
  - Select **Measurement Items** as **Line**, **Rectangle** or **Ellipse**, and you can hold the left mouse button to draw rules you need on the surveillance image.
  - Select **Measurement Items** as **Polygon**, and you can hold the left mouse button to draw rules you need on the surveillance image. Right-click to end your drawing.



Select a rule you have drawn and click **Redraw Rule**. Then you can delete the rule and draw a new one.

4) Select the **Open Local Config** check box and configure parameters. See Table 4-37 for details.

Table 4-37 Parameter description of local configuration

Parameters	Description
Target Radiation	Radiation coefficient of targets that are shot by this Device.
Coefficient	Ranges from 0.5 – 1.
Target Distance	Distance from the camera to targets that are shot. Ranges from
	0m – 10000m.
Target Reflection	Temperature of targets that are shot by this Device. Ranges from
Temperature	-50 °C to 327.7 °C.

5) Enable the **Relay-out** check box and configure its parameters. See Table 4-38 for details.

Table 4-38 Parameter description of relay-out

Parameter	Description
	Temperature's display items.
	Select Measurement Items as Spot, and average temperature
	and temperature slope will be displayed.
	Select Measurement Items as Line, Rectangle, Ellipse or
	Polygon, and maximum/minimum/average temperature,
Alarm Results	temperature slope and temperature difference are displayed.
	By temperature difference, we mean the difference between
	maximum and minimum temperatures under rules you have set. By
	temperature slope, we mean temperature's varying rate under rules
	you have set.
Alarm Condition	Set alarm conditions, covering <b>Below</b> , <b>Match</b> and <b>Above</b> .
Alarm Threshold	You can set this value when you select Alarm Results as Max, Min,
Temperature	Aver, or Temperature Difference.
Temperature	Ranges from -40 °C to 550 °C.
Temperature	You can set this value when you select Alarm Results as Slope.
Slope	By temperature slope, we mean the temperature difference in each
Slope	minute. Ranges from -600 °C/min – 600 °C/min.
Temperature Error	Set a temperature error value and if the alarm threshold temperature
	or temperature slope is within the value you have set, linked alarms
	will still be triggered. Ranges from -10 °C to 10 °C.
Duration of	You can set a lasting time of abnormal temperature after which alarms
Temperature	will be triggered. Ranges from 0 – 1000s.

Step 3 Click **Save** to finish configuration.

You can watch temperature change under the rules you have set on surveillance images.

## 4.6.1.2 Configuring Temperature Contrast

You can compare temperature of spots, lines or area you have selected and display comparison results on surveillance images.

## Preparation


You have set at least two temperature testing rules. See "4.6.1.1Configuring Temperature Measuring Rules" for detailed operations.

#### **Procedure**

#### Step 1 Select Setting > Temperature > Rule > Temp Contrast.

The **Temp Contrast** interface is displayed. See Figure 4-66.

Figure 4-66 Temperature contrast

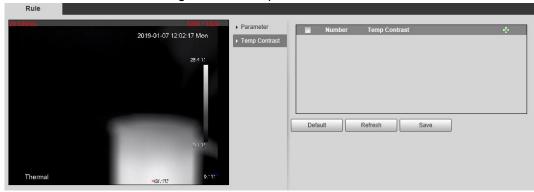

#### Step 2 Set temperature contrast rules

 Click to add a temperature contrast rule. See Figure 4-67.

Rule

2019-01-07 12:02:17 Mon

284 C

Thermal

466:19:

Parameter

Temp Contrast

Default

Refresh

Save

Figure 4-67 Temperature contrast rules adding

- 2) Double-click to add a temperature contrast rule.
- 3) Set alarm parameters. See Table 4-39.

Table 4-39 Parameters

Parameters	Description
Alarm Results	<ul> <li>You can select from the following three options to determine a standard of triggering an alarm.</li> <li>Average temperature: Compare average temperatures of two rules.</li> <li>Maximum temperature: Compare maximum temperatures of two rules.</li> <li>Minimum temperature: Compare minimum temperatures of two rules.</li> <li>When one of the two rules refers to a spot, both maximum temperature and minimum temperature are actually average temperature.</li> </ul>

Parameters	Description
Alarm Condition	Contains "lower", "matched" and "higher."
Alarm Threshold	Temperature of triggering an alarm. Ranges from 0 – 550 °C.
Temperature	

Step 3 Click Save to finish configuration.

On the left-side live image, you can view temperature contrast results of the object you have selected.

# 4.6.2 Configuring Global Setup


You can enable Temperature Switch, Isotherm and Color Code.

- Temperature Switch: A switch with which you can enable or disable temperature testing
  rules. Enable the **Temperature Switch** and the temperature testing rules you have set will
  be displayed on surveillance images.
- Isotherm: Used to highlight an object in images of high brightness. Isotherm is based on
  median temperature, with highest temperature and lowest temperature as its range. The
  part of an object whose temperature is higher than floor temperature will be represented in
  a bright color and the part of an object whose temperature is lower than floor temperature
  will be represented in a black/white color.
- Color Code: Enable this function, and a color code is displayed on the right side of surveillance images to show change of color between minimum temperature and maximum temperature.

<u>Step 1</u> Select **Setting > Temperature > Global Setup**.

The **Global Setup** interface is displayed. See Figure 4-68.

Figure 4-68 Global setup

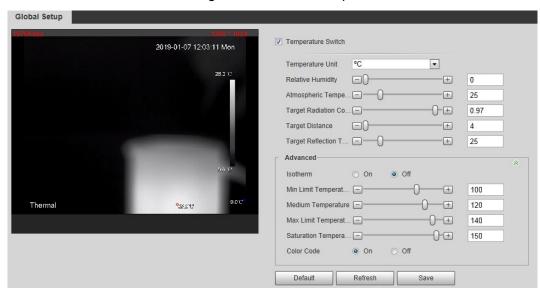

Step 2 Configure the global setup parameters. See Table 4-40 for details.

Table 4-40 Parameter description of global setup

	, e ,
Parameter	Description
Temperature	Select the check box to enable this function.
Switch	
Temperature Unit	Includes °C and °F.
Relative Humidity	Relative humidity of environment. Ranges from 0RH – 100 %RH.

Parameter	Description
Atmospheric Temperature	Temperature of our environment. Ranges from -50 °C to 327.7 °C.
Target Radiation	Set Radiation coefficient of targets that are shot by this Device.
Coefficient	Ranges from 0.5 – 1.
Target Distance	Distance from the camera to targets that are shot. Ranges from 0m – 10000m.
Target Reflection	Temperature of targets that are shot by this Device. Ranges from
Temperature	-50 °C to 327.7 °C.
	Select the <b>On</b> check box.
Isotherm	You have to make sure that floor temperature <= median
	temperature <= ceiling temperature <= saturation temperature.
	When gain mode is under low-temperature mode, value ranges
Min Limit	from -40 °C to 150 °C.
Temperature	When gain mode is under high-temperature mode, value
	ranges from -40 °C to 600 °C.
	When gain mode is under low-temperature mode, value ranges
Medium	from -40 °C to 160 °C.
Temperature	When gain mode is under low-temperature mode, value ranges
	from -40 °C to 600 °C.
Max Limit	• When gain mode is under low-temperature mode, value ranges from -40 °C to 160 °C.
Temperature	When gain mode is under low-temperature mode, value ranges
	from -40 °C to 600 °C.
	When gain mode is under low-temperature mode, value ranges
Saturation	from -40°C to 160°C.
Temperature	<ul> <li>When gain mode is under low-temperature mode, value ranges from -40 °C to 600 °C.</li> </ul>
	Select <b>On</b> to enable color code.
Color Code	A color code will be represented on the right side of surveillance
	images.

Step 3 Click **Save** to finish configuration.

Effect images are as shown in Figure 4-69, Figure 4-70, and Figure 4-71.

Figure 4-69 Temperature switch



Figure 4-70 Isotherm



Figure 4-71 Color code



## 4.6.3 Exporting Heat Map

By exporting heat map, you can grasp temperature of every pixel on thermal images.

Step 1 Select **Setting > Temperature > Heat Map**.

The **Heat Map** interface is displayed. See Figure 4-72.

Figure 4-72 Heat map setting



#### Step 2 Click Export Heat Map.

Heat map files will be saved under the path you have set. For detailed operation of resetting the storage path, see "4.1.2.5 Configuring Storage Path."

# 4.7 Storage Management

## 4.7.1 Configuring Schedule

You can set schedule of recording, snapshotting, holidays.



If the record mode is **Off** in **Storage > Record Control > Record Control** interface, the system would not record video or snapshot as scheduled.


## 4.7.1.1 Configuring Video Recording

Set video recording, covering General, Motion and Alarm.

#### Step 1 Select Setting > Storage > Schedule > Record.

The **Record** interface is displayed. See Figure 4-73.

Figure 4-73 Record

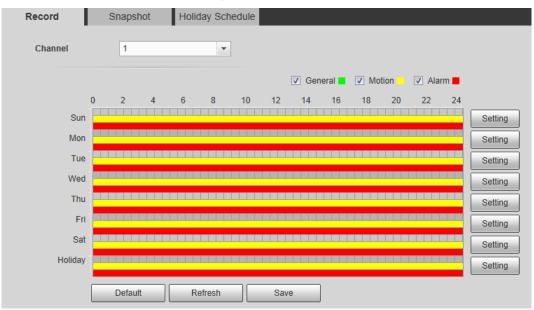


<u>Step 2</u> Select recording type and configure time period.

Select recording type, and then you can also press and hold the left mouse button to select the time period as needed in the chart.

Click the **Setting** for the day that you want to configure time period.
 The **Setting** interface is displayed. See Figure 4-74.

Figure 4-74 Setting

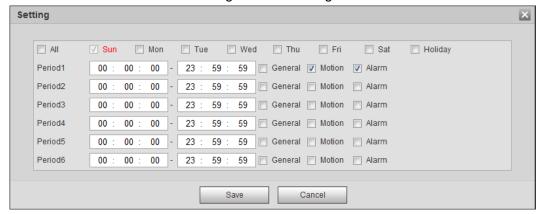

2) Select a day in a week and configure its period.



- There are 6 periods for each day.
- Select the All check box, and the entered time period will apply to the whole week. Sunday is selected by default, and you can select other days as needed.
- 3) Select the record type for the corresponding time period.
- 4) Click Save.

The system returns to the **Record** interface. Each color represents a video type. Green represents general video recording schedule, yellow represents video recording schedule under motion detection and red represents video recording schedule under alarm conditions.


### 4.7.1.2 Configuring Snapshot

Set video snapshot schedule, covering General, Motion and Alarm.

Step 1 Select Setting > Storage > Schedule > Snapshot.

The **Snapshot** interface is displayed. See Figure 4-75.

Figure 4-75 Snapshot

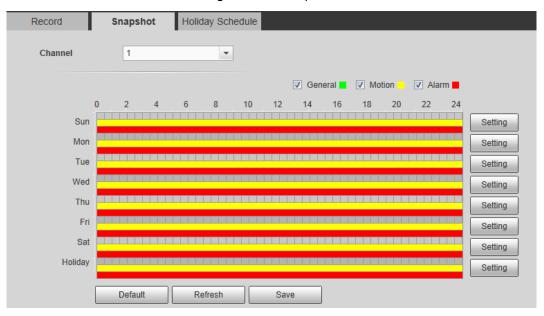


Step 2 Select snapshot type and configure time period.

Select snapshot type, and then you can also hold down the left mouse button to select the time period in the chart as needed.

Click the **Setting** for the day that you need to configure time period.
 The **Setting** interface is displayed. See Figure 4-76.

Figure 4-76 Settings

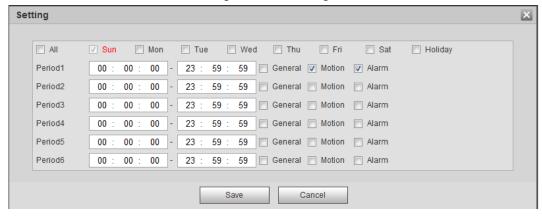

2) Select a day in a week and configure its time period.

- There are 6 time periods for each day.
- Select All, and the entered time period would apply to the whole week.
   Sunday is selected by default, and you can select other days as needed.
- 3) Select the snapshot type for the corresponding time period.
- 4) Click Save.

The system returns to the **Snapshot** interface. Each color matches with a certain Snapshot type. Green means General Snapshot, yellow means motion detection Snapshot and red means alarm Snapshot schedule.

Step 3 Click Save to finish configuration.

#### 4.7.1.3 Configuring Holiday Schedule

Select a day as your "holiday" and video recording/snapshots will be enabled at your "holiday."

- To use holiday recording function, you need to configure holiday recording schedule. For detailed operation, see "4.7.1.1 Configuring Video Recording."
- To use holiday snapshot function, you need to configure holiday record/snapshot schedule.
   For detailed operation, see "4.7.1.2 Configuring Snapshot."

Step 1 Select Setting > Storage > Schedule > Holiday Schedule.

The **Holiday Schedule** interface is displayed. See Figure 4-77.



Figure 4-77 Holiday schedule

- Step 2 Select from record and snapshot.
- Step 3 Select days you need to set as your "holiday."

Those days with yellow color indicates they were set as holidays.

Step 4 Click Save to finish configuration.

### 4.7.2 Device Storage

## 4.7.2.1 Configuring Storage Path

You can set video recording and snapshot's storage methods according to event types. You can save them in SD card, FTP or NAS.



Local storage is available only on models that support SD card.

Step 1 Select Setting > Storage > Destination > Path.

The **Path** interface is displayed. See Figure 4-78.

Figure 4-78 Path



<u>Step 2</u> Select different storage paths for the recorded videos and snapshots which belong to different event types.

Table 4-41 Path parameters

Parameter	Description
Event type	Select from <b>Scheduled</b> , <b>Motion Detection</b> and <b>Alarm</b> .
Local	Save in the internal SD card.
FTP	Save in the FTP server.
NAS	Save in the NAS (network attached storage).

Step 3 Click **Save** to finish configuration.

#### 4.7.2.2 Configuring Local Storage

The system will display the internal SD card information. You can set it as **Read Only** or **Read & Write**; you can also **Hot Swap** or **Refresh** it.

Select **Setting > Storage > Destination > Local**, and the **Local** interface is displayed. See Figure 4-79.

- Select SD card you need to set and click Read Only. Then the SD card is set to read only.
- Select SD card you need to set and click Read & Write. Then the SD card is set to read& write.
- Select SD card you need to set and click Hot Swap. Then you can pull out the SD card.
- Select SD card you need to set and click Refresh. Then the SD card will be formatted.
   Figure 4-79 Local storage setting




### 4.7.2.3 Configuring FTP Server

You can set FTP server only when FTP is selected as the storage method in **Path**. When the network doesn't work, you can save all the files to the local SD card for emergency.

Step 1 Select Setting > Storage > Destination > FTP.

The **FTP** interface is displayed. See Figure 4-80.

Figure 4-80 FTP settings

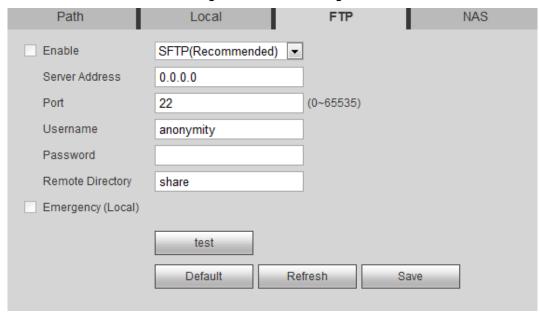

Step 2 Select the **Enable** check box, and then select the service type.



SFTP service is recommended.

Step 3 Configure FTP parameters. See Table 4-42.

Table 4-42 FTP parameter description

Parameters	Description
Server Address	The IP address of the SFTP or FTP server.
Port	The port of the SFTP or FTP server.
User name	The user name to log in the server.
Password	The password to log in the server.
Remote Directory	The destination path in the server.
Emergency (Local)	Select the Emergency (Local) check box, and when the FTP
	server does not work, all the files are saved to the internal SD card.

Step 4 Click **Save** to finish configuration.

Click **Test** to check whether the server has been properly connected.

## 4.7.2.4 Configuring NAS Server

This function can be enabled only when NAS has been selected as destination path. Select **NAS** interface and you can save files in NAS server.

Step 1 Select Setting > Storage > Destination > NAS.

The **NAS** interface is displayed. See Figure 4-81.

Figure 4-81 NAS settings



Step 2 Select the Enable check box.

Step 3 Configure NAS parameters. See Table 4-43 for details.

Table 4-43 NAS parameters

Parameter	Description
Server Address	The IP address of the NAS server.
Remote Directory	The destination path in the NAS server.

Step 4 Click Save to finish configuration.


## 4.7.3 Configuring Record Control Parameters

This chapter introduces configurations including pack duration, pre-event record, disk full, record mode and record stream.

Step 1 Select Setting > Storage > Record Control.

The **Record Control** interface is displayed. See Figure 4-82.

Figure 4-82 Record control settings

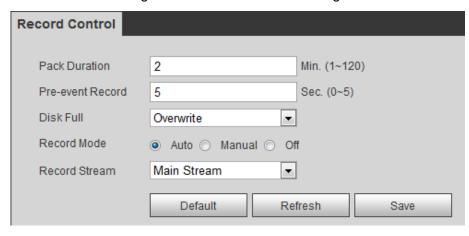

Step 2 Configure record control parameters. See Table 4-44 for details.

Table 4-44 Record control parameter description

Parameters	Description
Pack Duration	The duration of each file pack.
Pre-event Record	The time period for which the system records video before alarm, if
	the value is 5, then the system records video for 5 seconds before
	alarm starts and save it.
	If the Record Mode is Off and the record activity has been linked with
	alarm or motion detection, the system will still save the pre-event
	video.
Disk Full	The recording strategy when the disk is full.
	Stop: The system stops recording when the disk is full.
	Overwrite: The system overwrites the oldest files and keep
	recording when the disk is full.
Record Mode	At the record mode, if you select <b>Manual</b> , the system starts video
	recording; if you select <b>Auto</b> , the system records video as time period
	scheduled; if you select <b>Off</b> , video recording will not start.
Record Stream	Includes main stream and sub stream.

Step 3 Click **Save** to finish configuration.

# 4.8 System Management

## 4.8.1 General Settings


### 4.8.1.1 Configuring General Information

Configure device name, language and video standard.

Step 1 Select Setting > System > General > General.

The **General** interface is displayed. See Figure 4-83.

Figure 4-83 General

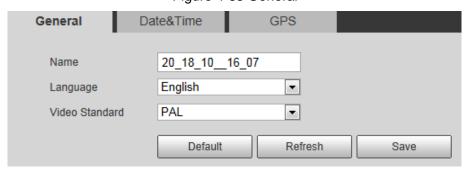

Step 2 Configure general parameters. See Table 4-45.

Table 4-45 General parameter description

Parameter	Description
Device name	The name of the device.
	Each device has different name.
Language	Select system language.
Video Standard	Select video standard from PAL and NTSC.

Step 3 Click **Save** to finish configuration.


## 4.8.1.2 Configuring Date & Time

You can set up Date and Time format, Time zone, Current Time, DST (Daylight Saving Time) or NTP server.

Step 1 Select Setting > System > General > Date & Time.

The **Date & Time** interface is displayed. See Figure 4-84.

Figure 4-84 Date & Time

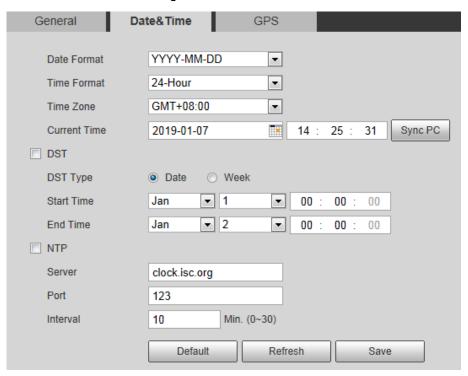

Step 2 Configure Date & Time parameters. See Table 4-46 for details.

Table 4-46 Date & Time parameters

Parameter	Description
Date Format	Date format.
Time Format	Configure the Time format, you can select from 24-Hour or 12-Hour.
Time zone	Configure the Time zone that the device is at.
Current Time	Configure system time.
	Click "Sync PC", and the system time changes to the time on PC.
DST	Enable DST as needed.
	Select the check box to enable daylight saving time. Select "DST", and
	then configure start time and end time of DST with dates or days of the
	week.
NTP	When you need the Device to transmit its time to NTP server, you can
	select the NTP check box to enable it.
Server	IP address or domain name of the NTP server.
Port	Port number of the FTP server.
Interval	Time gap of device's transmission of its current time to NTP server.

Step 3 Click **Save** to finish configuration.

## 4.8.1.3 Configuring GPS

Fill in the camera's GPS information in the web to remind you where your camera locates.


Also, automatically sent to the management platform, the GPS information can be viewed on the platform to help the platform operator track your camera.



This function is supported on select models and the actual interface shall prevail. Step 1 Select Setting > System > General > GPS.

The **GPS** interface is displayed. See Figure 4-85.

Figure 4-85 GPS

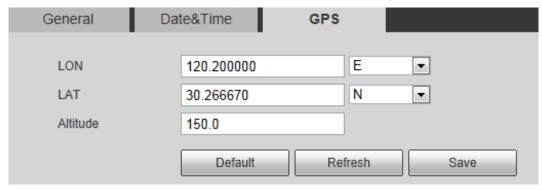

Step 2 Fill in your camera's LON, LAT and Altitude information.

Step 3 Click Save to finish configuration.

## 4.8.2 User Management

Managing users and groups are only available for administrator users.

- The max length of the user or group name is 15 characters which can only be consisted of letters, numbers and underlines.
- The password must have 8 to 32 digits and at the same time have at least two forms (There are four password forms altogether: capital letter, lowercase letter, number and special characters. "", ";", ";", and "&" are not covered in special characters.)

  Administrator users can modify all the uses' password.
- You can have 19 users and 8 groups at most.
- You can manage users through single user or group, duplicate user names or group names are not allowed. A user can be in one group at a time and the group users can own authorities within group authority range.
- Online users cannot modify their own authority.
- There is one admin by default which has highest authority.
- Select "Anonymous login", and then log in with only IP address instead of user name and password. Anonymous users only have preview authorities. During Anonymous login, Click logout, and then you can log in with other username.


## 4.8.2.1 Adding a Group

You have two groups named admin and user by default, you can add new group, delete added group or modify group authority and memo.

Step 1 Select Setting > System > Account > Account > Group Name.

The **Group Name** interface is displayed. See Figure 4-86.


Figure 4-86 User group

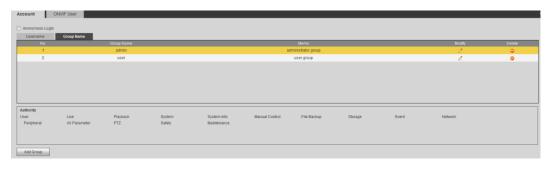

### Step 2 Click Add Group.

The **Add Group** interface is displayed. See Figure 4-87.

Figure 4-87 Add Group

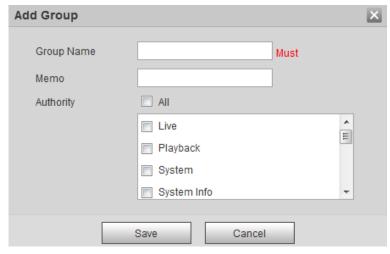

- Step 3 Enter Group name and memo. Then select Group authorities.
- Step 4 Click **Save** to finish configuration.

The newly added group displays in the group name list. See Figure 4-88.



- After adding group, click to modify group memo or authorities; click to
  delete the added group, admin group and user group cannot be deleted.
- Click in the row of admin group or user group to modify group memo.

Figure 4-88 User group added.



## 4.8.2.2 Adding a User

You are admin user by default, and you can add user, delete added users or modify their password.

### Step 1 Select Setting > System > Account > Account.

The **Account** interface is displayed. See Figure 4-89. Figure 4-89 User settings



#### Step 2 Click Add User.

The **Add User** interface is displayed. See Figure 4-90. Figure 4-90 Add user



Step 3 Configure parameters. See Table 4-47.

Table 4-47 User parameter description

Parameter	Description
Username	User's unique identification You cannot use existing user name.
Password	Enter password and confirm it.
Confirm Password	The two items must be the same.
Group name	The group that users belong to. Each group has different authorities.
Memo	Describes the user.
Authority	Select authorities as needed.  It is recommended to give less authority to normal users than
	premium users.

Step 4 Click **Save** to finish configuration.

The newly added users are displayed in the user list.

- After adding user, click to modify password, group, memo or authorities;
   click to delete the added user, admin user cannot be deleted.
- Click in the admin row to modify user name and email address.

### 4.8.2.3 Modifying User Password

For data security, it's strongly recommended that you change the default password of the Device and modify it regularly. Also, it's recommended that you adopt a complicated and strong password.

<u>Step 1</u> Select **Setting > System > Account > Account > Username**.


The **Username** interface is displayed. See Figure 4-91.

Figure 4-91 Username




Step 2 Click

The **Modify User** interface is displayed. See Figure 4-92. Figure 4-92 Modify user (1)

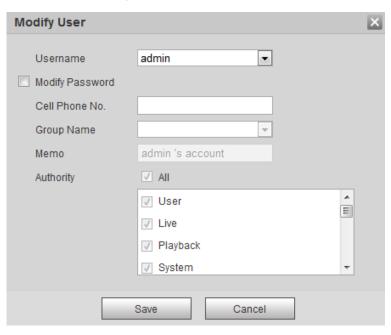

Step 3 Select the Modify Password check box.More settings are displayed. See Figure 4-93.

Figure 4-93 Modify user (2)

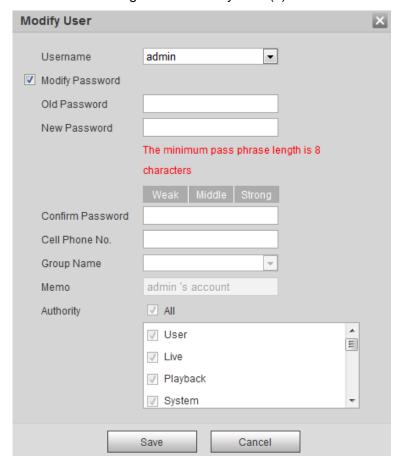

Step 4 Type old password. Type new password and confirm it.



The password must have 8 to 32 digits and at the same time have at least two of the four types: capital letter, lowercase letter, number and special characters.

Step 5 Click Save to finish password modification.

## 4.8.3 Adding ONVIF User

Step 1 Select Setting > System > Account > ONVIF User.

The ONVIF User interface is displayed. See Figure 4-94.


Figure 4-94 ONVIF user



Step 2 Click Add User.

The Add User interface is displayed. See Figure 4-95.

Figure 4-95 Add user

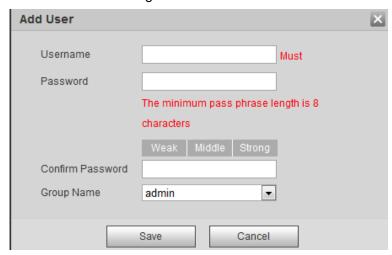

Step 3 Enter username, password and confirm the password. Then, select group name.

Step 4 Click Save to finish configuration.

## 4.8.4 Safety Management

Set RTSP authentication, IP filter, system service and HTTPS to secure data transmission and prevent data leakage.

### 4.8.4.1 Configuring RTSP Authentication

RTSP (Real Time Streaming Protocol) is to secure transmission of streaming media.

Step 1 Select Setting > System > Security > RTSP Authentication.

The RTSP Authentication interface is displayed. See Figure 4-96.

Figure 4-96 RTSP authentication



Step 2 Select an authentication mode.

Step 3 Click Save.

## 4.8.4.2 Configuring IP Filter

To secure the network environment and protect your data, you can use IP filter to set who can and who cannot access your device.

- White list: Only users whose IP/MAC are on the white list can access your device.
- Black list: Only users whose IP/MAC are on the black list cannot access your device.
- Only when IP addresses of both your device and your PC are located in the same LAN, can MAC verification takes effect.



- When accessing through WAN, you can only use MAC of your router to limit MAC verification.
- You cannot enable white list and black list at the same time.
- You cannot add your device IP/MAC to the white list.

### Step 1 Select Setting > System > Safety > IP Filter.

The **IP Filter** interface is displayed. See Figure 4-97.

Figure 4-97 IP filter



### Step 2 Select the check box of **Enable**.

- Add an IP/Mac address to the white list.
- 1) Click the Trusted Sites tab.

The **Trusted Sites** interface is displayed.

2) Click Add IP/MAC.

The dialogue box of **Add IP/MAC** is displayed.

3) Set IP/MAC address. See Table 4-48.

Table 4-48 IP/MAC address parameters description (trusted sites)

Parameter	Description
IP address	IP address you are going to authorize.
IP segment	Start address and end address of the IP segment.
MAC address	MAC address you are going to authorize.

- 4) Click Save.
- Add an IP/Mac address to the black list.
- Click the Banned List tab.

The Banned List interface is displayed.

2) Click Add IP/MAC.

The dialogue box of Add IP/MAC is displayed.

3) Set IP/MAC address. See Table 4-49.

Table 4-49 IP/MAC address parameters description (banned list)

Parameter	Description
IP address	IP address you are going to prohibit.
IP segment	Start address and end address of the IP segment.
MAC address	MAC address you are going to prohibit.

4) Click Save.

Step 3 Click Save to finish configuration.


## 4.8.4.3 Configuring System Service

You can set functions such as SSH, password reset, CGI service, Onvif service, genetec service, audio and video transmission encryption and mobile push.

### Step 1 Select Setting > System > Safety > System Service.

The **System Service** interface is displayed. See Figure 4-98.

Figure 4-98 System service

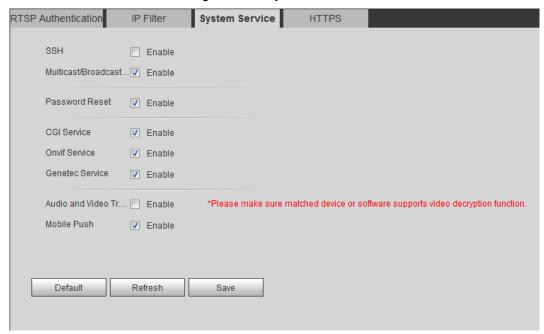

Step 2 Enable functions on the **System Service** interface. See Table 4-50.

Table 4-50 System service parameters description

Parameter	Description
SSH	Disabled by default.
	SSH (Secure Shell) can encode your data for its transmission. By this
	way, data leakage can be prevented when you manage your device
	remotely.
	Enabled by default.
Password Reset	
1 assword reset	If you choose to disable this function, then you can only restore hardware
	to reset password.
	Enabled by default.
CGI Service	Enable CGI(Common Gateway Interface)and then you can use your
	browser to get data from the server.
	Enabled by default.
Onvif Service	Enable Onvif service to connect your device to network video products
	(front ends of both vidicons and video recorders, and video recorders
	included) by other manufacturers.
Genetec Service	Enabled by default.
	Disabled by default.
Audio and Video	If you enable this function, ensure the matching devices or software
Transmission	can decode audio and video you have encoded.
Encryption	Transmission of audio and video between your device and the
	third-party platform cannot be encoded. So, for data security, we
	recommend you to disable CGI service and Onvif service.

Parameter	Description
Mobile Push	Enabled by default. Snapshots under alarm condition can be delivered to
	your phone.

Step 3 Click Save.

### 4.8.4.4 Configuring HTTPS

With HTTPS, you can install customized certificates or signed certificates. You can also obtain and install a root certificate.


After installing customized certificates or signed certificates to your device, you need to install a root certificate to your PC. By this, your PC will log in the Device normally through HTTPS and guarantee your data security.

### 4.8.4.4.1 Creating and Installing Customized Certificates

### Step 1 Select **Setup > Network > HTTPS**.

The **HTTPS** interface is displayed. See Figure 4-99.

Figure 4-99 HTTPS

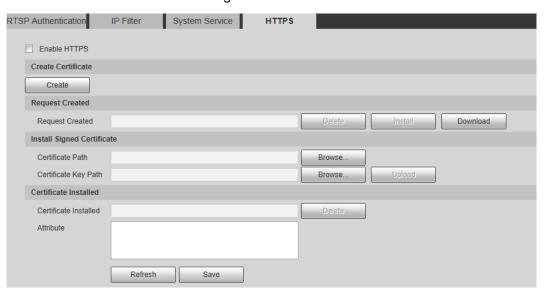


Step 2 Create a certificate.

### 1) Click Create.

The dialog box of HTTPS is displayed. See Figure 4-100.

Figure 4-100 Certificate creating

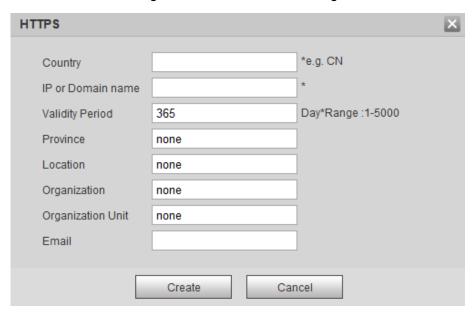

2) Configure HTTPS parameters. See Table 4-51.

Table 4-51 Parameters description

Parameter	Description
Country	Abbreviation of a country. Limited to 2 capital letters.
IP or Domain Name	IP address or domain name of your device
Validity period	Validity period of the certificate.
Province	Province where you use this certificate.
Location	Location where you use this certificate.
Organization	Organization that uses this certificate.
Organization Unit	Name of organization unit that uses this certificate.
Email	Email of a person or a company who uses this certificate.

3) Click Create.

Requests created will be displayed.

Step 3 Click Install to start installation. After that, certificate property will be displayed in the Certificate Installed bar of the HTTPS interface.




Click **Delete** near the **Certificate Installed** bar of the **HTTPS** interface to delete an installed certificate.

- Step 4 Click **Save** to store the root certificate.
- Step 5 Install the root certificate.
  - 1) Double-click RootCert.cer you have saved.

The dialog box of **Certificate** is displayed. See Figure 4-101.

Figure 4-101 Certificate

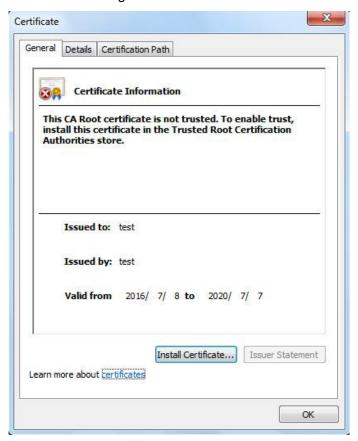

### 2) Click Install Certificate.


The **Certificate Import Wizard** interface is displayed. See Figure 4-102. Figure 4-102 Certificate import wizard



#### 3) Click Next.

The certificate store selection interface is displayed.


Figure 4-103 Certificate store

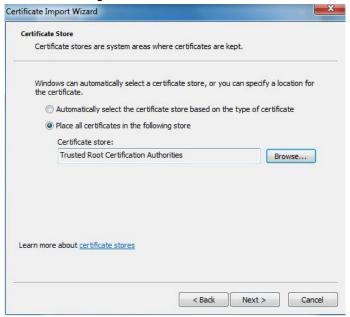

- 4) Select "Place all certificates in the following store." Click **Browse** and set the "Trusted Root Certification Authorities" as certificate store.
- 5) Click Next.

The certificate import completing wizard is displayed. See Figure 4-104.

Figure 4-104 Certificate import wizard completing

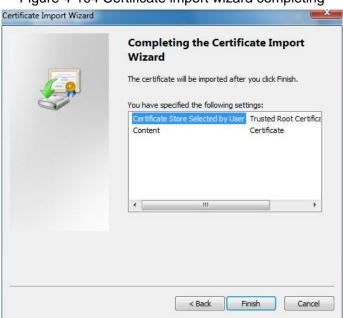

6) Click Finish.

The security warning interface is displayed. See Figure 4-105.

Figure 4-105 Security warning



#### 7) Click Yes.

The system pops up a messaged that indicates the import was successful. See Click **OK** to finish certificate importing.

Figure 4-106 Successful import prompt



8) Click **OK** to finish installation of root certificate.

<u>Step 6</u> Enable HTTPS and a prompt that the Device needs to be rebooted is displayed.

After your device reboots, type IP address of the Device in your browser and access the Device through HTTPS protocol.


#### 4.8.4.4.2 Installing Signed Certificate

Get a signed certificate and its password from the digital signature institute. And import the certificate and its password to the Device.

Step 1 Select **Setting > Network > HTTPS**.

The **HTTPS** interface is displayed. See Figure 4-107.

Figure 4-107 HTTPS

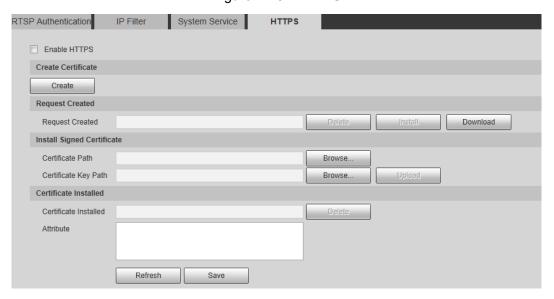

- Step 2 Install a certificate that has been signed.
  - 1) Click **Browse** on the right side of **Certificate Path** bar to select a certificate you are to upload.
  - 2) Click **Browse** on the right side of **Certificate Key Path** bar to select the certificate password you are to upload.

### Step 3 Click Upload.


Installation begins. After that, certificate property will be displayed in the **Certificate Installed** bar of the **HTTPS** interface.

Click **Delete** near the **Certificate Installed** bar of the **HTTPS** interface to delete a certificate installed.

- Step 4 Click Save to store the root certificate.
- Step 5 Install the root certificate.
  - 1) Click RootCert. cer you have saved.

The dialog box of **Certificate** is displayed. See Figure 4-108.

Figure 4-108 Certificate

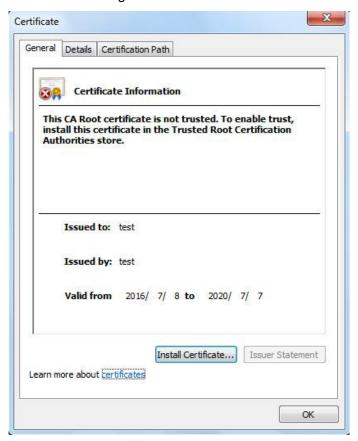

### 2) Click Install Certificate.


The **Certificate Import Wizard** interface is displayed. See Figure 4-109. Figure 4-109 Certificate import wizard



#### 3) Click Next.

The certificate store selection interface is displayed. See Figure 4-110.

Figure 4-110 Certificate store

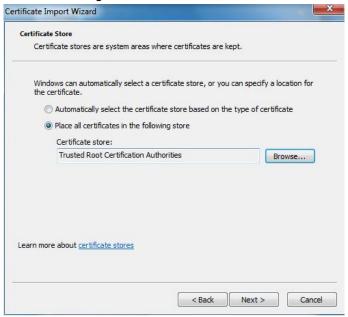

- 4) Select "Place all certificates in the following store." Click **Browse** and set the trusted root certificate authority as certificate store.
- 5) Click Next.

The certificate import completing wizard is displayed. See Figure 4-111.

Figure 4-111 Certificate import wizard completing



6) Click Finish.

The security warning interface is displayed. See Figure 4-112.

Figure 4-112 Security warning



#### 7) Click Yes.

The system pops up a messaged that indicates the import was successful. See Figure 4-113. Click **OK** to finish certificate importing.

Figure 4-113 Successful import prompt



- 8) Click **OK** to finish installation of root certificate.
- Step 6 Enable HTTPS and a prompt that the Device needs to be rebooted is displayed.

  After your device reboots, type IP address of the Device in your browser and access the Device through HTTPS protocol.

## **5.1 Maintenance Requirements**

For the system's good and safe running, it's recommended to manage and maintain the system, backup files with the following methods.

- Check surveillance images regularly.
- Clear regularly user and user group information that are not frequently used.
- Modify your password every 3 months.
- Check your system logbook regularly. Handle problems as soon as possible.
- Backup your configuration of system regularly.
- Regularly check your files and delete the old ones.
- Upgrade firmware regularly.

### 5.2 Auto Maintenance


You can configure settings such as "time of when to self-reboot" "rebooting device manually" and "deleting files automatically."

## 5.2.1 Rebooting Device

Step 1 Select Setting > System > Auto Maintain.

The **Auto Maintain** interface is displayed. See Figure 5-1.

Figure 5-1 Auto maintain

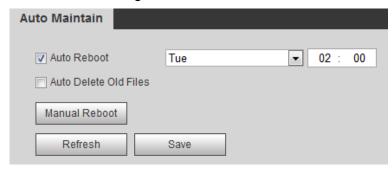

### Step 2 Reboot this Device.

- Auto reboot: Select Auto Reboot and set a reboot time you need. Then click Save.
- Manual reboot: Click Manual Reboot and a dialogue box is displayed. Click OK in this dialogue box and your Device is rebooted at once.


## 5.2.2 Deleting Old Files

You can enable this function to delete recorded videos or images saved in SD card, FTP or NAS server regularly according to the time gap you have set.

Step 1 Select Setting > System > Auto Maintain.

The **Auto Maintain** interface is displayed. See Figure 5-2.

Figure 5-2 Auto maintain

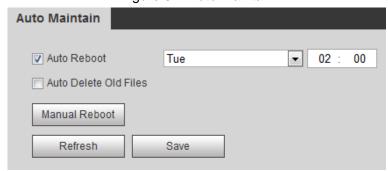

<u>Step 2</u> Enable **Auto Delete Old Files** and select on your own the time gap of deleting the old files. Ranges from 1 to 31 day(s).

Step 3 Click **OK** to finish configuration.

## 5.3 Backing Up and Restoring

## 5.3.1 Importing and Exporting



Files that are exported do not contain presets. To import and export presets, see "3.2.1.4 Configuring Preset Backup" and "3.2.2.4 Configuring Preset Backup."

Step 1 Select Setting > System > Import/Export.

The Import/Export interface is displayed. See Figure 5-3.

Figure 5-3 Import/Export



Step 2 Import/Export files.

- Click Export and paths of backing up files are displayed.
- Click **Import** to import files that you have exported and backed up.

## 5.3.2 Default Settings



Be careful when implementing operations such as "restored to default" and "restored to factory default". The operations will result in data loss.

Step 1 Select Setting > System > Default.

The **Default** interface is displayed. See Figure 5-4.

Figure 5-4 Default setting



Step 2 Restore the Device to default setting.

- Click **Default**, and all the configurations except IP Address and Account are reset.
- Click Factory Default, and all the configurations are reset.

## 5.4 Upgrading Firmware




- If a wrong upgrade file has been used, please reboot the device, otherwise some functions might not work properly.
- When upgrading, do not cut off power/network, reboot or turn off the Device.

Step 1 Select Setting > System > Upgrade.

The **Upgrade** interface is displayed. See Figure 5-5.

Figure 5-5 Upgrade

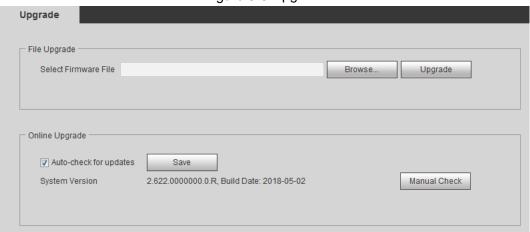

Step 2 Select an upgrading method you need and upgrade the system.

- File Upgrade
- 1) Click **Browse**, and upload upgrade file.

The upgrade file should be a .bin file.

- 2) Click **Upgrade** to start the process.
- Online Upgrade



Only when this thermal camera and your computer are both connected to network, can online upgrading be implemented.

Detect your system version.

- Auto detection: Select Auto-check for updates and click Save. The version is detected automatically.
- Manual detection: Select Manual Check and the system begins to check the version information.

## 5.5 Version Information

View device hardware information, system version and web version.



Versions of different devices might vary, and the actual product shall prevail.

Select **Setting > Information > Version**, and the **Version** interface is displayed. See Figure 5-6.

Figure 5-6 Version



## 5.6 System Log

## 5.6.1 Searching System Logs

The log type includes "all, system, setting, data, event, record, account and safety." Step 1 Select **Setting > Information > Log**.

The **Log** interface is displayed. See Figure 5-7.

Figure 5-7 Log



Step 2 Set start time and end time, and then select log type.

Table 5-1 Parameter description of system log

Parameters	Description
Start Time End Time	Select a time period which you want to search.
	The earliest start time is January 1, 2000, and the latest end time is
	December 31, 2037.

Parameters	Description
Туре	The log type includes "all, system, setting, data, event, record, account
	and safety."
	All: All log information.
	System: Includes program launch, force exit, exit, program reboot,
	device turn off/reboot, system reboot and system upgrade.
	Setting: Includes save configuration and delete configuration file.
	Data: Includes configure disk type, erase data, hot swap, FTP state,
	NAS state, record mode, SD card error and hard disk error.
	Event (Records events such as video detection, smart plan, alarm
	and abnormality): Includes event start and event end.
	Record: Includes file access, file access error and file search.
	User Management: Includes log in, log out, add user, delete user,
	modify user, add group, delete group and modify group.
	Safety: Includes password reset and IP filter.

Step 3 Click Search.

The needed logs are displayed. See Figure 5-8.

- Click a log, and then you can view the detailed information in **Detailed** Information area.
- Click Backup, and then you can back up all the found logs to your PC.



Figure 5-8 Log information

## 5.6.2 Remote View

Enable this function to remotely check logs in your device.

Step 1 Select **Setting > Information > Log**.

Log

Port

The Remote Log interface is displayed. See Figure 5-9.

**Remote Log** Enable IP Address 192 168 0 108 514  $(1\sim65534)$ Device Number 22 (0~23)

Refresh

Figure 5-9 Remote Log

Default

Step 2 Select the Enable check box.

Save

Step 3 Set IP Address, Port and Device Number. Then click Save.



You need to type remote computer's IP address here.

## 5.7 Online User

View all the current Web users.

Select **Setting > Information > Online User**, and the **Online User** interface is displayed. See Figure 5-10.

Figure 5-10 Online user



# **Additional Accessing Methods**

## 6.1 Accessing through NVR

Connect this camera to NVR (Network Video Recorder) through Wi-Fi or Ethernet. Then you can set and manage this camera through the NVR's web client.

### Preparation


- Your PC, NVR and your thermal camera are all connected to network.
- You have enabled platform accessing function.
- You have logged in the NVR's web client.

### **Procedure**

### <u>Step 1</u> Select **Setting > Camera > Registration**.

The **Remote Log** interface is displayed. See Figure 6-1.

Figure 6-1 Registration

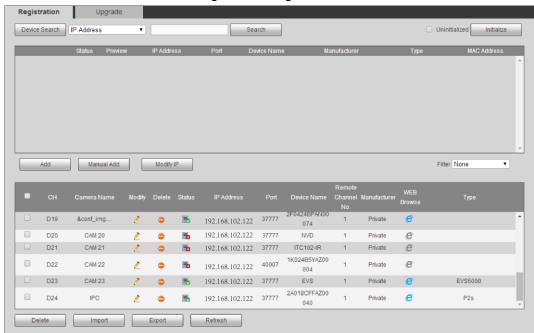

### Step 2 Click Search.

After the search, the system displays devices that have been searched.

Step 3 Select devices whose IP address needs to be modified and click **Add**.

The following list will display information of tunnel with devices. When you log in the device successfully, the connection condition displays



Web client of NVR recognizes by default that username and password for logging in the Device are both "admin." If you have modified your password, add your device manually.

## 6.2 Accessing through SmartPSS

You can set up and manage this thermal camera through SmartPSS client.

### Preparation


- You PC (with SmartPSS installed) and your thermal camera have been both connected to network.
- You have installed and opened SmartPSS.

### **Procedure**

Step 1 Click **Devices** in the homepage.

The **Devices** interface is displayed. See Figure 6-2.

Figure 6-2 Device list

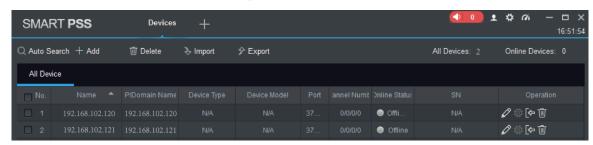

<u>Step 2</u> Type the network segment the Device is in, and then click **Search**.

After the search, the system displays devices that have been searched.

Step 3 Select devices whose IP address needs to be modified and click Add.

The following list will display devices that have been added. When you log in the device successfully, the connection condition displays **Online**.



It's set by default that username and password for logging in the client side of SmartPSS are both "admin." If you have modified the password or device port, please add device manually.